

REPLACEMENT PARTS MANUAL

BLOWER COIL HEATER PACKAGE

MODEL: EH5BA

Manual 2110-153

Revision B

Date 5-17-95

Supersedes 5-01-91

\*\*\*\*\*  
\* GENERAL NOTES \*  
\*\*\*\*\*

\*Revised and/or additional pages may be issued from time to time.  
\*A complete and current manual consists of pages dated as shown in the following index.

\*\*\*\*\*  
\*\* INDEX \*\*  
\*\*\*\*\*

<u>Page</u>	<u>Description</u>	<u>Page</u>	<u>Date</u>	<u>Supersedes</u>
	Functional Components--Exploded View	1	3-15-91	
"	" --Usage List	2	5-17-95	5-01-91


\*\*\*\*\*  
\*\*\* IMPORTANT \*\*\*  
\*\*\*\*\*

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

BARD MANUFACTURING COMPANY

BRYAN, OHIO 43506

FUNCTIONAL PARTS

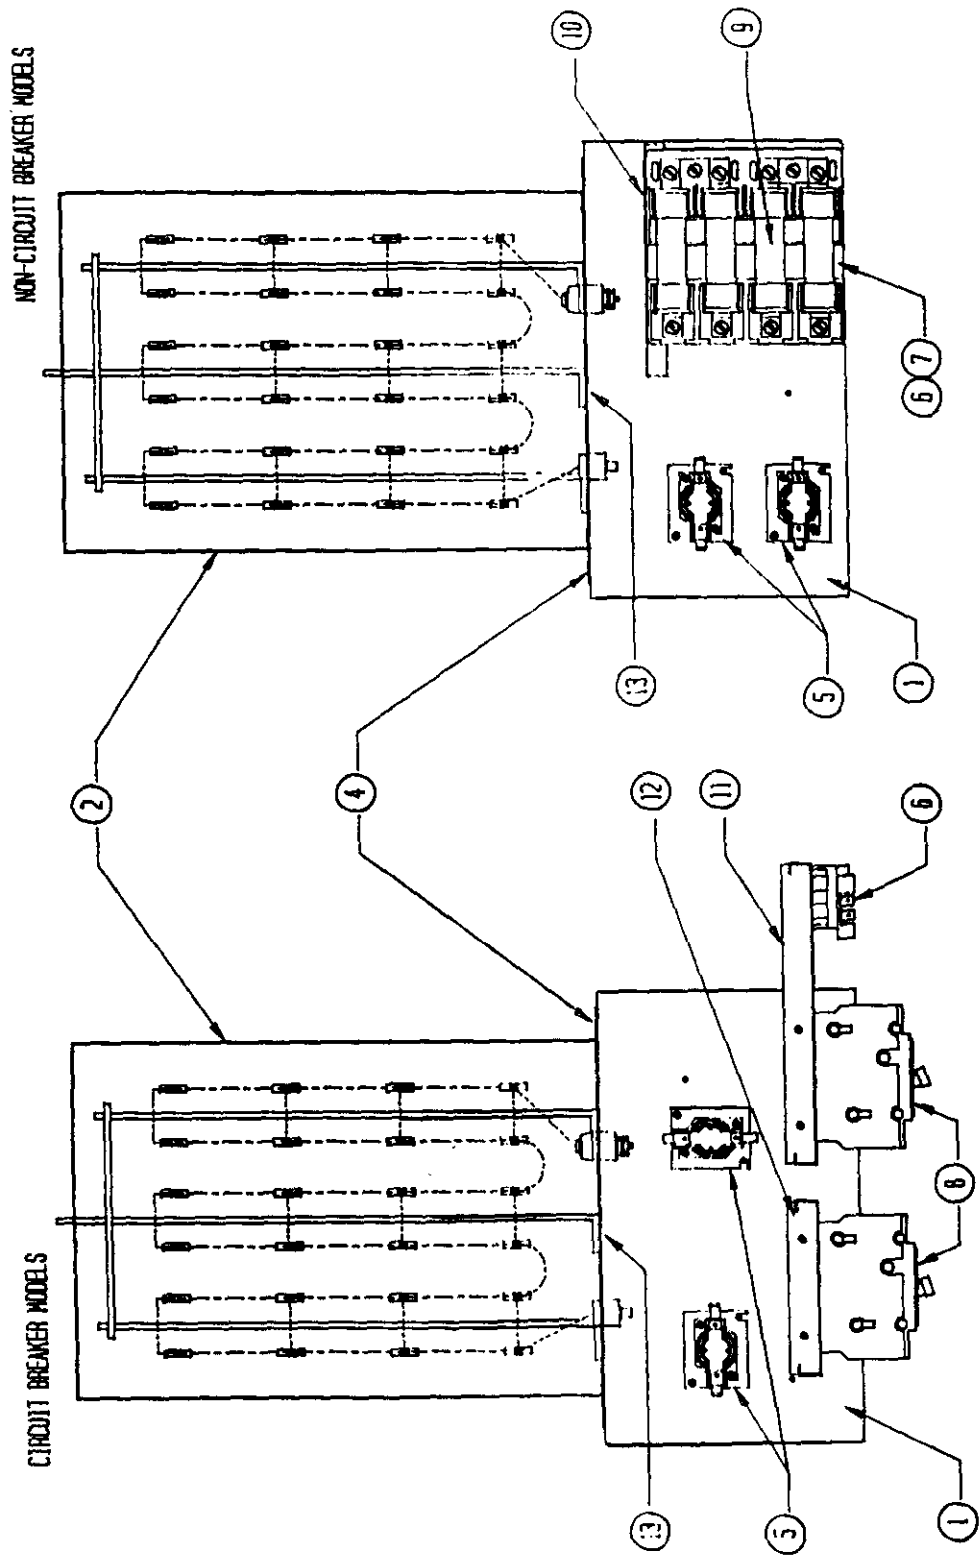

NOTE: 18 Kw HEATER PACKAGES ARE SHOWN. LOWER Kw PACKAGES WILL HAVE FEWER PARTS.

Date: 3-15-91  
Supersedes:

FUNCTIONAL PARTS

Dwg. No.	Part No.	Description	E	E	E	E	E	E	E	E
			H	H	H	H	H	H	H	H
			5	5	5	5	5	5	5	5
			B	B	B	B	B	B	B	B
			A	A	A	A	A	A	A	A
			A	A	A	A	A	B	B	B
			0	1	1	0	1	1	0	1
			9	4	8	9	4	8	9	8
			N	N	N	C	C	C	N	N
1	126-182	Heater Package Base	x	x	x	x	x	x	x	x
2	134-113	Heater Package Wrapper	x	x	x	x	x	x	x	x
4	8604-092	4.5KW Heat Strip 240V		1			1			
4	8604-093	9KW Heat Strip 240V	1	1	2	1	1	2		
4	8604-094	9KW Heat Strip 240V 3 PH							1	2
4	136-142	Fill Plate	x			x			x	
5	8201-057	Time Delay Relay H30-75 C1-40		1			1			
5	8201-058	Time Delay Relay H1-30 C45-75	1	1	1	1	1	1	1	1
5	8201-059	Time Delay Relay H30-75 C1-40			1			1		1
6	8607-013	Terminal Block	x				x	x		
6	8607-014	Terminal Block							x	x
7	8614-017	Fuse Block		1						
7	8614-018	Fuse Block			1					
8	8615-013	Circuit Breaker 30A (Note A)					1			
8	8615-015	Circuit Breaker 50A (Note A)					1	2		
8	8615-016	Circuit Breaker 60A (Note A)				1				
8	8615-037	Circuit Breaker 30A (Note B)					1			
8	8615-040	Circuit Breaker 50A (Note B)					1	2		
8	8615-041	Circuit Breaker 60A (Note B)				1				
9	8614-006	Fuse 30A		2						
9	8614-005	Fuse 50A		2	4					
10	134-105	Fusing Barrier		x	x		x	x		
11	112-213	Circuit Breaker Mounting Plate					x	x		
12	112-214	Circuit Breaker Mounting Plate				x	x	x		
13	8402-062	Limit Control L165-3.5	2	3	4	2	3	4		
13	8402-063	Limit Control L160-3.5							1	2
	136-325	Fill Plate (Note B)				1	2	2		
	4090-120	Wiring Diagram	x							
	4090-121	Wiring Diagram				x				
	4090-130	Wiring Diagram		x						
	4090-131	Wiring Diagram					x			
	4090-140	Wiring Diagram			x					
	4090-141	Wiring Diagram						x		
	4090-210	Wiring Diagram							x	
	4090-220	Wiring Diagram								x

NOTE A: For units produced prior to date code E95.  
 NOTE B: For units produced with date code E95 and after.

Date: 5-17-95  
 Supersedes: 5-01-91