Replacement **Parts Manual**

Package Air Conditioners

Models:

P1142A3 P1148A1-B P1060A1

P1148A1 P1148A1-C

P1060A1-B

P1060A1-C

General Notes

- > Revised and/or additional pages may be issued from time to time.
- > A complete and current manual consists of pages shown in the following contents section.

Important

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.

Contents

Description	Pa	ıge
Cabinet Components	Exploded View Usage List	
Functional Components	Exploded View	4 5
Control Panel Layout	Exploded View Usage Lists	8




Manual: Supersedes: 2110-213 File:

2110-213A Tab 10

Date:


10-04-99

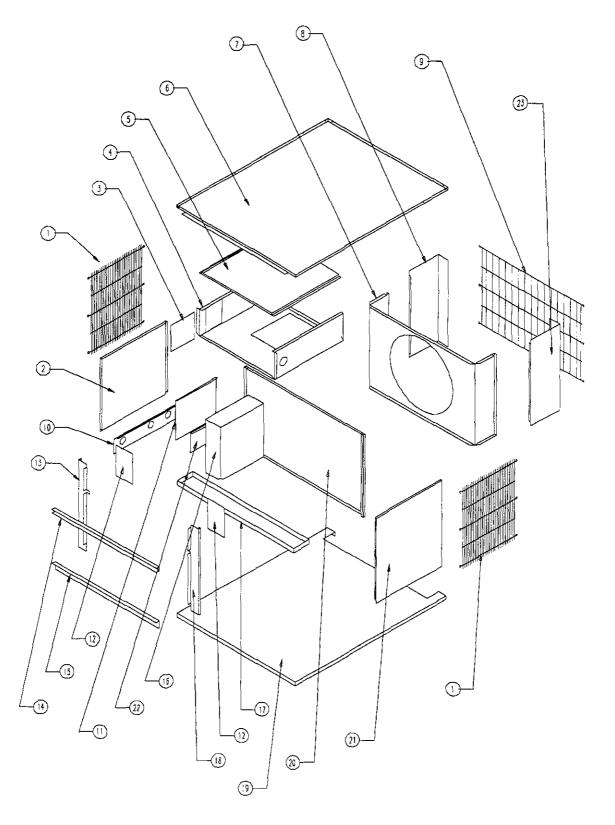

SEXP-204

CABINET COMPONENTS

Drawing			U S A G E
No	Part No.	Description	E
1	7051-007	Inlet Grille	2
2	501-272-X	Left Side	X
3	142-045	Cover Plate - OKW	
4	520-240	Blower Partion	X
5	134-134	Heat Strip Shield	X
6	507-146-X	Тор	X
7	125-027-X	Fan Shroud	X
8	149-079-X	Left Rear Corner	
9	7051-005	Condenser Grille	T X T
10	557-026-X	Entrance Panel	X
11	133-035-X	Control Panel Cover	X
12	136-246	Blower Fill Plates	2
13	549-077-X	Left Front Cover	X
14	165-502-X	Pienum Channel	T X
15	105-525-X	Plenum Angle	X
16	Control Panel Assembly	See Control Panel Drawing and	
		Parts List	
17	123-084-X	Drain Pan	X
18	549-076-X	Right Front Cover	X
19	527-221	Base	X
20	521-239-X	Compressor Partition	X
21	501-271-X	Right Side	X
22	142-044	Entrance Cover	X
23	149-078-X	Right Rear Corner	X

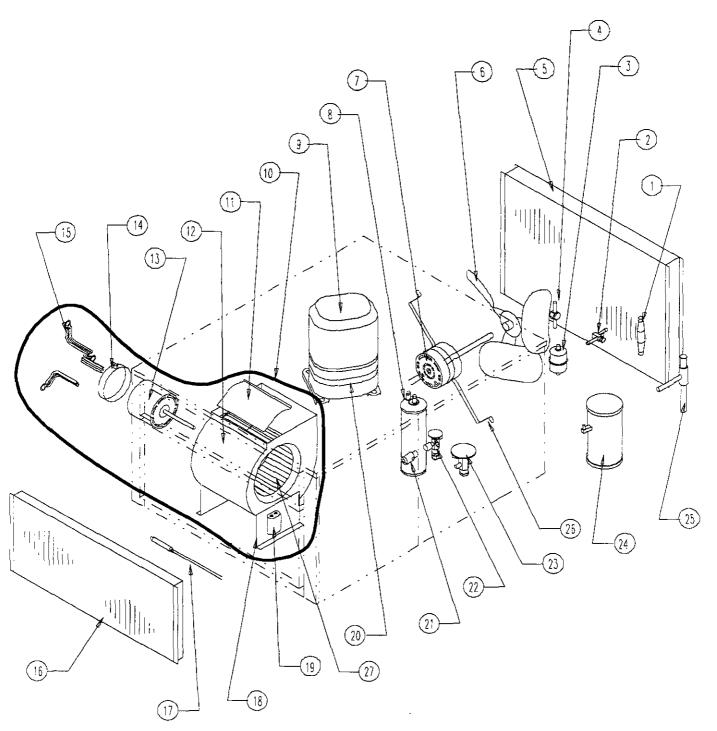

SEXP-200

This Exploded View references Tables on pages 4 and 5

Manual: 2110-213

Page: 3

			A3	.A1	P1148A1-B	P1148A1-C)A1	P1060A1-B	P1060A1-C
Drawing			P1142A3	P1148A1	148	148	P1060A1	090	090
No	Part No.	Description	Ξ	E	ᄑ	5	5	7	7
1	5651-016	PDV	l			Γ		<u> </u>	
1	5651-107	PDV							
2	5651-051	Shut Off Valve							
3	5201-002	Filter/Drier							
4	5201-014	Sight Glass							
5	5051-083	Condenser Coil		Х	Х	Х			
5	5051-074	Condenser Coil					Х	Х	X
5	5051-078	Condenser Coil	Х						
6	5151-027	Fan Blade	X	Х	Х	X	Х	Х	Х
7	8105-039	Motor	Х	Х	Х		Χ	Х	
7	8105-030	Motor				Х			Х
8	5202-018	Accumulator							
9	8000-153	Compressor					Х		
9	8000-154	Compressor					ŀ	Х	
9	8000-155	Compressor							X
9	8000-176	Compressor	Х				j	<u> </u>	
9	8000-149	Compressor		Х					
9	8000-156	Compressor			Х				
9	8000-157	Compressor		1		x			
10	900-0190=	Complete Blower Assembly		X	X	<u> </u>	Х	Х	
10	900-0191	Complete Blower Assembly	х	\ \tag{ \} \tag{ \tag} \} \tag{ \ta}	``		^	`	
10	900-0192	Complete Blower Assembly				x	ŀ	[x
11	114-130	Diffuser	X	X	X	X	Х	Х	X
12	151-097	Blower Housing	X	X	X	X	X	X	X
13	8106-031	Motor	X	X	X		X	X	
13	8106-032	Motor		^`		X	^	``	x
14	8200-033	Motor Mount Band	Х	Х	Х	X	Х	Х	X
15	8200-034	Motor Mount Arms	3	3	3	3	3	3	3
16 5060-0716		Evaporator	X	X	X	X	-	<u> </u>	- ٔ
16	5060-071	Evaporator (serial no. prior to L95)	``	^	^	^`	Х	х	x
16	5060-082	Evaporator (serial no. beginning L95)					X	x	x
17	800-0215	Capillary Tube Assembly		Х	X	X	^		
17	800-0216	Capillary Tube Assembly (s/n prior to L95)		`	^`	^	х	х	x
17	800-0222	Capillary Tube Assembly	х				^	ĺ ()	^
17	800-0223	Capillary Tube Assembly (s/n beginning L95)	^`				Х	Х	x
18	104-795	Blower Angles	Х	X	X	Х	X	X	X
19	8552-005	Capacitor 5/370	X	X	X	X	X	X	X
20	8605-012	Crankcase Heater	<u> </u>	 ^`	 ^ -	 ^`			_^
21	5651-109	Distributor		<u> </u>	<u> </u>				
21	5651-108	Distributor							
22	5651-101	TXV	-	 	 	<u> </u>			
22	5651-082	TXV							
23	5651-064	Hot Gas Bypass Valve			 -	-			
24	5203-006	Receiver			 				
25	5651-015	Head Pressure Control	 -	 	 		-	 	
26	8200-004	Motor Mount	Х	Х	X	Х	X	X	X
27	5152-049	Blower Wheel		x	- -	÷	X	X	L ^
27	5152-049 5152-071	Blower Wheel	х	^	^	^	^	_ ^	^
<u> </u>	J102-0/1	DIOMAI MILIAGE	^	l	Ц	L		L	


This Table references Exploded View on page 3

FUNCTIONAL COMPONENTS

			P1148A1-A/H	P1148A1-B/H	P1148A1-C/H	P1060A1-A/H	P1060A1-B/H	P1060A1-C/H
D			48₽	18A	48⊅	909	909	909
Drawing No	Part No.	Description	Ě	È	Ţ	10	ě	Ō
110	5651-016	PDV	T X	ΙX	I X	<u> </u>	_ _	-
1	5651-107	PDV	^	^	^	Х	x	x
2	5651-051	Shut Off Valve	X	X	X	X	X	$\frac{1}{x}$
3	5201-002	Filter/Drier	$\frac{\hat{x}}{x}$	 x	x	X	X	$\frac{\hat{x}}{x}$
4	5201-014	Sight Glass	$\frac{1}{x}$	X	X	X	X	$\frac{\hat{x}}{x}$
5	5051-083	Condenser Coil	$\frac{\hat{x}}{x}$	X	X	_ ^		-^ -
5	5051-074	Condenser Coil	^	^	^	Х	х	x
6	5151-027	Fan Blade	X	X	Х	X	X	$\frac{\hat{x}}{x}$
7	8105-039	Motor	$\frac{\hat{x}}{x}$	l x	 ^ 	X	X	$\vdash \vdash$
7	8105-030	Motor	^	^	х		`	x
8	5202-018	Accumulator	Х	X	X	Х	Х	$\frac{\hat{x}}{x}$
9	8000-153	Compressor		- ^		X		- `
9	8000-154	Compressor					х	l 1
9	8000-155	Compressor	ļ				^	_x
9	8000-149	Compressor	l x					^
9	8000-156	Compressor	^	X				1
9	8000-157	Compressor		^	Ιx			1 1
10	900-0190	Complete Blower Assembly	X	X		Х	Х	
10	900-0192	Complete Blower Assembly	^	^`	x		^`	x
11	114-130	Diffuser	X	X	X	Х	X	$\frac{\hat{x}}{x}$
12	151-097	Blower Housing	$\frac{1}{x}$	Î	X	X	$\frac{\hat{x}}{x}$	$\frac{x}{x}$
13	8106-031	Motor	$\frac{x}{x}$	X	 ``	X	X	 -
13	8106-032	Motor	'`	``	x	**		x
14	8200-033	Motor Mount Band	X	X	X	X	X	X
15	8200-034	Motor Mount Arms	3	3	3	3	3	3
16	5060-071	Evaporator	X	X	X		<u> </u>	T I
16	5060-071	Evaporator (serial no. prior to L95)		'		Х	х	x
16	5060-082	Evaporator (serial no. beginning L95)			[X	Х	x
18	104-795	Blower Angles	X	X	Х	X	X	Х
19	8552-005	Capacitor 5/370	X	X	Х	Х	X	Х
20	8605-012	Crankcase Heater	X	X	Х	Х	X	X
21	5651-109	Distributor	X	X	X	· · · · · · ·		
21	5651-108	Distributor				Х	Х	x
22	5651-101	TXV	X	X	Х			
22	5651-082	TXV				Х	Х	\
23	5651-064	Hot Gas Bypass Valve	X	X	X	X	X	X
24	5203-006	Receiver	X	X	Х	X	X	X
25	5651-015	Head Pressure Control	X	Х	Х	Х	X	X
26	8200-004	Motor Mount	X	X	X	X	X	X
27	5152-049	Blower Wheel	X	X	X	Х	X	X

This Table references Exploded View on page 3

This page has been left blank intentionally.

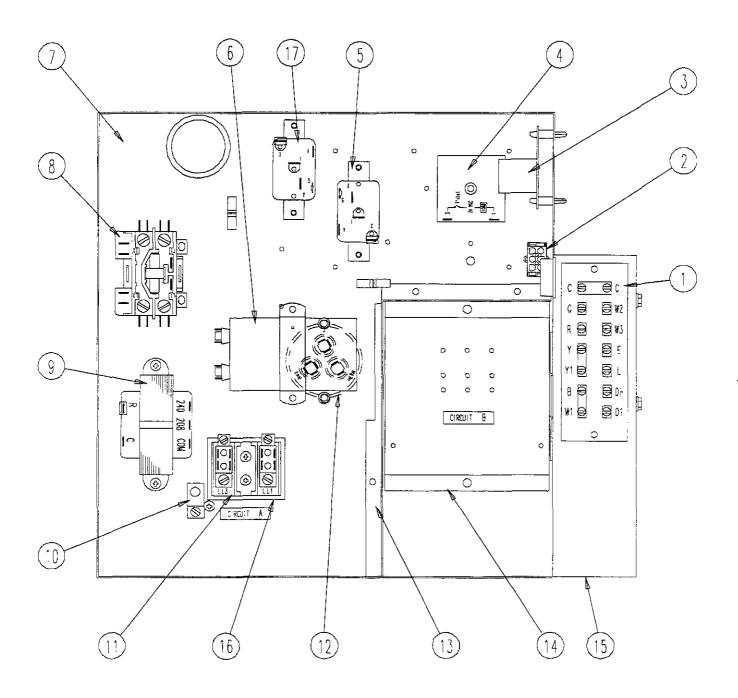

SEXP-203

This Exploded View references Tables on pages 8 and 9

			P1142A3	P1148A1	P1148A1-B	P1148A1-C	P1060A1	P1060A1-B	P1060A1-C
Drawing No	Part No.	Description	P.	<u></u>	Ξ	7	<u> </u>	Ē	Ξ
1	8607-018	Terminal Strip	l X	Х	X	Х	Х	Х	Х
2	9000-988	Wire Assembly	X	X	X	X	X	X	X
3	8201-056	Solid State Blower Control	X	X	X		X	X	
3	8201-032	Blower Relay	'	'`		х		''	x
4	8201-050	Time Delay Relay	Х	Х	X	X	Х	Х	X
5	8201-034	Impedance Relay	X	X	X	X	Х	Х	X
6	8552-005	Capacitor 10-370			X	Х		X	X
7	516-147	Control Panel	X	Х	X	Х	Х	X	X
8	8401-016	Contactor		Х			Χ		
8	8401-002	Contactor			Х	Х		Х	1×1
8	8401-007	Contactor	X			1			
9	8407-034	Transformer	X	X	Х		Х	Х	
9	8407-042	Tansformer	İ			Х			x
10	8611-006	Ground Terminal	X	X	Х	Х	X	Х	Х
11	8607-013	Terminal Block	X	Х			Χ		İ
11	8607-014	Terminal Block		ļ	x	Х		Х	x
12	8552-059	Capacitor 60/10-370		Х					
12	8552-058	Capacitor 80/10-370				ĺ	Χ		
12	8552-056	Capacitor 55/10-440	X						
13	116-149	Control Panel Partition	X	Х	Х	Х	X	Х	X
14	116-150	Terminal Block Support	X	Х	X	Х	Χ	Х	X
15	116-148	Low Voltage Box	X	Χ	Х	X	Χ	Х	Х
16	8607-015	Phenolic Insulator				Χ			X
17	8201-009	Blower Relay							
NS	4064-116	Wiring Diagram	:	Х			Χ		
NS	4064-213	Wiring Diagram			X			Х	
NS	4064-314	Wiring Diagram				X			X
NS	4064-118	Wiring Diagram	X						
NS	4064-117	Wiring Diagram							
NS	4064-214	Wiring Diagram							
NS	4064-315	Wiring Diagram				<u> </u>			

NS Not Shown

This Table references Exploded View on page 7

CONTROL PANEL COMPONENTS

			P1148A1-A/H	P1148A1-B/H	P1148A1-C/H	P1060A1-A/H	P1060A1-B/H	P1060A1-C/H
Drawing			4	14	14	90	90	90
No	Part No.	Description	2	7	7	<u> </u>	ᄑ	Ξ
1	8607-018	Terminal Strip	X	X	Х	X	Х	Х
2	9000-988	Wire Assembly	X	X	Х	Х	Х	Х
3	8201-056	Solid State Blower Control	Х	X		Х	Х	
3	8201-032	Blower Relay			Х		Х	L
4	8201-050	Time Delay Relay	X	X	Χ	Χ	Χ	X
5	8201-034	Impedance Relay	X	X	Х	X	Х	Х
6	8552-005	Capacitor 10-370		X	Х		X	X
7	516-147	Control Panel	Х	X	Χ	Χ	Χ	Х
8	8401-016	Contactor	X			Х		
8	8401-002	Contactor		L X	Х		X	X
9	8407-034	Transformer	X	X		Х	Х	
9	8407-042	Tansformer			Χ			X
10	8611-006	Ground Terminal	X	X	Х	X	X	Х
11	8607-013	Terminal Block	X			Х		
11	8607-014	Terminal Block	Į	l x	Х		X	X
12	8552-059	Capacitor 60/10-370	X	T				
12	8552-058	Capacitor 80/10-370	<u>_</u>			Х		
13	116-149	Control Panel Partition	X	Х	Х	Х	Х	Х
14	116-150	Terminal Block Support	X	X	Χ	Χ	Х	Х
15	116-148	Low Voltage Box	X	X	Х	Х	Х	X
16	8607-015	Phenolic Insulator			Χ		Х	
17	8201-009	Blower Relay	_X	X	X	Χ	Х	
NS	4064-117	Wiring Diagram	Х			Χ		
NS	4064-214	Wiring Diagram		X			X	
NS	4064-315	Wiring Diagram		1	X			X

NS Not Shown

This Table references Exploded View on page 7

Manual: 2110-213

Page: 9