

REPLACEMENT PARTS MANUAL

PACKAGED AIR CONDITIONER AND HEAT PUMP HEATER PACKAGES

MODEL: EH3PB

Manual 2110-306

Revision --

Date 3-07-95

Supersedes

* GENERAL NOTES *

*Revised and/or additional pages may be issued from time to time.
*A complete and current manual consists of pages dated as shown in the following index.

** INDEX **

<u>Page Description</u>	<u>Page</u>	<u>Date</u>	<u>Supersedes</u>
Functional Components--A series--Layout	1	3-08-95	
" " --Usage List	2	3-08-95	
Functional Components--B and C series--Layout	3	3-08-95	
" " --Usage List	4	3-08-95	


*** IMPORTANT ***

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

BARD MANUFACTURING COMPANY

BRYAN, OHIO 43506

FUNCTIONAL COMPONENTS

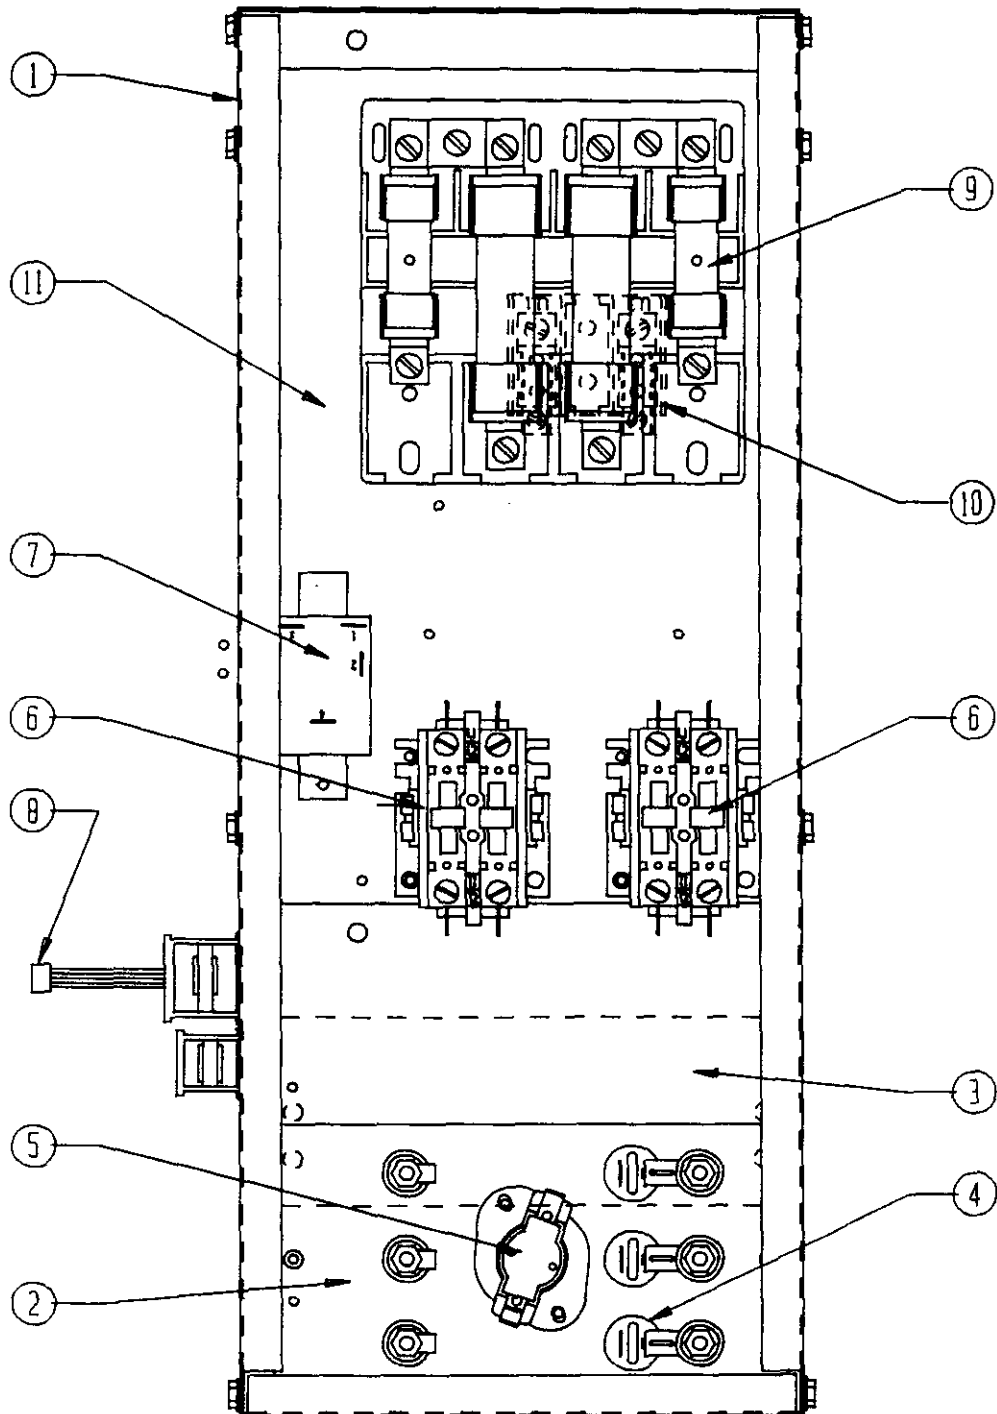


Date: 3-07-95
Supersedes:

FUNCTIONAL COMPONENTS

Dwg. No.	Part No.	Description	E H 3 P B A O 5	E H 3 P B A O 8	E H 3 P B A O 1 0	E H 3 P B A O 5
1	116-175	Heater Box Assembly	x	x	x	x
2	8604-089	Heat Strip 5KW 240V	x			
2	8604-090	Heat Strip 8KW 240V		x		
2	8604-095	Heat Strip 10KW 240V			x	
2	8604-096	Heat Strip 15KW 240V				x
3	136-091	Fill Plate	x	x	x	
3	136-253	Fill Plate				x
4	8402-091	Thermal Cutoff	1	2	2	3
5	8402-049	Limit Control	x	x	x	
5	8402-097	Limit Control				x
6	8401-006	Contactor	x	x	x	2
7	8201-008	Blower Relay	x	x	x	x
8	3000-1026	Wire Assembly	x	x	x	x
9	8614-017	Fuse Block				x
10	8607-013	Terminal Block	x	x	x	
11	116-176	Heater Box Plate	x	x	x	x
	132-131	Control Panel Cover (not shown)	x	x	x	
	132-132	Control Panel Cover (not shown)				x
	133-133	Fuse Cover (Not Shown)				x
THE FOLLOWING PARTS CONTAINED IN THE PLASTIC BAG						
	8607-013	Terminal Block	x	x	x	x
	8611-006	Ground Terminal	x	x	x	x
	4067-111	Wiring Diagram	x			
	4067-122	Wiring Diagram		x	x	
	4067-131	Wiring Diagram				x

Date: 3-07-95
Supersedes:

FUNCTIONAL COMPONENTS

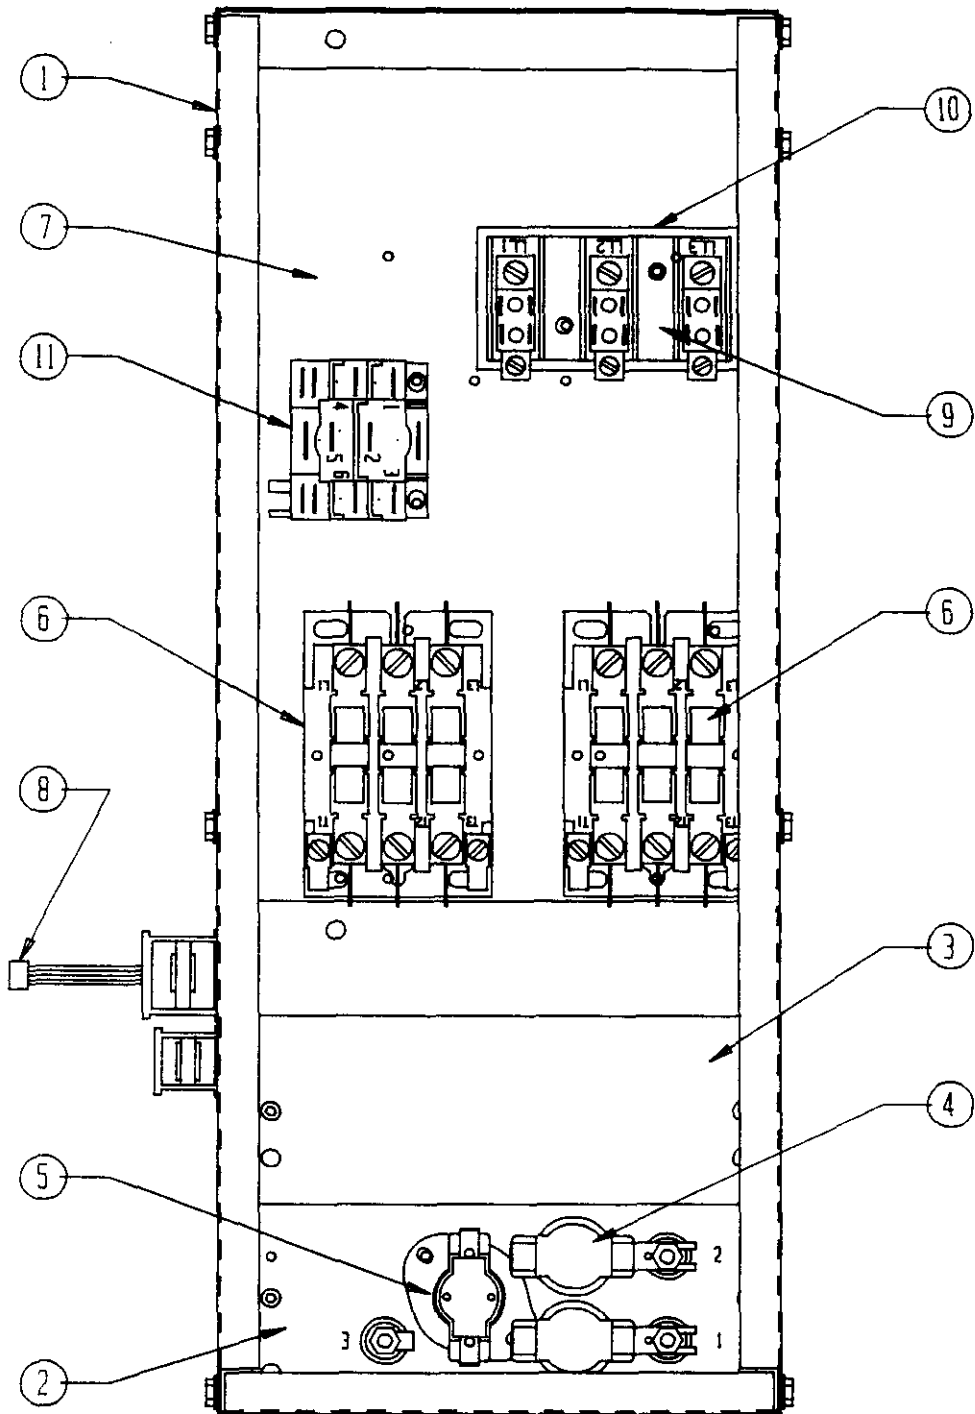

Date: 3-07-95
Supersedes:

FUNCTIONAL COMPONENTS

Dwg. No.	Part No.	Description	E H 3 P B B O 9	E H 3 P B B 1 5	E H 3 P B C O 9	E H 3 P B C 1 5
1	116-175	Heater Box Assembly	x	x	x	x
2	8604-048	Heat Strip 9KW 240V	x	x		
2	8604-049	Heat Strip 6KW 240V		x		
2	8604-101	Heat Strip 9KW 480V			x	
2	8604-100	Heat Strip 6KW 480V				
3	136-091	Fill Plate	x		x	
4	8402-091	Thermal Cutoff	2	4		
4	8402-095	Thermal Cutoff			2	4
5	8402-097	Limit Control		x		x
5	8402-049	Limit Control	x		x	
6	8401-006	Contactor	x	2		
6	8401-002	Contactor			x	2
7	116-176	Heater Box Plate	x	x	x	x
8	3000-1026	Wire Assembly	x	x	x	x
9	8607-014	Terminal Block	x	x	x	x
10	8607-015	Phenolic Insulator			x	x
11	8201-008	Blower Relay	x	x		
11	8201-032	Blower Relay			x	x
	132-131	Control Panel Cover (not shown)	x	x	x	x
THE FOLLOWING PARTS CONTAINED IN THE PLASTIC BAG						
	8607-014	Terminal Block	x	x	x	x
	8611-006	Ground Terminal	x	x	x	x
	8607-015	Phenolic Insulator			x	x
	4067-211	Wiring Diagram	x			
	4067-221	Wiring Diagram		x		
	4067-311	Wiring Diagram			x	
	4067-321	Wiring Diagram				x

Date: 3-07-95
Supersedes:

