### REPLACEMENT PARTS MANUAL

# PACKAGE AIR CONDITIONER MODEL 20WA4

Manual 2110-401

Revision A Date 1-25-90

Supersedes 7-11-89

\*\*\*\*\*\* \* GENERAL NOTES \* \*\*\*\*\*\*

#### \*\*\*\*\* \*\* INDEX \*\* \*\*\*\*\*\*

Page Description	<u>Page</u>	<u>Date</u>	Supersedes
Cabinet ComponentsExploded ViewUsage List	1	7-1 1-89	
"Usage List	2	1-25-90	7-11-89
Functional ComponentsExploded View	3	7-l l- <b>89</b>	
" Usage List	4	7-11-89	
Control PanelLayout View	5	7-l 1-89	
"Usage Lf st	6	7-11-89	
Blower AssemblyExploded View	7	7-11-89	
"Usage List	8	7-11-89	

\*\*\*\*\*\* \*\*\* IMPORTANT \*\*\* \*\*\*\*\*\*


Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

**BARDMANUFACTURINGCOMPANY** 

BRYAN, OHIO 43506

<sup>\*</sup>Revised and/or additional pages may be issued from time to time.

<sup>\*</sup>A complete and current manual consists of pages dated as shown in the following index.

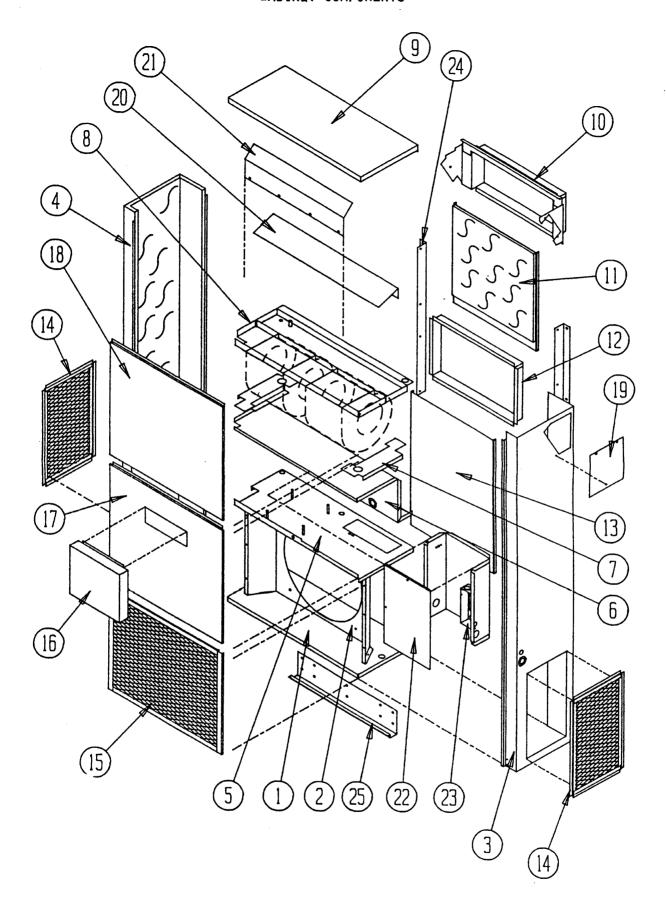


Date: 7-11-89

Supersedes:

#### CABINET COMPONENTS

Item No.	Part No.	Description	U S A G E
1	126-001	Lower Base	T <sub>X</sub>
2	124-001	Fan Shroud	X
3	501-162	Right Side Assembly	X
4	501-163	Left Side Assembly	X
5	127-103	Compressor Base	X
6	520-096	Compressor Partition	X
7	130-001	Filter Support	X
8	121-089	Water Pan Assembly	T X
9	506-094	Тор	<del>     </del>
10	111-015	Supply Air Frame	X
11	508-054	Upper Back	<del>     </del>
12	111-016	Inlet Air Frame	<del>     </del>
13	108-055	Lower Back	<u>x</u>
14	119-002	Side Condenser Grille	ж .
15	119-001	Front Condenser Grille	X
16	962001	Fresh Air Damper	X
17	552-106	Service Door	X
18	514-045	Upper Front	X
19	542-001	Side Cover Plate	X
20	136-112	Evaporator Bottom Support Fill	X
21	134-004	Air Baffle	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
22	Control	See Control Panel Assembly Drawing and Parts List	T X
	Panel Cvr	<u> </u>	X
23	Control	See Control Panel Assembly Drawing and Parts List	X
	Panel Asy		X
24	112-002	Side Mounting Bracket	Х
25	112-001	Bottom Support Bracket	X

Date: 1-25-90 Supersedes: 7-11-89

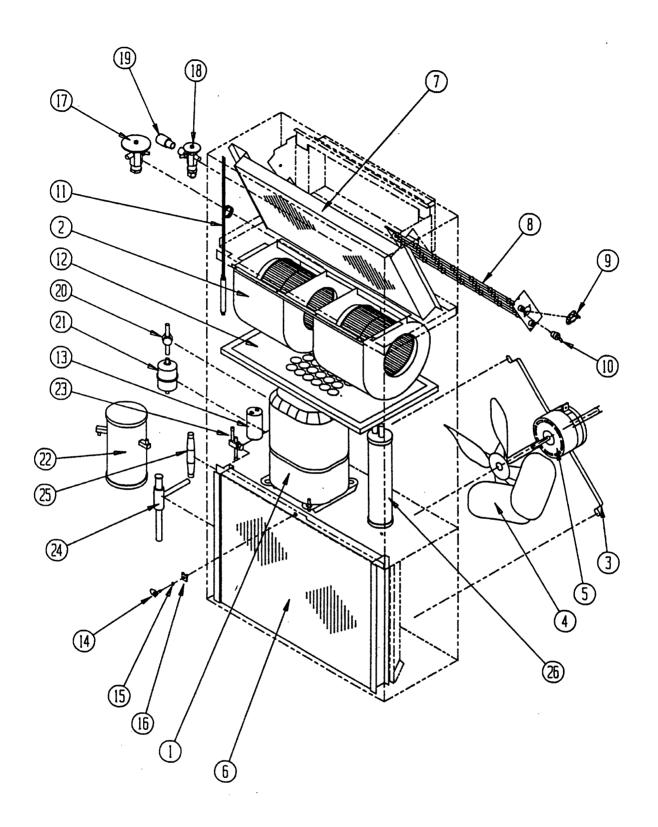


Date: 7-11-89 Supersedes:

## FUNCTIONAL COMPONENTS

ī	1										
			2	2	2	2	2	2	2	2	2
İ			0	0	0	0	0	0	0	0	0
1			W	W	W	W	W	W	W	₩	W
Dwg.	Part No.		A	A	A	A	A	A	A	A	A
No.	rart No.	Description	4	4	4	4	4	4	4	4	4
MO.									11		
		·	A	À	À	À	À	À	Á	À	Ď
	1		0	0	0	1	0	0	0	1	1
	}		0	5	8	0	0	5	8	0	0
+	0000 010		N	N	N	N	C	C	C	C	N
1	8000-019	Compressor									Х
1	8000-102	Compressor H23B173ABCA	X	Х	Х	X	X	Х	х	х	
2	900-038	Blower Assembly (Complete)	X	X	Х	X	Х	X	X	X	Х
3	8200-023	Fan Motor Mount	X	Х	Х	Х	Х	Х	Х	Х	Х
4	5151-033	Fan Blade F10H8.7	Х	X	Х	Х	Х	Х	Х	Х	Х
5	8103-016	Condenser Motor	X	Х	Х	Х	Х	Х	Х	Х	Х
6	5051-036	Condenser Coil	X	X	Х	Х	Х	Х	Х	Х	Х
7	5060-048	Byaporator Coil	X	Х	Х	Х	Х	Х	Х	Х	x
8	8604-042	Heat Strip 5KW		Х				Х			<u> </u>
8	8604-043	Heat Strip 8KW			х				x		
8	8604-044	Heat Strip 10KW				x				Х	
8	8604-091	Heat Strip 10KW	İ			•				A	х
9	8402-048	Limit Switch 160 Degree		Х	Х	Х		Х	Х	Х	Х
10	8402-030	Thermal Cutoff		1	2	2		1	2	2	2
11	800-0084	Capillary Assembly	Х	Х	X	X	х	X	X	X	<del></del>
12	7004-006	Filter 14x25	Х	Х	X	X	X	X	Х	×	X
13	8552-027	Capacitor 25/370	X	X	X	X	X	Ŷ	X	X	<del>^</del>
13	8552-044	Capacitor 15/10-370	••	"	^	^	^	^	^	٨	
14	1171-019	1/4 Turn Fastener	Х	X	X	Х	X	Ж	х	х	X
15	1171-021	Retainer Clip	X	X	X	X	X	x	X	_	<del></del>
16	1171-020	Fastener Receptacle	X	X	X	X	X		_	X	X
						^	X	Х	X	X	Х

Date: 7-11-89 Supersedes:

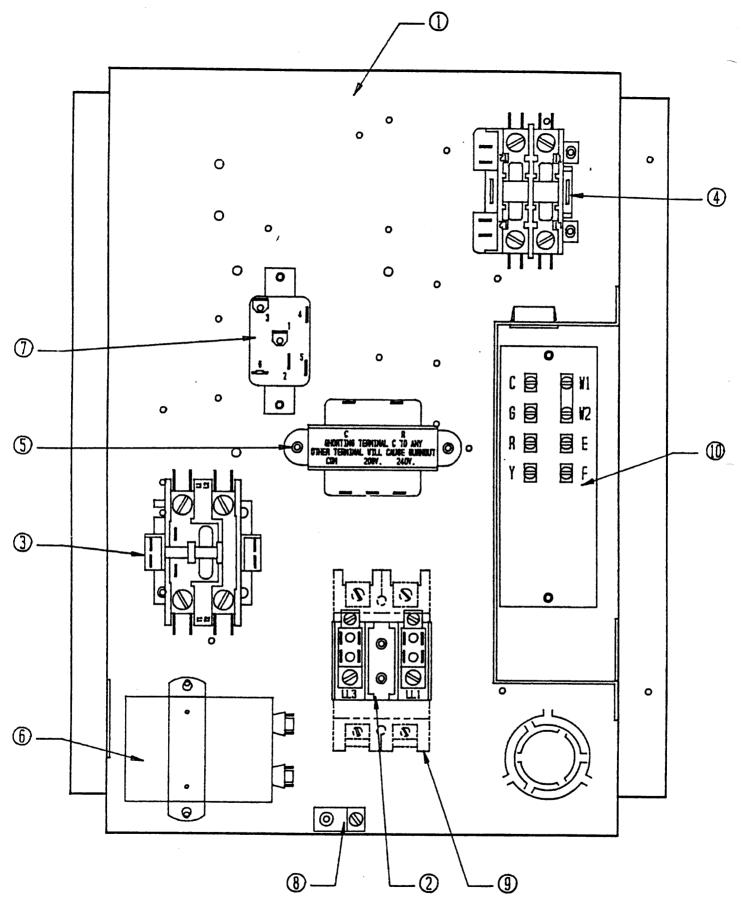

Date: 7-11-89


Supersedes:

#### CONTROL PANEL

Dwg. Part No. Description   A A A A A A A A A A A A A A A A A A	A 1 0	A 4 1 D 1 O N
4007-110 Wiring Diagram 4007-120 Wiring Diagram 4007-130 Wiring Diagram 4007-111 Wiring Diagram 4007-121 Wiring Diagram 4007-131 Wiring Diagram 4007-430 Wiring Diagram		x
1 902-0249 Complete Control Panel Assembly 1 902-0252 Complete Control Panel Assembly 1 902-0256 Complete Control Panel Assembly 1 902-0251 Complete Control Panel Assembly 1 902-0254 Complete Control Panel Assembly 1 902-0257 Complete Control Panel Assembly 1 902-0258 Complete Control Panel Assembly	X	x
2 8607-013 Terminal Block 230V x x x	+	х
3 8401-007 ContactorComp. 25A	х	х
4 8401-006 ContactorHeater 2P18 1 1 1 1 1	1	1
5 8407-034 Transformer 40VA	_	X
6 8552-002 Capacitor 5/370V	7	x
7 8201-009 RelayBlower	Х	х
8 8611-006 Ground Luq	Х	X
9 8615-010 Circuit Breaker	1"	
9   8615-012   Circuit Breaker		
9 8615-013 Circuit Breaker		
9 8615-016 Circuit Breaker	x	
10 8607-018 Terminal Board 24V	X	х
132-001   Control Panel Cover	х	X

Date: 7-11-89

Supersedes:

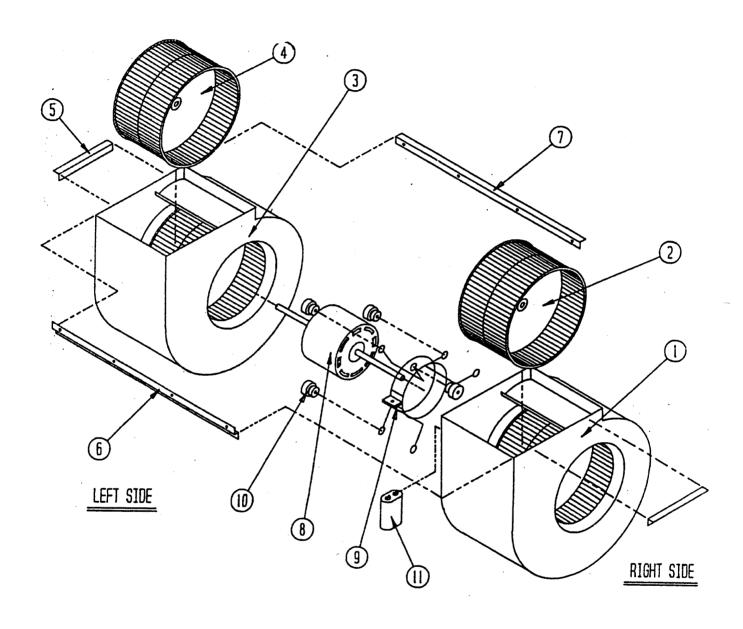

Date: 7-11-89

Supersedes:

#### BLOWER ASSEMBLY

Dwg.	Part No.	Description	900-038
1	5152-051	Blower Housing And Wheel Assembly	Х
2	5152-028	Blower Wheel	X
3	5152-052	Blower Housing And Wheel Assembly	X
4	5152-029	Blower Wheel	X
5	104-001	Angle	X
6	102-300	Offset	X
7	104-505	Angle Back Brace	X
8	8102-009	Blower Motor	X
9	8200-031	Blower Motor Mount	X
10	5451-011	Gronnet	X
11	8552-004	Capacitor 7.5/370V	X

Date: 7-11-89
Supersedes: