Replacement **Parts Manual**

Wall Mounted Package Air Conditioner

Model: WA121

General Notes

- Revised and/or additional pages may be issued from time to time.
- > A complete and current manual consists of pages shown in the following contents section.

Important

> Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.

Contents

Description

Booonplion		1 49
Cabinet Components	Exploded View Usage List	
Functional Components	Exploded View Usage List	3 4
Control Panel	Exploded View Usage List	
Blower Assembly	Exploded View Usage List	



BARD MANUFACTURING COMPANY Bryan, Ohio 43506

Since 1914...Moving ahead, just as planned.

Manual:

2110-412 Rev. G


Supersedes: Rev. F

File:

2150-004, Tab 16

Date:

04-18-97

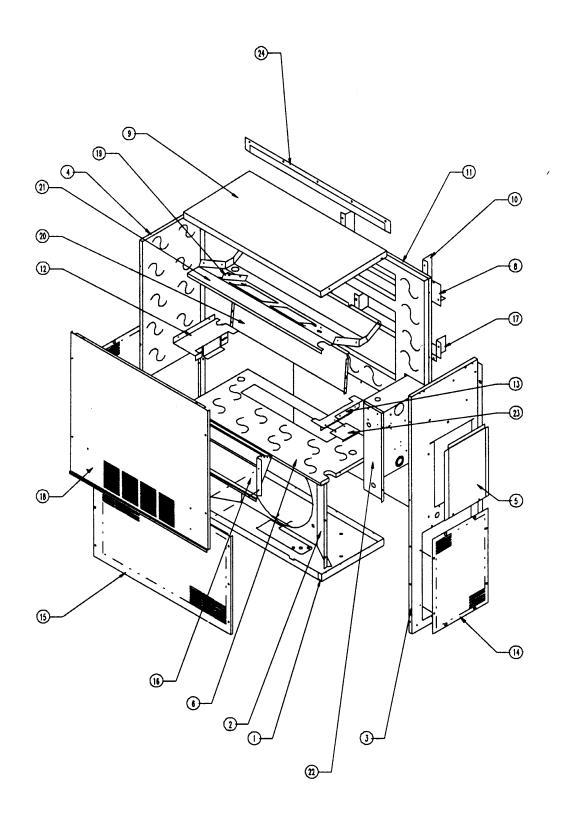

SEXP-190


Page: 1 Manual: 2110-412

Cabinet Components

Drawing No.	Part No.	Description	WA121-A	WA121-K	WA121-G	
1	S126-223	Lower Base	Х	Х	X	
2	124-025	Fan Shroud	Х	Х	Х	
3	S500-285-* ①	Right Side	Х	X	Х	
4	S500-275-* ①	Left Side	Х	Х	Х	
5	S133-120-* ①	Control Panel Cover (Outer)	Х	Х	Х	
6	S520-243	Condenser Partition	Х	Х	Х	
8	111-037	Top Return Air Frame Angle	Х	Х	Х	
9	S506-148-* ①	Тор	Х	Х	Х	
10	111-036	Outlet Airframe Angle	Х	Х	х	
11	S508-102	Back	Х	X	Х	
12	113-197	Left Filter Bracket	X	Х	Х	
13	113-198	Right Filter Bracket	Х	Х	Х	
14	118-035-* ①	Side Grille	2	2	2	
15	119-036-* ①	Condenser Grille	Х	Х	Х	
16	962031	Fresh Air Damper Assembly	Х	Х	Х	
17	111-038	Bottom Return Air Fram Angle	Х	X	Х	
18	S514-085-* ①	Upper Front	Х	Х	Х	
19	113-176	Heater Bracket	Х	Х	Х	
20	121-245	Return Partition	Х	Х	Х	
21	S123-244	Drain Pan	Х	Х	Х	
22	Control P Assembly	See Control Panel Assembly Drawing and Parts List	Х	Х	Х	
23	135-138	Fill Plate	Х	Х	Х	
24	113-178 - * ①	Top Rain Flashing	Х	Х	Х	

À NOTE: Exterior cabinet parts are manufactured with various paint color options. To insure that you receive the proper paint color, you must include the complete model and serial number of the unit for which cabinet parts are being ordered.

Page: 2 Manual: 2110-412

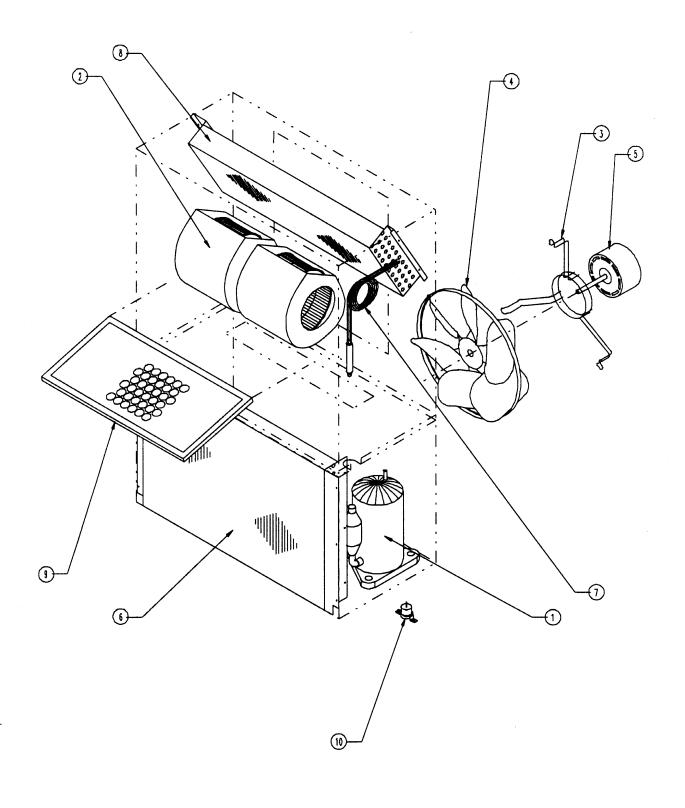

SEXP-191


Page: 3 Manual: 2110-412

Dwg. No.	Part No.	Description	WA121-A	WA121-K	WA121-G	
1	8000-158	Compressor	X			
1	8000-159	Compressor		X		
1	8000-161	Compressor			X	
2	S900-200	Blower Assembly 240V	X		Х	
2	S900-201	Blower Assembly 115V		Х		
3	8200-041	Fan Motor Mount	X	Х	Х	
4	5151-047	Fan Blade	Х	X	Х	
5	8101-007	Condensor Motor 240V	Х		Х	
5	8101-008	Condenser Motor 115V		Х		
6	5051-081	Condensor Coil	Х	Х	Х	
7	800-0221	Cooling Capillary Assembly	Х	Х	Х	
8	5060-074	Evaporator Coil	Х	Χ	Х	
9	7003-021	Air Filter 1" Washable	Х	Χ	Х	
9	7004-001	Air Filter 1" Throw-Away	x	Х	Х	
9	7004-028	Air Filter 2" Pleated ①	X	Х	х	
10	5651-110	Drain Valve	Х	Х	Х	
NS	8406-055	High Pressure Switch (Solder)	X	Х	Х	
NS	8406-061	Low Pressure Switch (Solder) ①	x	Х	Х	
NS	8406-088	Low Ambient Control (Solder) ①	X	Х	Х	
NS	1804-0107	Low Pressure Switch (Flare) ①	Х	Х	Х	
NS	1804-0108	Low Ambient Control (Flare) ① 1804-0251	X	Χ	Х	
NS	8402-085	Compressor Overload			Х	
NS	8402-086	Compressor Overload	X			
NS	8402-087	Compressor Overload		Х		

NS - Not Shown

Page: 4 Manual: 2110-412

①— Optional on these models

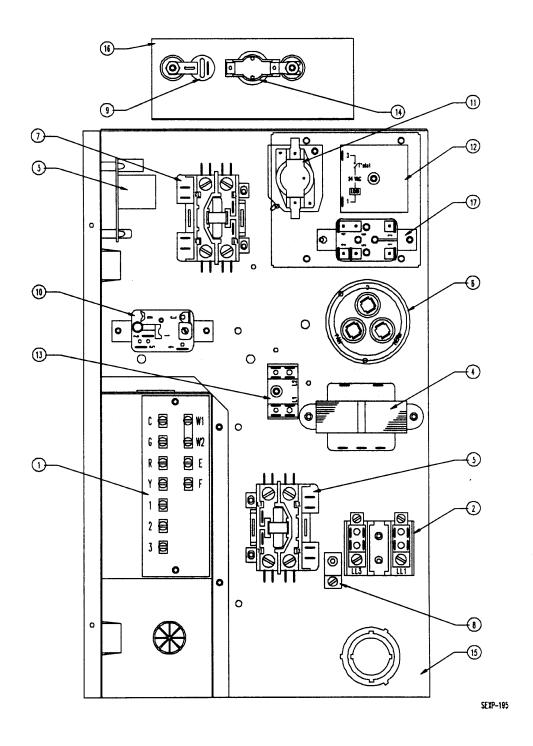

SEXP-195

Page: 5 Manual: 2110-412

			WA121-A00	WA121-A03	WA121-A05	WA121-K00	WA121-K02	WA121-G00	WA121-G03	WA121-G02	
Drawing			/A12	A12	/A12	/A12	A12	/A12	A 12	A12	
No.	Part No.	Description	3	3	- ≥		3	≥	≥	≥	
1	8607-020	Low Voltage Terminal Strip	Х	Х	Х	Х	Х	Х	Х	Х	
2	8607-013	Terminal Block 2 Pole	Х	х	Х	Х	Х	Х	Х	Х	
3	8201-056	Blower Control	Х	Х	Х	Х	Х	X	Х	Х	
4	8407-034	Transformer	X	х	Х			Х	Х	х	İ
4	8407-0 =	Transformer	1			X	Х				ľ
5	8401-0	Compressor Contactor	Х	Х	Х	Х	Х	Х	Х	Х	
6	8552-046	Compressor Capacitor	Х	Х	Х	Х	Х	Х	х	Х	
7	8401-007	Heat Contactor		Х	Х		Х		Х	Х	
8	8611-006	Ground Terminal	Х	Х	Х	Х	Х	Х	Х	Х	
9	8402-091	Thermal Cut Off		Х	X		Х		Х	Х	
10	8201-037	Lockout Relay	Х	Х	Х	Х	Х	Х	Х	Х	
11	8201-065	Low Pressure Bypass (TDR) (Optional)	Х	Х	х	Х	Х	Х	Х	Х	
12	8201-050	Compressor TDR (Optional)	x	х	х	х	х	X	х	х	
12	8201-067	Compressor TDR Adj (Optional)	X	Х	Х	Х	х	Х	х	х	
13	8201-062	Alarm Relay (Optional)	х	х	х	х	х				
13	8607-017	Terminal Block (Optional) (Shown)	х	Х	Х	X	Х				L
14	8402-084	Limit		Х	Х		Х		Х	Х	
15	117-154	Control Panel	Х	Х	Х	Х	Х	Х	Х	Х	
16	8604-097	Heat Strip 3.6KW		Х					Х		
16	8604-098	Heat Strip 5.0KW			X						İ
16	8604-099	Heat Strip 2.2KW					х				ŀ
16	8604-109	Heat Strip 2.0KW								Х	<u></u>
	4095-114	Wiring Diagram		Х	Х				Х	Х	
	4095-115	Wiring Diagram	X					Х			
	4095-116	Wiring Diagram				Х					
	4095-117	Wiring Diagram		<u> </u>			X				L

Page: 6 Manual: 2110-412