Replacement Parts Manual

Wall Mounted Package Air Conditioner

Models: WA482H, WA602H

General Notes

Revised and/or additional pages may be issued from time to time.

A complete and current manual consists of pages shown in the following contents section.


Important

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.

Contents

| Description | | Page |
|----------------------|---------------|------|
| Cabinet Components | | |
| | Exploded View | |
| | Usage List | 2 |
| Functional Component | ts | |
| | Exploded View | 3 |
| | Usage List | |
| Control Panel | | |
| | Exploded View | 5 |
| | Usage List | 6 |
| Blower Assembly | | |
| | Exploded View | 7 |
| | Usage List | |



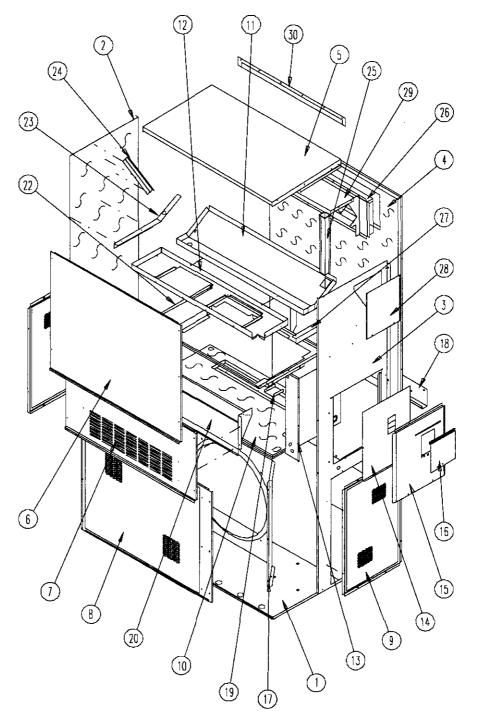


SEXP-175

Page: 1 Manual: 2110-417

| וםrawing No. | Part No. | Description | WA482HA, B | WA482HC, F | WA602HA, B | WA602HC, F |
|-----------------|---------------------------------------|---|------------|------------|------------|------------|
| 1 | S127X214 | Lower Base | ٠ | • | ٠ | • |
| 2 | S500-262-* ① | Left Side | • | • | • | • |
| 3 | S500-261-* ① | Right Side | • | ٠ | ٠ | • |
| 4 | S508-098 | Back | • | • | • | • |
| 5 | S506-142-* ① | Тор | • | ٠ | • | • |
| 6 | S514-077-* ① | Upper Front | • | • | • | • |
| 7 | S552-224-* ① | Service Door | • | • | • | • |
| 8 | 118-031-* ① | Condenser Grille | • | • | • | • |
| 9 | 118-032-*① | Side Grille | 2 | 2 | 2 | 2 |
| 10 | S520X258 | Condenser Partition | • | • | • | • |
| 11 | 123-083 | Drain Pan | • | • | • | • |
| 12 | 121X216 | Blower Partition | • | • | ٠ | • |
| 13 | Control Panel Assembly | See Control Panel Assembly Drawing & Parts List | • | • | • | • |
| 14 | S133-114 | Control Panel Cover (inner) | • | | • | |
| 14 | S133-115 | Control Panel Cover (Inner) | | • | | • |
| 15 | S533-113-* ① | Control Panel Cover (Outer) | • | • | • | • |
| 16 | S153-218-*① | Dicsonnect Access Door | • | ٠ | • | • |
| 17 | 125-024 | Fan Shroud | • | • | • | • |
| 18 | 113-140 | Bottom Mounting Bracket | • | • | • | • |
| 19 | 137-209 | Fill | • | • | • | • |
| 20 | 960024 = | Fresh Air Damper Assembly | • | • | • | • |
| 22 | 131X099 | Filter Tray | • | • | • | • |
| 23 | 105X877 | Left Side Support | • | • | • | • |
| 24 | 147-046-*① | Left Evaporator Support | • | • | • | • |
| 25 | 135-128 | Raceway | • | • | • | • |
| 26 | 111X034 | Oulet Airframe Assembly | • | • | • | • |
| 27 | 105X878 | Right Side Support | • | • | • | • |
| 28 | S143-042-*① | Right Side Cover Plate (Outer) | • | • | • | • |
| 29 | 135-219 | Heat Shield | • | • | • | • |
| 30 | 113-150-* ① | Top Rain Flashing | • | • | • | • |
| | · · · · · · · · · · · · · · · · · · · | · · · · · · · · · · · · · · · · · · · | | | | |

① NOTE: Exterior cabinet parts are manufactured with various paint color options. To insure that you receive the proper paint color, you must include the complete model and serial number of the unit for which cabinet parts are being ordered.

Page: 2 Manual: 2110-417

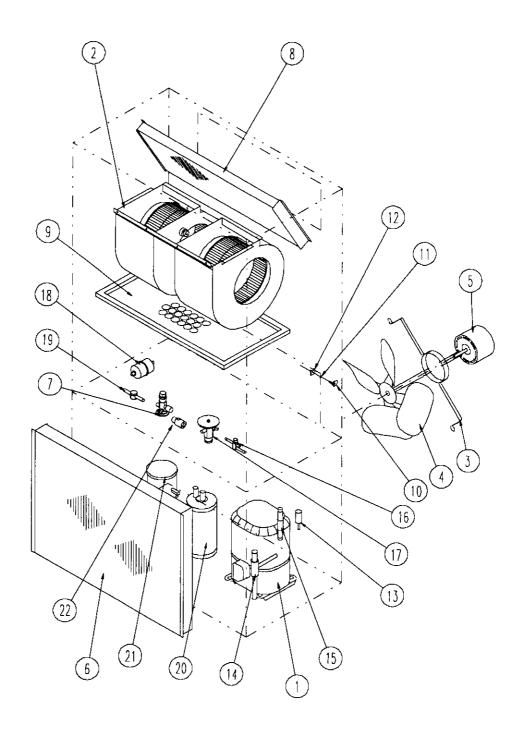


Page: 3 Manual: 2110-417

| Dwg. No. | Part No. | Description | WA482HA | WA482HB | WA482HC | WA482HF | WA602HA | WA602HB | WA602HC | WA602HF | |
|-------------|-------------------------|--------------------------------|---------|---------|---------|---------|---------|---------|---------|---------|-----|
| 1 | 8000-153 | Compressor | | | | | • | | | | |
| 1 | 8000-154 | Compressor | | | | | | • | | | |
| 1 | 8000-155 | Compressor | | | | | | | • | • | |
| 1 | 8000-149 | Compressor | • | | | | | | | | |
| 1 | 8000-156 | Compressor | | • | | | | | | | |
| 1 | 8000-157 | Compressor | | | • | • | | | | | |
| 2 | S900-183 | Blower Assembly | • | • | | • | | | | | |
| 2 | S900-184 | Blower Assembly | | | • | | | | | | |
| 2 | S900-185 | Blower Assembly | | | | | • | • | | • | |
| 2 | S900-186 | Blower Assembly | | | | | | | • | | |
| 3 | 8200-004 | Fan Motor Mount | • | • | • | • | • | • | • | • | |
| 4 | 5151-027 | Fan Blade | • | • | • | • | • | • | • | • | |
| 5 | 8105-030 | Condenser Motor | | | • | | | | • | | |
| 5 | 8105-039 | Condenser Motor | • | • | | • | • | • | | • | |
| 6 | 5051-074 | Condenser Coil | • | • | • | • | • | • | • | • | |
| 7 | _5651-100 - | Expansion Valve 💪) 🛴 🔭 💮 💛 💪 | • | • | • | • | • | • | • | • | - 6 |
| 8 | 5060-070 | Evaporator Coil | • | • | • | • | | | | | |
| 8 | 5060-071 | Evaporator Coil | | | | | • | • | • | • | |
| 9 | 7004-016 | Air Filter 1" Throw-Away | • | • | • | • | • | • | • | • | |
| 9 | 7003-030 | Air Filter 1" Washable ① | • | • | • | • | • | • | • | • | |
| 9 | 7004-027 | Air Filter 2" Pleated ① | • | • | • | • | • | • | • | • | |
| 10 | 1171-022 | 1/4" Tum Fastener | • | • | • | • | • | • | • | • | |
| 11 | 1171-024 | 1/4* Tum Retainer | • | • | • | • | • | • | • | • | |
| 12 | 1171-023 | 1/4" Receptacle | • | • | • | • | • | • | • | • | |
| 13 | 8406-055 | High Pressure Switch (Solder) | • | • | • | • | • | • | • | • | |
| 14 | 5651-015 | Head Pressure Control Valve | • | • | • | • | • | • | • | • | |
| 15 | 5651-016 | Pressure Differential Valve | . • | • | • | • | • | • | • | • | |
| 16 | 5651-051 | Shut-Off Valve | • | • | • | • | • | • | • | • | |
| 17 | 5651-096 | Hot Gas Bypass Vaive | • | • | • | • | • | • | • | • | |
| 18 | 5201-002 | Filter Dryer | • | • | • | • | • | • | • | • | |
| 19 | 5201-014 | Sight Glass | • | • | • | • | • | • | • | • | |
| 20 | 5202-018 | Accumulator | • | • | • | • | • | • | • | • | |
| 21 | 5203-006 | Receiver | • | • | • | • | • | • | • | • | |
| 22 | -2 5651-101 602. | 20 9 Spistributor 4/2 15 169 | • | • | • | • | • | • | • | • | |
| NS | 8406-061 | Low Pressure Switch (Solder) ① | • | • | • | • | • | • | • | • | |
| NS | 1804-0106 | High Pressure Switch (Flare) Û | • | • | • | • | • | • | • | • | |
| NS | 1804-0107 | Low Pressure Switch (Flare) ① | • | • | • | • | • | • | • | • | |
| | | | | | | | | | | | |

NS - Not Shown

①- Optional on these models

Page: 4 Manual: 2110-417 2-4

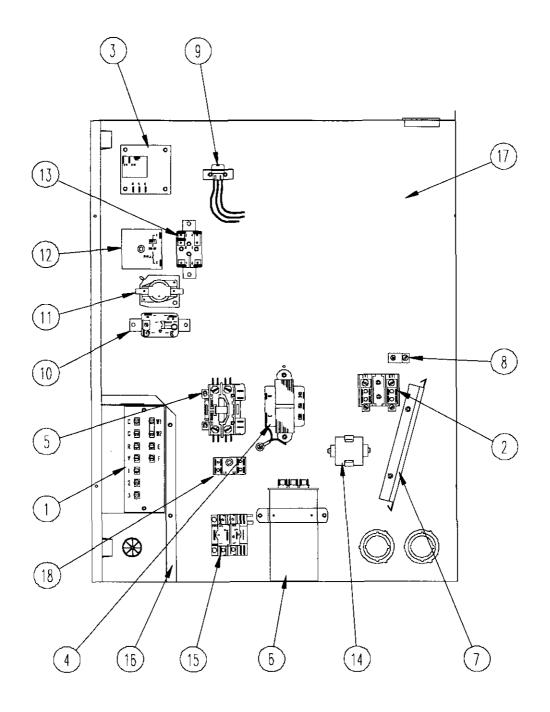

SEXP-180

Page: 5 Manual: 2110-417


Control Panel

| | | | WA482HA | WA482HB | WA482HC | WA482HF | WAGOZHA | WA602HB | WA602HC | 22HF | |
|----------------|----------|--------------------------------------|---------|---------|---------|---------|---------|---------|---------|---------|--|
| Drawing No. | Part No. | Description | WA48 | WA4 | WA4 | WA4 | WAG | WAG | WAG | WAGOZHF | |
| 1 | 8607-020 | Low Voltage Terminal Strip | • | • | • | • | • | • | • | • | |
| 2 | 8607-013 | Terminal Block 2 Pole | • | | | 2 | • | | | 2 | |
| 2 | 8607-014 | Terminal Block 3 Pole | | • | • | | | • | • | | |
| 2 | 8607-015 | Phelon Insulator | | | • | | | | • | | |
| 3 | 8201-056 | Blower Control | • | • | | • | • | • | | • | |
| 3 | 8201-032 | Blower Relay | | | • | | | | • | | |
| 4 | 8407-034 | Transformer | • | • | | • | • | • | | • | |
| 4 | 8407-042 | Transformer | | | • | | | | • | | |
| 5 | 8401-002 | Compressor Contactor | • | • | • | • | | • | • | • | |
| 5 | 8401-016 | Compressor Contactor | • | | | | • | | | | |
| 6 | 8552-005 | Outdoor Motor Capacitor | | • | | • | | • | | • | |
| 6 | 8552-026 | Outdoor Motor Capacitor | | | • | | | | • | | |
| 6 | 8552-058 | Compressor Capacitor | | | | | • | | | | |
| 6 | 8552-059 | Compressor Capacitor | • | | | | | | | | |
| 7 | 135-130 | Wire Shield | • | • | • | • | • | ٠ | • | • | |
| 8 | 8611-006 | Ground Terminal | • | • | • | • | • | • | • | • | |
| 9 | 3000-978 | 6 Pin Connector | • | • | • | • | • | • | • | • | |
| 10 | 8201-034 | Lockout Relay (Optional) | • | • | • | • | • | • | • | • | |
| 11 | 8201-065 | Low Pressure Bypass (TDR) (Optional) | • | • | • | • | • | • | • | • | |
| 11 | 8201-009 | Control Relay | • | • | • | • | • | • | • | • | |
| 12 | 8201-050 | Compressor TDR (Optional) | • | • | • | • | • | • | • | • | |
| 12 | 8201-067 | Compressor TDR Adj (Optional) | • | • | • | • | • | • | • | • | |
| 13 | 8201-062 | Alarm Relay (Optional) | • | • | • | • | • | • | • | • | |
| 14 | 8605-012 | Crankcase Heater | • | • | | | • | • | | | |
| 14 | 8605-013 | Crankcase Heater | | | • | • | | | • | • | |
| 15 | 8201-032 | Outdoor Fan Relay (Optional) | | | • | | | | • | | |
| 16 | 117-139 | Low Voltage Box | • | • | • | • | • | • | • | • | |
| 17 | 117-143 | Control Panel | • | • | • | • | • | • | • | • | |
| 18 | 8607-017 | Terminal Block (Optional) | • | • | | • | • | • | | • | |
| | 4095-120 | Wiring Diagram | • | | | | • | | | | |
| | 4095-219 | Wiring Diagram | | • | | | | • | | | |
| | 4095-313 | Wiring Diagram | | | • | | | | • | | |
| | 4095-616 | Wiring Diagram | | | | • | | | | • | |
| | | | | | | | | | | | |

Page: 6 Manual: 2110-417

.

| Drawing | | | 900-183 | 900-184 | 900-185 | 900-186 | |
|---------|----------|------------------------|----------|----------|----------|-----------|--|
| No. | Part No. | Description | <u> </u> | <u>क</u> | <u> </u> | <u></u> ಹ | |
| 1 | 5152-011 | 10 inch Wheel (CW) | | | • | • | |
| 1 _ | 5152-057 | 9 Inch Wheel (CW) | • | • | | | |
| 2 | 5152-012 | 10 Inch Wheel (CCW) | | | • | • | |
| 2 | 5152-058 | 9 Inch Wheel (CCW) | | • | | | |
| 3 | 8105-030 | Blower Motor (230/208) | • | | • | | |
| 3 | 8105-025 | Blower Motor (460) | | • | | • | |
| 4 | 8552-005 | Capacitor | • | • | • | • | |
| 5 | 8200-040 | Motor Mount | • | • | • | • | |
| 6 | 5451-011 | Grommets | 6 | 6 | 6 | 6 | |
| 7 | 105-880 | Back Brace | • | • | • | • | |
| 8 | 105-881 | Side Angle | 4 | 4 | 4 | 4 | |
| 9 | 103-389 | Front Brace | • | • | • | • | |
| 10 | 151-101 | Housing | 2 | 2 | 2 | 2 | |
| 11 | 144-166 | Diffuser | 2 | 2 | 2 | 2 | |

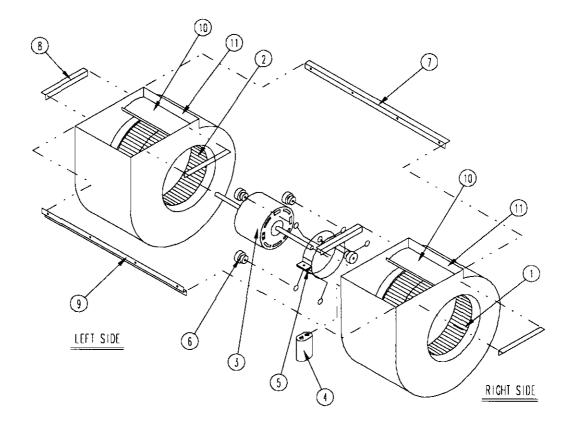

Page: 7 Manual: 2110-417