Replacement **Parts Manual**

Wall Mounted Package Air Conditioner

Models: WL421, WL482,

WL602

General Notes

Revised and/or additional pages may be issued from time to time.

> A complete and current manual consists of pages shown in the following contents section.


Important

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.

Contents

Description		Page
Cabinet Components	Exploded View Usage List	
Functional Componer	Exploded View Usage List	
Control Panel	Exploded View Usage List	
Blower Assembly	Exploded View Usage List	_



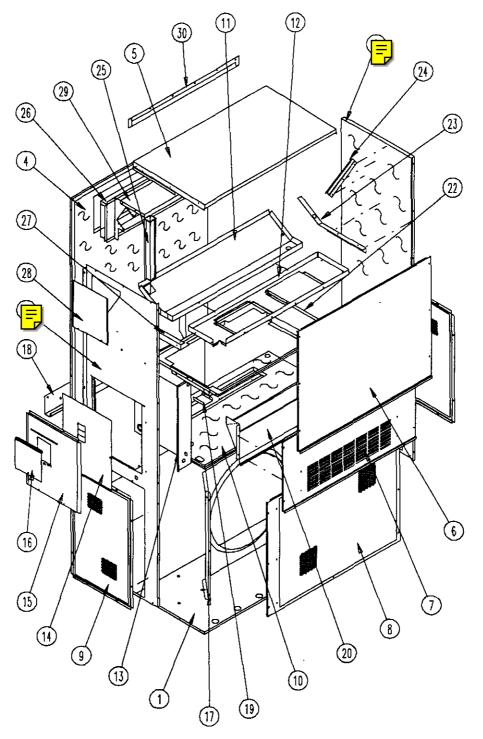

SDIP-234


Page: 1 Manual: 2110-419

√awing No.	Part No.	Description	WL421-A, B	WL421-C	WL482-A, B	WL482-C	WL602-A, B	WL602-C, F	
1	S127Y214	Lower Base	•	•	•	•	•	•	_
2	S500-320-* ①	Left Side	•	•	•	•	•	•	
3	S500-319-* ①	Right Side	•	•	•	•	•	•	
4	S508-098	Back	•	•	•	•	•	•	_
5	S506-142-* ①	Тор	•	•	•	•	•	•	
6	S514-077-* ①	Upper Front	•	•	٠	•	•	•	
7	S552-224-* ①	Service Door	•	•	•	•	•	•	_
8	118-031-* ①	Condenser Grille	•	•	•	•	•	•	
9	118-032-*①	Side Grille	2	2	2	2	2	2	_
10	S520Y258	Condenser Partition	•	•	•	•	٠	•	
11	123-091	Drain Pan	•	•	•	•	•	•	
12	121Y216	Blower Partition	•	•	•	•	•	•	
13	Control Panel Assembly	See Control Panel Assembly Drawing & Parts List	•_	•	٠	•	•	•	
14	S133-114	Control Panel Cover (Inner)	•		•		•		
14	S133-115	Control Panel Cover (Inner)		•		•		•	•
15	S533-140-* ①	Control Panel Cover (Outer)	•	•	•	•	•	•	_
16	S153-218-*①	Dicsonnect Access Door	•	٠	٠	•	•	•	_
17	125-024	Fan Shroud	•	•	•	•	•	•	_
18	113-140	Bottom Mounting Bracket	•	•	•	•	•	•	_
19	137-209	Fill	•	•	•	•	•	•	
20	960024	Fresh Air Damper Assembly	•	•	•	•	•	•	
22	131Y099	Filter Tray	•	•	•	•	•	•	
23	105Y878	Left Side Support	•	•	•	•	٠	•	
24	147-046-*①	Left Evaporator Support	•	•	•	•	•	•	_
25	135-128	Raceway	2	2	2	2	2	2	
26	111Y034	Oulet Airframe Assembly	•	•	•	•	•	•	_
27	105Y877	Right Side Support	•	•	•	•	•	•	
28	S143-042-*①	Right Side Cover Plate (Outer)	•	•	٠	٠	٠	•	
29	135-129	Heat Shield	•	•	•	•	•	•	
30	113-150-* ①	Top Rain Flashing	•	•	•	•	•	•	_
									_

① NOTE: Exterior cabinet parts are manufactured with various paint color options. To insure that you receive the proper paint color, you must include the complete model and serial number of the unit for which cabinet parts are being ordered.

Page: 2

Manual: 2110-419

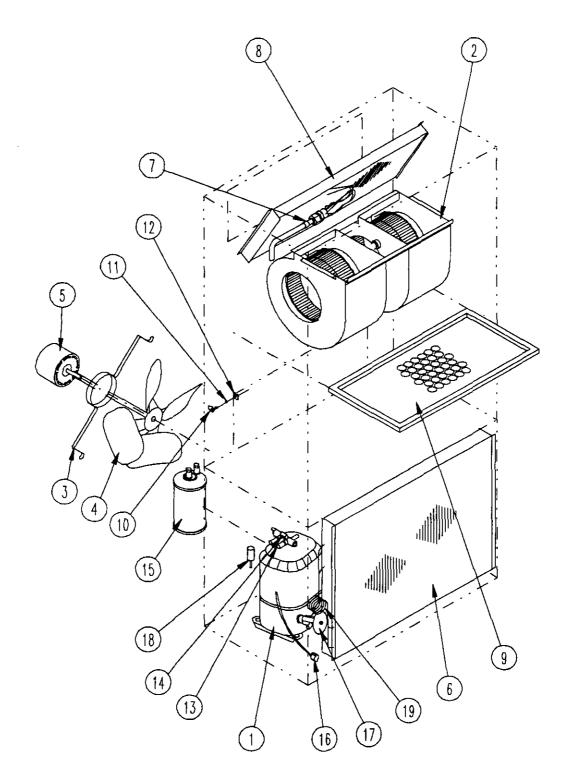

SEXP-237


Page: 3 Manual: 2110-419

			WL421-A	WL421-B	WL421-C	WL482-A	WL482-B	WL482-C	WL602-A	WL602-B	WL602-C	WL602F
Dwg.			Ź	Ę	7	14	Ź	Ž	116	<u>/F</u>	7F	<u>7</u>
No.	Part No.	Description				5			5	5	5	<u> </u>
1	8000-153	Compressor							•			
1	8000-154	Compressor								•		
1	8000-155	Compressor									٠	•
1	8000-126	Compressor	•									
1	8000-127	Compressor		•								
1	8000-128	Compressor			•							
1	8000-149	Compressor				•						
1	8000-156	Compressor					•					
1	8000-157	Compressor						•				
2	S900-183	Blower Assembly	•	•		•	•					
2	S900-184	Blower Assembly			•			•				
2	S900-185	Blower Assembly							•	•		•
2	S900-186	Blower Assembly									٠	
3	8200-004	Fan Motor Mount	•	•	•	•	•	•	•	•	•	•
4	5151-027	Fan Blade	•	•	•	•	٠	٠	٠	•	•	•
5	8105-030	Condenser Motor			•			•			•	
5	8105-039	Condenser Motor	•	•		•	•		•	•		•
6	5051-0 =	Condenser Coil				•	•	•	•	•	•	•
6	5051-0	Condenser Coil	•	•	•							
7	800-020	Cooling Capillary Assembly				٠	•	•				
7	800-0203	Cooling Capillary Assembly	•	•	•							
7	800-0232	Cooling Capillary Assembly							•	•	•	•
8	5060-070	Evaporator Coil	•	•	•	•	•	•				
8	5060-082	Evaporator Coil							•	•	•	•
9	7004-016	Air Filter 1° Throw-Away	•	٠	•	•	•	•	•	•	•	•
9	7003-030	Air Filter 1* Washable	•	•	•	•	•	•	•	•	•	•
9	7004-027	Air Filter 2* Pleated	•	•	•	•	•	•	•	•	•	•
10	1171-022	1/4* Turn Fastener	•	•	٠	•	•	•	•	•	•	•
11	1171-024	1/4" Turn Retainer	•	•	٠	•	•	•	•	•	•	•
12	1171-023	1/4" Receptacle	•	•	•	•	•	•	•	•	•	•
13	8406-055	High Pressure Switch (Solder)	0	0	0	•	•	•	•	•	•	•
NS	8406-061	Low Pressure Switch (Solder) ①	•	•	•	•	•	•	•	•	•	•
NS	8406-062	Low Ambient Control (Solder) ①	•	•	•	•	•	•	•	•	•	•
NS	1804-0106	High Pressure Switch (Flare) ①	•	•	•	•	•	•	•	•	•	•
NS	1804-0107	Low Pressure Switch (Flare) ①	•	•	•	•	•	•	•	•	•	•
NS	1804-0108	Low Ambient Control (Flare) ①	•	•	•	•	•	•	•	•	•	•
110	.304 0 100											

NS - Not Shown

①— Optional on these models

Page: 4 Manual: 2110-419

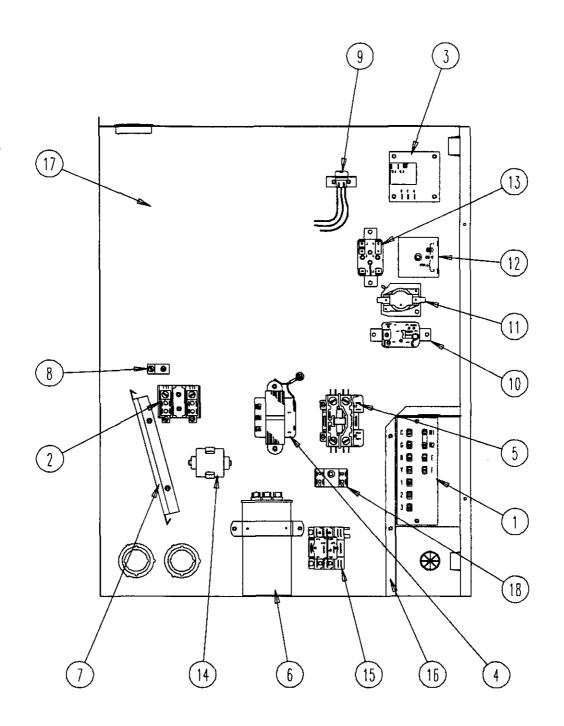


SEXP-238

Page: 5 Manual: 2110-419

Drawing No.	Part No.	Description	WL421-A	WL421-B	WL421-C	WL482-A	WL482-B	WL482-C	WL602-A	WL602-B	WL602-C	WL602-F	
1	8607-020	Low Voltage Terminal Strip	•	•	•	•	•	•	•	•	•	•	
2	8607-013	Terminal Block 2 Pole	•			•			•			2	
2	8607-014	Terminal Block 3 Pole		•	•		•	•		•	•		
2	8607-015	Phelon Insulator			•			•			•		
3	8201-056	Blower Control	•	•		•	•		•	•		•	
3	8201-032	Blower Relay			•			•	_		•		
4	8407-034	Transformer	•	•		•	•		•	•		•	
4	8407-042	Transformer			•			•			•		
5	8401-002	Compressor Contactor		•	•		•	•		•	•	•	
5	8401-007	Compressor Contactor	•										
5	8401-016	Compressor Contactor				•			•				
6	8552-005	Outdoor Motor Capacitor		•			•			•		•	
6	8552-026	Outdoor Motor Capacitor			•			•			•		
6	8552-055	Compressor Capacitor	•										
6	8552-058	Compressor Capacitor							•				
6	8552-059	Compressor Capacitor				•			·				
7	135-130	Wire Shield	•	•	•	•	•	•	•	•	•	•	
8	8611-006	Ground Terminal	•	•	•	•	•	•	•	•	•	•	
9	3000-978	6 Pin Connector	•	•	. •	•	•	•	•	•	•	•	
10	8201-034	Lockout Relay	0	<u> </u>	<u> </u>	•	•	•	•	•	•	•	
11	8201 -0 65	Low Pressure Bypass (TDR) (Optional)	•	•	•	•	•	•	•	•	•	•	
12	8201-050	Compressor TDR (Optional)	•	•	•	•	•	•	•	•	•	•	
12	8201-067	Compressor TDR Adj (Optional)	•	•	•	•	•	•	•	•		•	
13	8201-062	Alarm Relay (Optional)	•	•	•	•	•	•	•	•	•	•	
14	8551-005	Start Device (PTRC) (Optional)	•										
15	8201-032	Outdoor Fan Relay (Optional)			•			•			•		
16	117-139	Low Voltage Box	•	•	•	•	•	•	•	•	•	•	
17	117-143	Control Panel	•	•	•	•	•	•	•	•	•	•	
18	8607-017	Terminal Block (Optional)	•	•		•	•		•	•		•	
	4095-110	Wiring Diagram	•										
	4095-112	Wiring Diagram				•			•				
	4095-210	Wiring Diagram		•									
	4095-212	Wiring Diagram					•			•			
	4095-310	Wiring Diagram			•		-						
	4095-313	Wiring Diagram						•			•		
	4095-611	Wiring Diagram										٠	

Page: 6 Manual: 2110-419

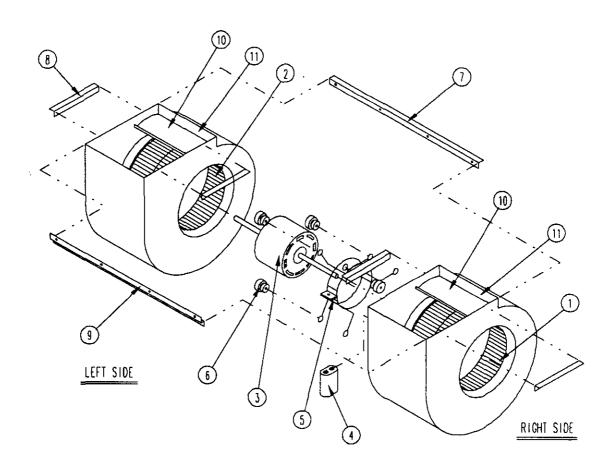

			900-183	900-184	900-185	900-186
Drawing No.	Part No.	Description	5 1	on.	о	6 1
1	5152-011	10 Inch Wheel (CW)			•	•
1	5152-057	9 Inch Wheel (CW)	•	•		
2	5152-012	10 Inch Wheel (CCW)			•	•
2	5152-058	9 Inch Wheel (CCW)	•	•		
3	8105-030 8/36-37	Blower Motor (230/208)	•		•	
3	8105-025 81.00 - 01 /T	Blower Motor (460)		•		•
4	8552-005	Capacitor	•	•	٠	•
5	8200-040	Motor Mount	•	•	•	•
6	5451-011	Grommets	6	6	6	6
7	105-880	Back Brace	•	•	•	•
8	105-881	Side Angle	4	4	4	4
9	103-389	Front Brace	•	•	٠	•
10	151-101	Housing	2	2	2	2
11	144-166	Diffuser	2	_2	2	2

Page: 7 Manual: 2110-419