
Replacement Parts Manual

Wall Mount Heater Package

Models:

EHWH02-A04	EHWA24-B06
EHWA02-A05	EHWH24-B06
EHWH02-A05	EHWA24-A04
EHWA02-A08	EHWH24A-C06
EHWH02-A08	EHWH02LA04
EHWA02-A10	

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Contents

<u>Description</u>	<u>Page</u>
Functional Components	
♦ Exploded View	1
♦ Usage List	2




Bard Manufacturing Company, Inc.
Bryan, Ohio 43506

Since 1914...Moving ahead, just as planned.

Manual: 2110-606B
Supersedes: 2110-606A
File: 2150-004 Tab 18
Date: 03-18-99

FUNCTIONAL COMPONENTS

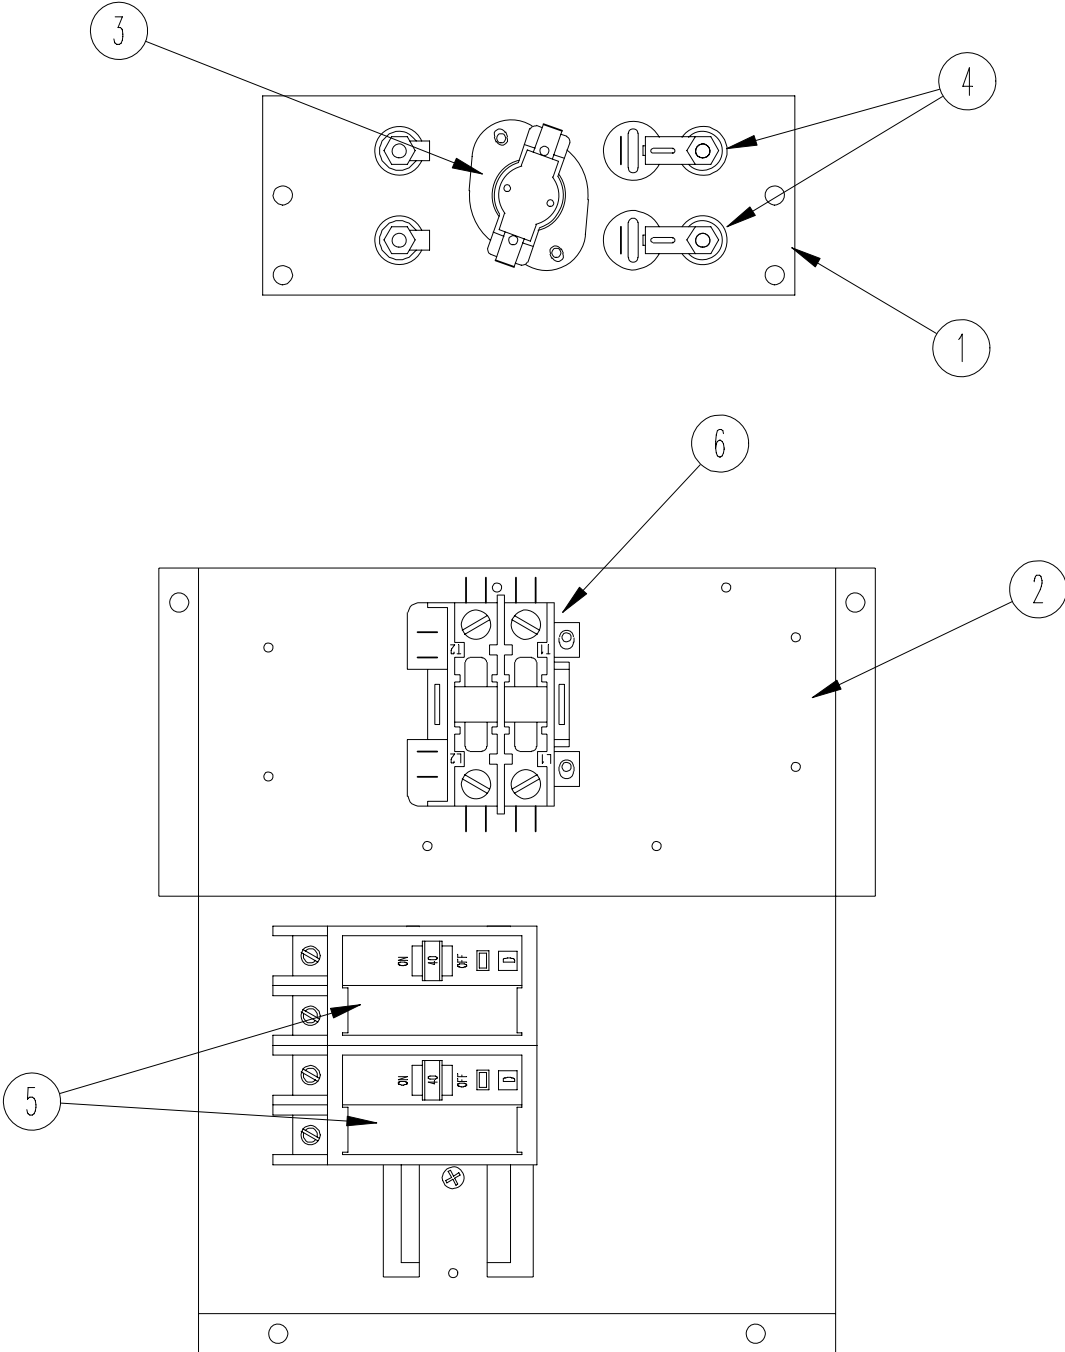

SEXP-173

FUNCTIONAL COMPONENTS

Drawing No.	Part No.	Description	EHWA02-A05	EHWA02-A08	EHWA02-A10	EHWA24-B06	EHWH02-A04	EHWH02-A08	EHWH24-B06	EHWH24A-C06	EHWA24-A04	EHWH02LA04	EHWH02-A05
1	8604-089	Heat Strip 5KW	X										X
1	8604-095	Heat Strip 10KW			X								
1	8604-090	Heat Strip 8KW		X				X					
1	8604-049	Heat Strip 6KW				X			X				
1	8604-088	Heat Strip 4KW					X				X	X	
1	8604-100	Heat Strip 6KW								X			
2	127-210	Heater Control Base	X	X	X	X	X	X	X		X	X	X
2	127-211	Heater Control Base								X			
3	8402-065	Limit Control	X	X	X	X	X	X	X	X	X	X	X
4	8402-091	Thermal Cutoff				2			2				
4	8402-114	Thermal Cutoff	X				X				X	X	X
4	8402-092	Thermal Cutoff		2	2			2					
4	8402-095	Thermal Cutoff								2			
5	8615-036	Circuit Breaker 25A								X	X	X	
5	8615-053	Pull Disconnect								X			
5	8615-037	Circuit Breaker 30A	X										
5	8615-042	Circuit Breaker 35A							X				
5	8615-041	Circuit Breaker 60A			X			X					
5	8615-055	Circuit Breaker 40A					X						
5	8615-039	Circuit Breaker 45A		X									X
5	8615-051	Circuit Breaker 25A				X							
6	8401-006	Heat Contactor	X	X	X	X	X	X	X		X	X	X
6	8401-002	Heat Contactor								X			
NS	4097-121	Wiring Diagram					X					X	X
NS	4097-140	Wiring Diagram		X	X								
NS	4097-220	Wiring Diagram				X							
NS	4097-221	Wiring Diagram							X				
NS	4097-120	Wiring Diagram	X								X		
NS	4097-322	Wiring Diagram								X			
NS	4097-131	Wiring Diagram						X					

NS – Not Shown