

---

# WALL MOUNT HEATER PACKAGE

## REPLACEMENT PARTS MANUAL

### Models:

EHWH02-A05	EHWA02-A05
EHWH02A-A04	EHWA02-A10L
EHWH02A-A08	EHWA02A-A08
EHWH02ALA04	EHWA02A-A10
EHWH24-B06	EHWA02A-A05L
EHWH24B-C06	EHWA02A-A08L
EHWH24B-C06L	EHWA24-B06
	EHWA24-B06L
	EHWA24A-A04

---

## General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

## Contents

Description	Page
Functional Components	
♦ Exploded View .....	1
♦ Usage List .....	2
♦ Usage List .....	3




BARD MANUFACTURING COMPANY  
Bryan, Ohio 43506  
*Since 1914...Moving ahead, just as planned.*

Manual: 2110-609A  
Supersedes: 2110-609  
File: Tab 18  
Date: 11-16-01

---

# FUNCTIONAL COMPONENTS

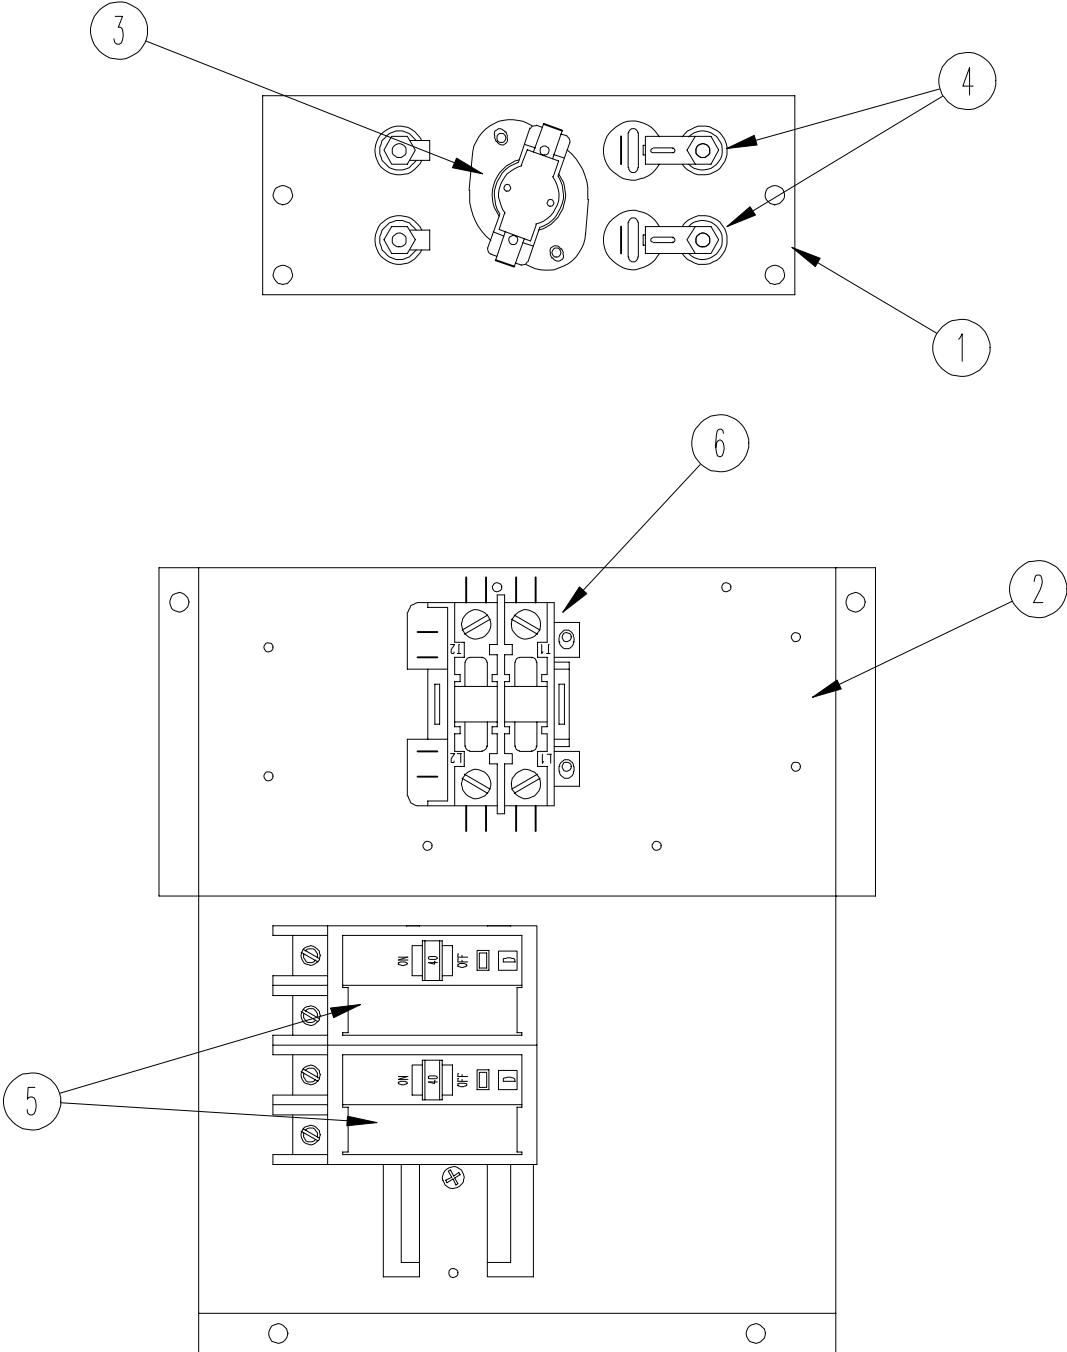

SEXP-173

**Use this drawing as reference for Pages 2 and 3**

# FUNCTIONAL COMPONENTS

Drawing			EHWA02-A05	EHWA02A-A08	EHWA02A-A10	EHWA24-B06	EHWH02A-A04	EHWH02A-A08	EHWH24-B06	EHWH24B-C06	EHWA24A-A04	EHWH02ALA04	EHWH02-A05
No.	Part No.	Description											
1	8604-089	Heat Strip 5KW	X										X
1	8604-095	Heat Strip 10KW			X								
1	8604-090	Heat Strip 8KW		X				X					
1	8604-049	Heat Strip 6KW				X			X				
1	8604-088	Heat Strip 4KW					X				X	X	
1	8604-100	Heat Strip 6KW								X			
2	127X210	Heater Control Base	X	X	X	X	X	X	X		X	X	X
2	127-211	Heater Control Base								X			
3	8402-065	Limit Control	X		X	X			X	X			X
3	8402-049	Limit Control					X				X	X	
3	8402-074	Limit Control		X				X					
4	8402-091	Thermal Cutoff				2			2				
4	8402-114	Thermal Cutoff	X				X				X	X	X
4	8402-094	Thermal Cutoff								2			
4	8402-093	Thermal Cutoff		2	2			2					
5	8615-036	Circuit Breaker 25A									X	X	
5	8615-053	Pull Disconnect								X			
5	8615-037	Circuit Breaker 30A	X										
5	8615-042	Circuit Breaker 35A							X				
5	8615-041	Circuit Breaker 60A			X			X					
5	8615-055	Circuit Breaker 40A					X						
5	8615-039	Circuit Breaker 45A		X									X
5	8615-051	Circuit Breaker 25A				X							
6	8401-006	Heat Contactor	X	X	X	X	X	X	X		X	X	X
6	8401-002	Heat Contactor								X			
NS	4097-121	Wiring Diagram					X					X	X
NS	4097-140	Wiring Diagram		X	X								
NS	4097-220	Wiring Diagram				X							
NS	4097-221	Wiring Diagram							X				
NS	4097-120	Wiring Diagram	X								X		
NS	4097-322	Wiring Diagram								X			
NS	4097-131	Wiring Diagram						X					

NS – Not Shown

Reference drawing on Page 1

# FUNCTIONAL COMPONENTS

Drawing No.	Part No.	Description	EHWA02-A10L	EHWA24-B06L	EHWA02A-A05L	EHWA02A-A08L	EHW24-C06L
1	8604-095	Heat Strip 10KW	X				
1	8604-090	Heat Strip 8KW				X	
1	8604-049	Heat Strip 6KW		X			
1	8604-089	Heat Strip 5KW			X		
1	8604-100	Heat Strip 6KW					X
2	127Y210	Heater Control Base	X	X	X	X	
2	127-211	Heater Control Base					X
3	8402-065	Limit Control	X	X			
3	8402-081	Limit Control			X	X	X
4	8402-114	Thermal Cutoff			X		
4	8402-093	Thermal Cutoff	2	2		2	
4	8402-094	Thermal Cutoff					X
5	8615-037	Circuit Breaker 30A			X		
5	8615-041	Circuit Breaker 60A	X				
5	8615-039	Circuit Breaker 45A				X	
5	8615-051	Circuit Breaker 25A		X			
5	8615-053	Pull Disconnect					X
6	8401-006	Heat Contactor	X	X	X	X	
6	8401-002	Heat Contactor					X
NS	4097-140	Wiring Diagram	X			X	
NS	4097-220	Wiring Diagram		X			
NS	4097-120	Wiring Diagram			X		
NS	4097-322	Wiring Diagram					X

NS – Not Shown

Reference drawing on Page 1