

---

# REPLACEMENT PARTS MANUAL WALL MOUNT HEATER PACKAGE

## Models:

**EHWA05-A05L, EHWA05-A10L, EHWA05-A15L,  
EHWA05-B06L, EHWA05-B09L, EHWA05-B15L,  
EHWA05-C09L, EHWA05-C15L, EHWA05HA10L,  
EHWA05HA15L, EHWA05HB09L, EHWA05HB15L,  
EHWA05NA05L, EHWA05NA10L, EHWA60-A05L,  
EHWA60-B09L, EHWA05A-F14L**

---

## General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

## Contents

Description	Page
Heater Packages / Air Conditioner	
♦ Exploded View .....	1
♦ Usage List .....	2

## Important

- Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.





BARD MANUFACTURING COMPANY  
Bryan, Ohio 43506  
*Since 1914 . . . Moving ahead, just as planned*

Manual: 2110-613C  
Supersedes: 2110-613B  
File: Tab 18  
Date: 07-02-04

---

# AIR CONDITIONING HEATER PACKAGES

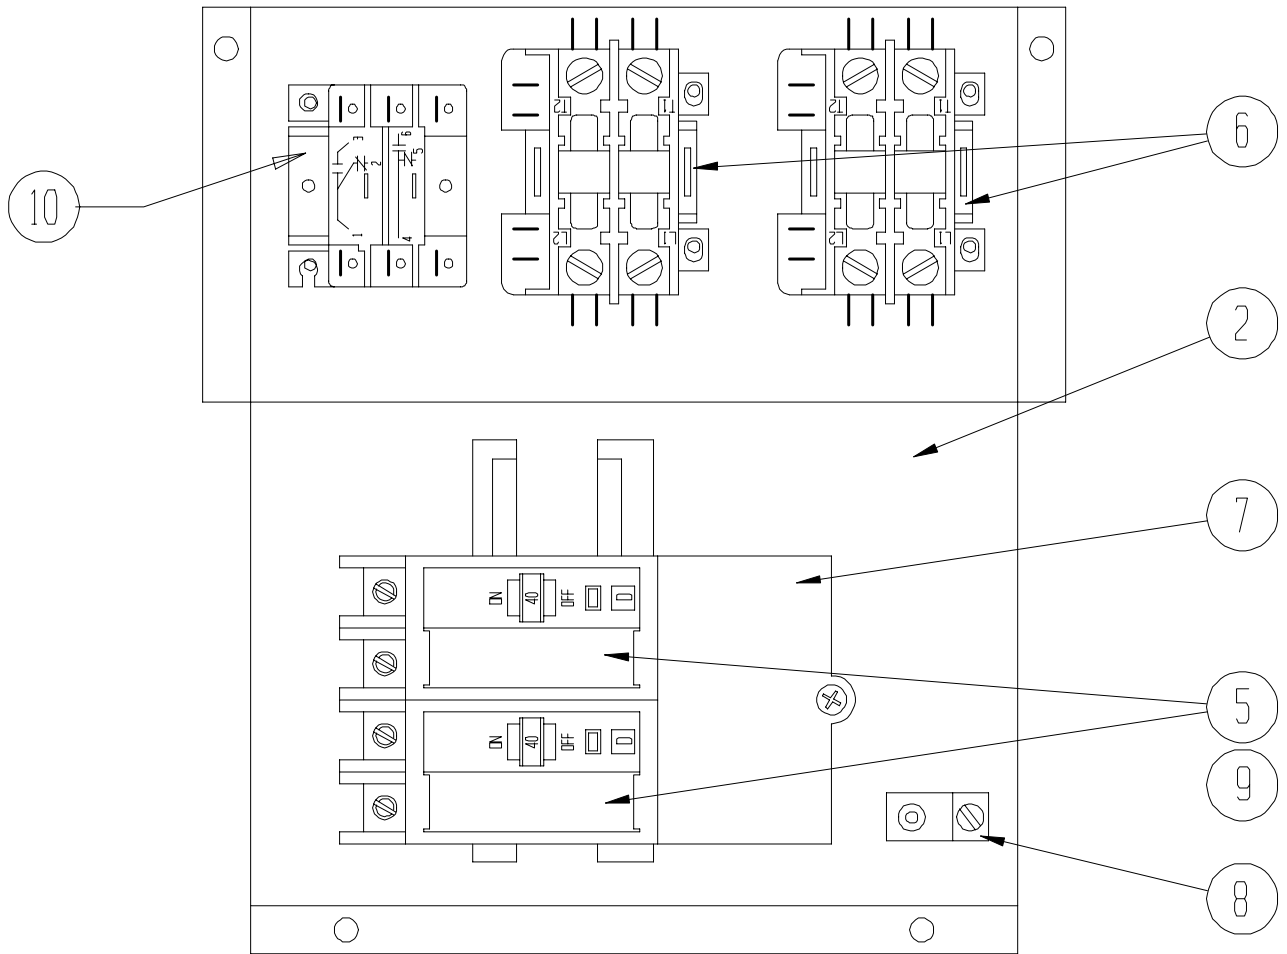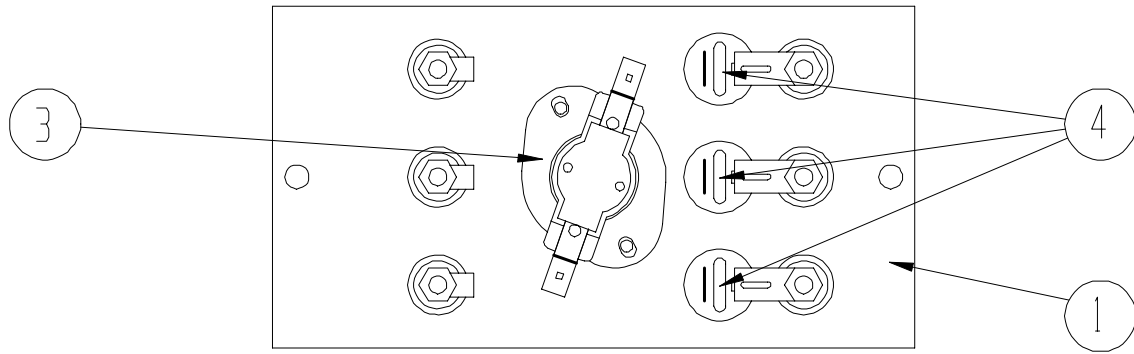

SEXP-165

# AIR CONDITIONING HEATER PACKAGES

Drawing No.	Part No.	Description	EHWA05-A05L	EHWA05-A10L	EHWA05-A15L	EHWA05-B06L	EHWA05-B09L	EHWA05A-C09L	EHWA05A-C15L	EHWA05HA10L	EHWA05HA15L	EHWA05HB09L	EHWA05HB15L	EHWA05NA05L	EHWA05NA10L	EHWA60-A05L	EHWA60-B09L	EHWA05A-F14L
			1	8604-089	Heat Strip 5 KW	X		X					X	X			X	
1	8604-091	Heat Strip 10 KW		X	X					X	X				X			
1	8604-049	Heat Strip 6 KW				X							X					
1	8604-048	Heat Strip 9 KW					X					X	X				X	
1	8604-100	Heat Strip 6 KW							X									
1	8604-101	Heat Strip 9 KW						X	X									2
2	127Y210	Heater Control Base	X	X	X	X	X			X	X	X	X	X	X	X	X	
2	127-321	Heater Control Base						X	X									X
3	8402-074	Limit Control	X			X	X	X				X			X	X	X	
3	8402-075	Limit Control			X				X		X		X					X
3	8402-065	Limit Control		X						X				X				
4	8402-093	Thermal Cutoff	1		3						3				2	1		
4	8402-092	Thermal Cutoff				2	2					2	4	1			2	
4	8402-094	Thermal Cutoff						2	4									4
4	8402-096	Thermal Cutoff		2						2								
5	8615-067	Disconnect Switch						X	X									X
5	8615-037	Circuit Breaker 30A			X						X							
5	8615-042	Circuit Breaker 35A 3 Ph				X	X											
5	8615-040	Circuit Breaker 50A	X											X				
5	8615-041	Circuit Breaker 60A 3 Ph		X	X					2	2				X	X		
5	8615-044	Circuit Breaker 45A 3 Ph															X	
5	8615-046	Circuit Breaker 60A										X	X					
5	8615-051	Circuit Breaker 25A 3 Ph											X					
6	8401-006	Heat Contactor	X	X	2	X	X				X	X	2	X	X	X	X	
6	8401-002	Heat Contactor						X	2	X	X							2
7	8615-047	Jumper Bar Base			X					X								
7	8615-048	Jumper Bar Base									X							
8	8611-006	Ground Terminal			X					X	X		X					
9	8615-049	Jumper Bar Cover			X					X								
9	8615-050	Jumper Bar Cover									X							
NS	4097-120	Wiring Diagram	X											X	X			
NS	4097-140	Wiring Diagram		X											X			
NS	4097-152	Wiring Diagram			X													
NS	4097-220	Wiring Diagram				X	X										X	
NS	4097-233	Wiring Diagram											X					
NS	4097-322	Wiring Diagram						X										
NS	4097-332	Wiring Diagram							X									X
NS	4097-163	Wiring Diagram									X							
NS	4097-142	Wiring Diagram								X								
NS	4097-221	Wiring Diagram										X						

NS = Not Shown