

---

# REPLACEMENT PARTS MANUAL WALL MOUNT HEATER PACKAGE

## Models:

EHWA05-A05L  
EHWA05-B06L  
EHWA05-C09L  
EHWA05HA15L  
EHWA05NA05L  
EHWA60-B09L  
EHW36AHA10  
EHW36AHB06  
EHW70LHB18  
EHW05L-C09

EHWA05-A10L  
EHWA05-B09L  
EHWA05-C15L  
EHWA05HB09L  
EHWA05NA10L  
EHWA05A-F14L  
EHWH04-A10L  
EHW36AHB09  
EHW70L-B18  
EHW36AHC12

EHWA05-A15L  
EHWA05-B15L  
EHWA05HA10L  
EHWA05HB15L  
EHWA60-A05L  
EHW36AHA05  
EHWL05HA20  
EHW70LHB09  
EHW36AHC09  
EHW05L-C15

---

## General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

## Contents

Description	Page
Heater Packages / Air Conditioner	
◆ Exploded View .....	2
◆ Usage List .....	3
◆ Usage List .....	4

## Important



- Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.



Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506  
*Since 1914...Moving ahead, just as planned.*

Manual: 2110-613D  
Supersedes: 2110-613C  
File: Tab 18  
Date: 11-12-10

# AIR CONDITIONING HEATER PACKAGES

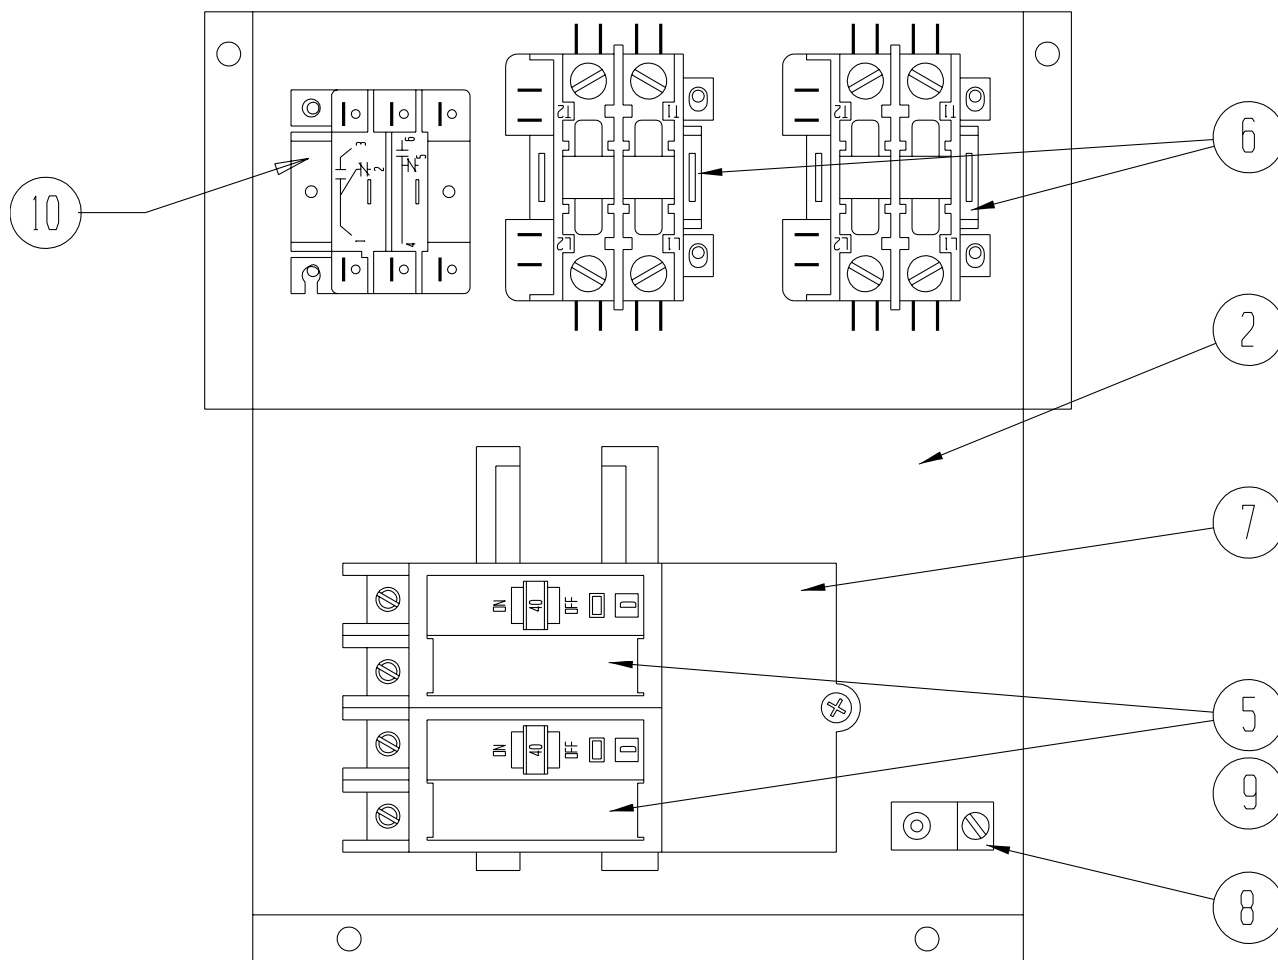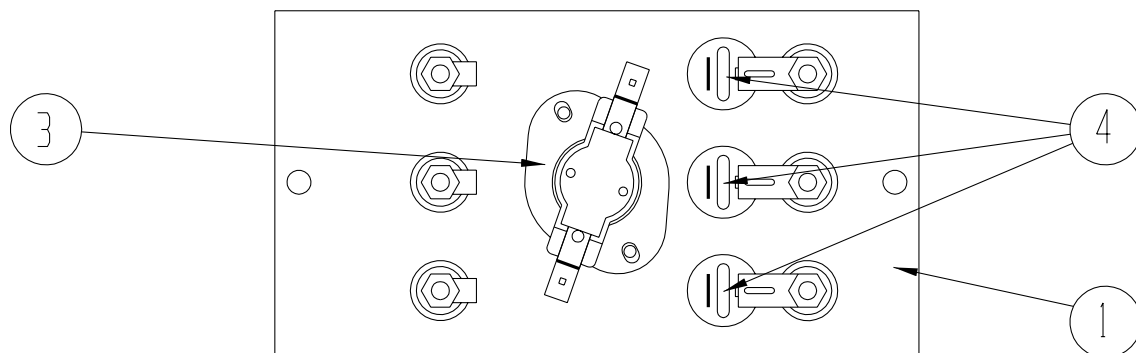

SEXP-165

# AIR CONDITIONING HEATER PACKAGES

Drawing No.	Part No.	Description	EHWA05-A05L	EHWA05-A10L	EHWA05-A15L	EHWA05-B06L	EHWA05-B09L	EHWA05A-C09L	EHWA05A-C15L	EHWA05HA10L	EHWA05HA15L	EHWA05HB09L	EHWA05HB15L	EHWA05NA05L	EHWA05NA10L	EHWA60-A05L	EHWA60-B09L	EHWA05A-F14L
1	8604-089	Heat Strip 5 KW	X		X					X	X			X		X		
1	8604-091	Heat Strip 10 KW		X	X					X	X				X			
1	8604-049	Heat Strip 6 KW				X						X	X					
1	8604-048	Heat Strip 9 KW					X					X	X				X	
1	8604-100	Heat Strip 6 KW							X									
1	8604-101	Heat Strip 9 KW						X	X									X
2	127Y210	Heater Control Base	X	X	X	X	X			X	X	X	X	X	X	X	X	
2	127-321	Heater Control Base						X	X									X
3	8402-074	Limit Control	X			X	X	X				X			X	X	X	
3	8402-075	Limit Control			X				X		X							X
3	8402-065	Limit Control		X						X				X				
4	8402-093	Thermal Cutoff	1		3						3				2	1		
4	8402-092	Thermal Cutoff				2	2					2	4	1			2	
4	8402-094	Thermal Cutoff						2	4									4
4	8402-096	Thermal Cutoff		2						2								
5	8615-067	Disconnect Switch						X	X									X
5	8615-037	Circuit Breaker 30A			X						X							
5	8615-042	Circuit Breaker 35A 3 PH				X	X											
5	8615-040	Circuit Breaker 50A	X											X				
5	8615-041	Circuit Breaker 60A 3 PH		X	X					2	2				X	X		
5	8615-044	Circuit Breaker 45A 3 PH															X	
5	8615-046	Circuit Breaker 60A										X	X					
5	8615-051	Circuit Breaker 25A 3 PH										X	X					
6	8401-006	Heat Contactor	X	X	2	X	X				X	X	2	X	X	X	X	
6	8401-002	Heat Contactor						X	2	X	X							2
7	8615-047	Jumper Bar Base			X					X								
7	8615-048	Jumper Bar Base									X							
8	8611-006	Ground Terminal			X					X	X		X					
9	8615-049	Jumper Bar Cover			X					X								
9	8615-050	Jumper Bar Cover									X							
NS	4097-120	Wiring Diagram	X											X		X		
NS	4097-140	Wiring Diagram		X											X			
NS	4097-152	Wiring Diagram			X													
NS	4097-220	Wiring Diagram				X	X										X	
NS	4097-233	Wiring Diagram											X					
NS	4097-322	Wiring Diagram						X										
NS	4097-332	Wiring Diagram							X									X
NS	4097-163	Wiring Diagram									X							
NS	4097-142	Wiring Diagram								X								
NS	4097-221	Wiring Diagram										X						

NS = Not Shown

# AIR CONDITIONING HEATER PACKAGES

Drawing No.	Part No.	Description	EHW36AHA05	EHW36AHA10	EHWH04-A10L	EHWL05HA20	EHW36AHB06	EHW36AHB09	EHW70LHB09	EHW70LHB18	EHW70L-B18	EHW36AHC09	EHW05L-C09	EHW36AHC12	EHW05L-C15
1	8604-089	Heat Strip 5 KW	X												
1	8604-095	Heat Strip 10 KW		X											
1	8604-091	Heat Strip 10 KW			X	2									
1	8604-046	Heat Strip 6 KW					X								
1	8604-048	Heat Strip 9 KW						X	X	2	2				
1	8604-101	Heat Strip 9 KW										X	X		
1	8604-100	Heat Strip 6 KW												2	X
2	127Y210	Heater Control Base	X	X	X	X	X	X	X	X	X				
2	127-321	Heater Control Base										X	X	X	X
3	8402-065	Limit Control	X				X	X				X			
3	8402-028	Limit Control		X											
3	8402-074	Limit Control			X				X				X		
3	8402-075	Limit Control				X				X	X				X
3	8402-070	Limit Control												X	
4	8402-091	Thermal Cutoff	X												
4	8402-096	Thermal Cutoff		X											
4	8402-093	Thermal Cutoff			2	4									
4	8402-092	Thermal Cutoff					2	2	2	4	4				
4	8402-095	Limit Control-Oneshot										2		4	
4	8402-094	Limit Control-Oneshot											2		4
5	8615-041	Circuit Breaker 60A	X	X	2	3									
5	8615-043	Circuit Breaker 40A					X								
5	8615-045	Circuit Breaker 50A						X							
5	8615-046	Circuit Breaker 60A							X	2	X				
5	8615-052	Circuit Breaker 30A							X		X				
5	8615-068	Rotary Disconnect										X	X	X	
5	8615-073	Rotary Disconnect													X
6	8401-006	Heat Contactor	X	X			X	X		2	2				
6	8401-002	Heat Contactor			X	X			X			X	X	2	2
7	8615-047	Jumper Bar Base			X										
7	8615-048	Jumper Bar Base				X									
8	8611-006	Ground Terminal				X	X			X	X	X			
9	8615-049	Jumper Bar Cover			X										
9	8615-050	Jumper Bar Cover				X									
NS	4097A121	Wiring Diagram	X												
NS	4097-141	Wiring Diagram		X											
NS	4097-142	Wiring Diagram			X										
NS	4097-162	Wiring Diagram				X									
NS	4097-221	Wiring Diagram					X	X							
NS	4097-235	Wiring Diagram							X						
NS	4097-247	Wiring Diagram								X					
NS	4097-233	Wiring Diagram									X				
NS	4097-322	Wiring Diagram										X	X		
NS	4097-332	Wiring Diagram												X	X

NS = Not Shown