

---

# REPLACEMENT PARTS MANUAL

# WALL MOUNT HEATER PACKAGES

**Models:** EHWH02-AXD  
EHWH30-AXD  
EHWH30-AXH  
EHWH30-AXK  
EHWH36-AXD  
EHWH36-AXH  
EHWH36-AXK  
EHWH04-AXH  
EHWH05-AXK  
EHWH05-AXH  
EHWH05-AXK

---

## General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

## Contents

Description	Page
Functional Components	
♦ Exploded View .....	1
♦ Usage List .....	2





**Climate Control Solutions**

Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506  
*Since 1914...Moving ahead, just as planned.*

Manual: 2110-616  
Supersedes:  
File: Tab 18  
Date: 04-02-04

---

# FUNCTIONAL COMPONENTS

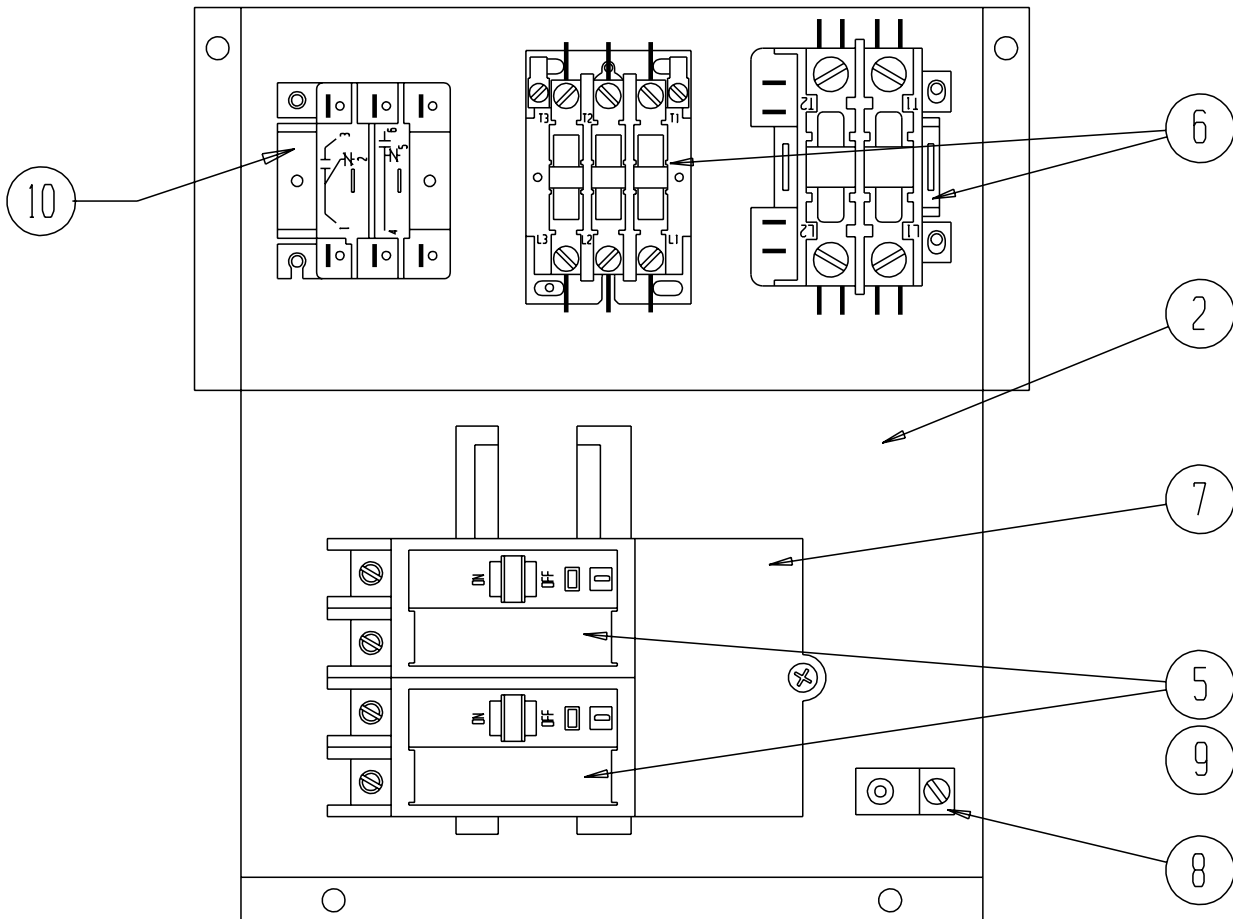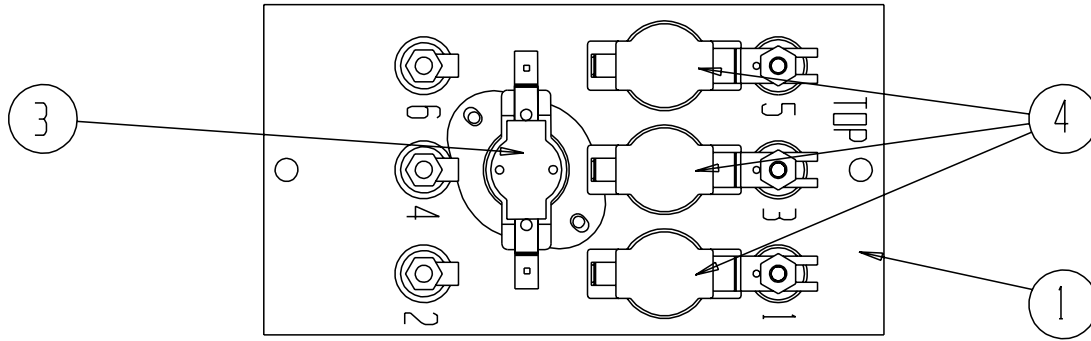

SEXP-432

# FUNCTIONAL COMPONENTS

Drawing No.	Part No.	Description	EHWH02-AXD	EHWH30-AXD	EHWH30-AXH	EHWH30-AXK	EHWH36-AXD	EHWH36-AXH	EHWH36-AXK	EHWH04-AXH	EHWH04-AXK	EHWH05-AXH	EHWH05-AXK
1	8604-116	Heat Strip 10 KW			X			X		X		X	
1	8604-117	Heat Strip 15 KW				X			X		X		X
1	8604-118	Heat Strip 5 KW	X	X			X						
2	127X210	Heater Control Base	X	X	X	X	X	X	X	X	X	X	X
3	8402-120	Limit Control Manual Reset		X	X	X	X	X					
3	8402-149	Limit Control Manual Reset								X	X		
3	8402-150	Limit Control Manual Reset	X										
3	8402-153	Limit Control Manual Reset										X	X
4	8402-132	Line Break Limit Control		X	X	X	X	X					
4	8402-137	Line Break Limit Control								X	X		
4	8402-121	Line Break Limit Control	X										
4	8402-152	Line Break Limit Control										X	X
5	8615-055	Circuit breaker 40A	X										
5	8615-040	Circuit Breaker 50A		X	X	X				X	X		
5	8615-041	Circuit Breaker 60A				X	X	2	X	X	X	2	2
6	8401-002	Heater Contactor 3 Pole			X	X		X	X	X	X	X	X
6	8401-006	Heater Contactor 2 Pole	X	X		X	X		X		X		X
7	8615-047	Jumper Bar				X			X	X	X	X	X
8	8611-006	Ground Terminal	X	X	X	X	X	X	X	X	X	X	X
9	8615-049	Jumper Bar Comver				X			X	X	X	X	X
10	8201-013	Emergency Heat Relay				X			X		X		X
NS	4097-170	Wiring Diagram	X	X			X						
NS	4097-171	Wiring Diagram			X			X					
NS	4097-172	Wiring Diagram				X			X				
NS	4097-173	Wiring Diagram								X		X	
NS	4097-174	Wiring Diagram									X		X

NS = Not Shown