

---

# WALL MOUNT HEATER PACKAGE

## REPLACEMENT PARTS MANUAL

### Models:

EHWA02-A05	EHWA02A-A08
EHWA02A-A05L	EHW02A-A08L
EHWA02A-A10	EHWA02-A10L
EHWH02A-A04	EHWH02A-A08
EHWA24A-A04	EHWA24-B06
EHWA24-B06L	EHW24H-A04
EHW24H-A08	EHW24H-B06
EHWH24B-C06	EHWH24B-C06L
EHW02A-A08	

---

## General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

## Contents

Description	Page
Functional Components	
♦ Exploded View .....	2
♦ Usage List .....	3
♦ Usage List .....	4




Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506

*Since 1914...Moving ahead, just as planned.*

Manual: 2110-620C  
Supersedes: 2110-620B  
File: Tab 18  
Date: 01-11-12

# FUNCTIONAL COMPONENTS

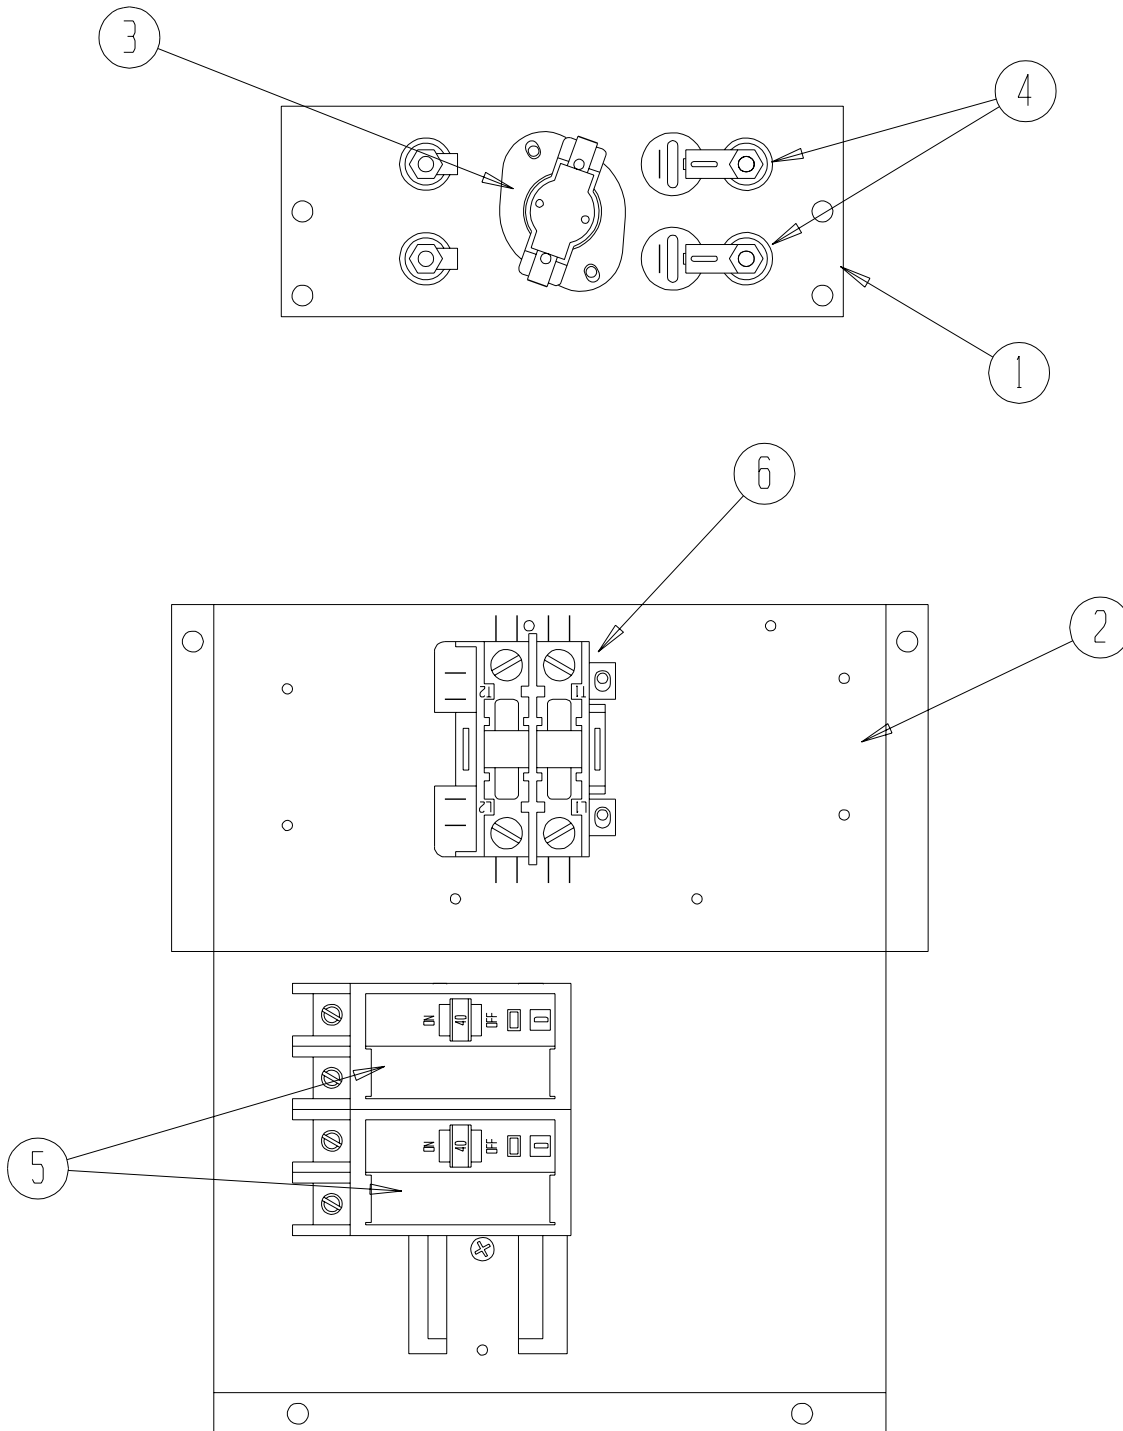

SEXP-173

Reference this Drawing for Pages 3 & 4

# FUNCTIONAL COMPONENTS

			EHWA02-A05	EHWA02A-A08	EHWA02A-A10	EHWA24-B06	EHW24H-A04	EHW24H-A08	EHW24H-B06	EHWH24B-C06	EHWA24A-A04	EHWH02A-A04	EHWH02A-A08	EHW02A-A08
1	8604-089	Heat Strip 5 KW	X											
1	8604-095	Heat Strip 10 KW			X									
1	8604-090	Heat Strip 8 KW		X				X					X	X
1	8604-049	Heat Strip 6 KW				X			X					
1	8604-088	Heat Strip 4 KW					X				X	X		
1	8604-100	Heat Strip 6 KW								X				
2	127X210	Heater Control Base	X	X	X	X	X	X	X		X	X	X	X
2	127-321	Heater Control Base								X				
3	8402-065	Limit Control Device	X		X	X			X	X				
3	8402-049	Limit Control Device					X				X	X		
3	8402-074	Limit Control Device		X				X					X	X
4	8402-091	Thermal Cutoff				2			2					
4	8402-114	Thermal Cutoff	X				X				X	X		
4	8402-094	Thermal Cutoff								2				
4	8402-093	Thermal Cutoff		2	2			2					2	2
5	8615-036	Circuit Breaker 25A						X			X			
5	8615-067	Disconnect Switch								X				
5	8615-037	Circuit Breaker 30A	X											
5	8615-041	Circuit Breaker 60A			X								X	
5	8615-055	Circuit Breaker 40A							X			X		
5	8615-039	Circuit Breaker 45A		X			X	X						
5	8615-051	Circuit Breaker 25A				X								
5	8615-040	Circuit Breaker 50A												X
5	8615-043	Circuit Breaker 40A							X					
6	8401-006	Heater Contactor	X	X	X	X	X	X	X		X	X	X	X
6	8401-002	Heater Contactor								X				
NS	4097-121	Wiring Diagram					X					X		
NS	4097-140	Wiring Diagram		X	X									X
NS	4097-220	Wiring Diagram				X								
NS	4097-221	Wiring Diagram							X					
NS	4097-120	Wiring Diagram	X								X			
NS	4097-322	Wiring Diagram								X				
NS	4097-141	Wiring Diagram						X					X	
NS	4097-131	Wiring Diagram												

NS – Not Shown

# FUNCTIONAL COMPONENTS

Drawing No.	Part No.	Description	EHWA02-A10L	EHWA24-B06L	EHWA02A-A05L	EHWA02A-A08L	EHWH24-C06L
1	8604-095	Heat Strip 10KW	X				
1	8604-090	Heat Strip 8KW				X	
1	8604-049	Heat Strip 6KW		X			
1	8604-089	Heat Strip 5KW			X		
1	8604-100	Heat Strip 6KW					X
2	127Y210	Heater Control Base	X	X	X	X	
2	127-211	Heater Control Base					X
3	8402-065	Limit Control	X	X			
3	8402-081	Limit Control			X	X	X
4	8402-114	Thermal Cutoff			X		
4	8402-093	Thermal Cutoff	2	2		2	
4	8402-094	Thermal Cutoff					X
5	8615-037	Circuit Breaker 30A			X		
5	8615-041	Circuit Breaker 60A	X				
5	8615-039	Circuit Breaker 45A				X	
5	8615-051	Circuit Breaker 25A		X			
5	8615-053	Pull Disconnect					X
6	8401-006	Heat Contactor	X	X	X	X	
6	8401-002	Heat Contactor					X
NS	4097-140	Wiring Diagram	X			X	
NS	4097-220	Wiring Diagram		X			
NS	4097-120	Wiring Diagram			X		
NS	4097-322	Wiring Diagram					X

NS – Not Shown