
REPLACEMENT PARTS MANUAL

Wall-Mount Heater Package

Models:

EHWA018A-A05	EHWA030A-C05	EHWA036ADA05	EHWL030A-A05
EHWA018A-A08	EHWA030A-C09	EHWA036ADA10	EHWL030A-A10
EHWA018A-A10	EHWA030A-C15	EHWA036ADB09	EHWL030A-A15
EHWA024A-A05	EHWA030ADC05	EHWA036ADC05	EHWL030A-B09
EHWA024A-B05	EHWA036A-A15	EHWA036ADC09	EHWL030A-B15
EHWA024A-C05	EHWA036A-B05	EHWL018A-A05	EHWL030B-B15
EHWA030A-A05	EHWA036B-B05	EHWL018A-A10	EHWL030A-C09
EHWA030A-A10	EHWA036A-B15	EHWL024A-A05	EHWL030A-C15
EHWA030A-A15	EHWA036A-C05	EHWL024A-B05	EHWL036A-A15
EHWA030A-B09	EHWA036A-C09	EHWL024A-C05	EHWL036A-B15
EHWA030A-B15	EHWA036A-C15		EHWL036A-C09
EHWA030B-B15			EHWL036A-C15

Contents

Description	Page
Functional Components	
♦ Layout View	2
♦ Usage List	3
♦ Usage List	4

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Important

- Contact the installing and/or local Bard distributor for all parts requirements. Make sure to have the complete model and serial number available from the unit rating plates.




Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 2110-632C
Supersedes: 2110-632B
Date: 5-1-24

Climate Control Solutions

FUNCTIONAL COMPONENTS

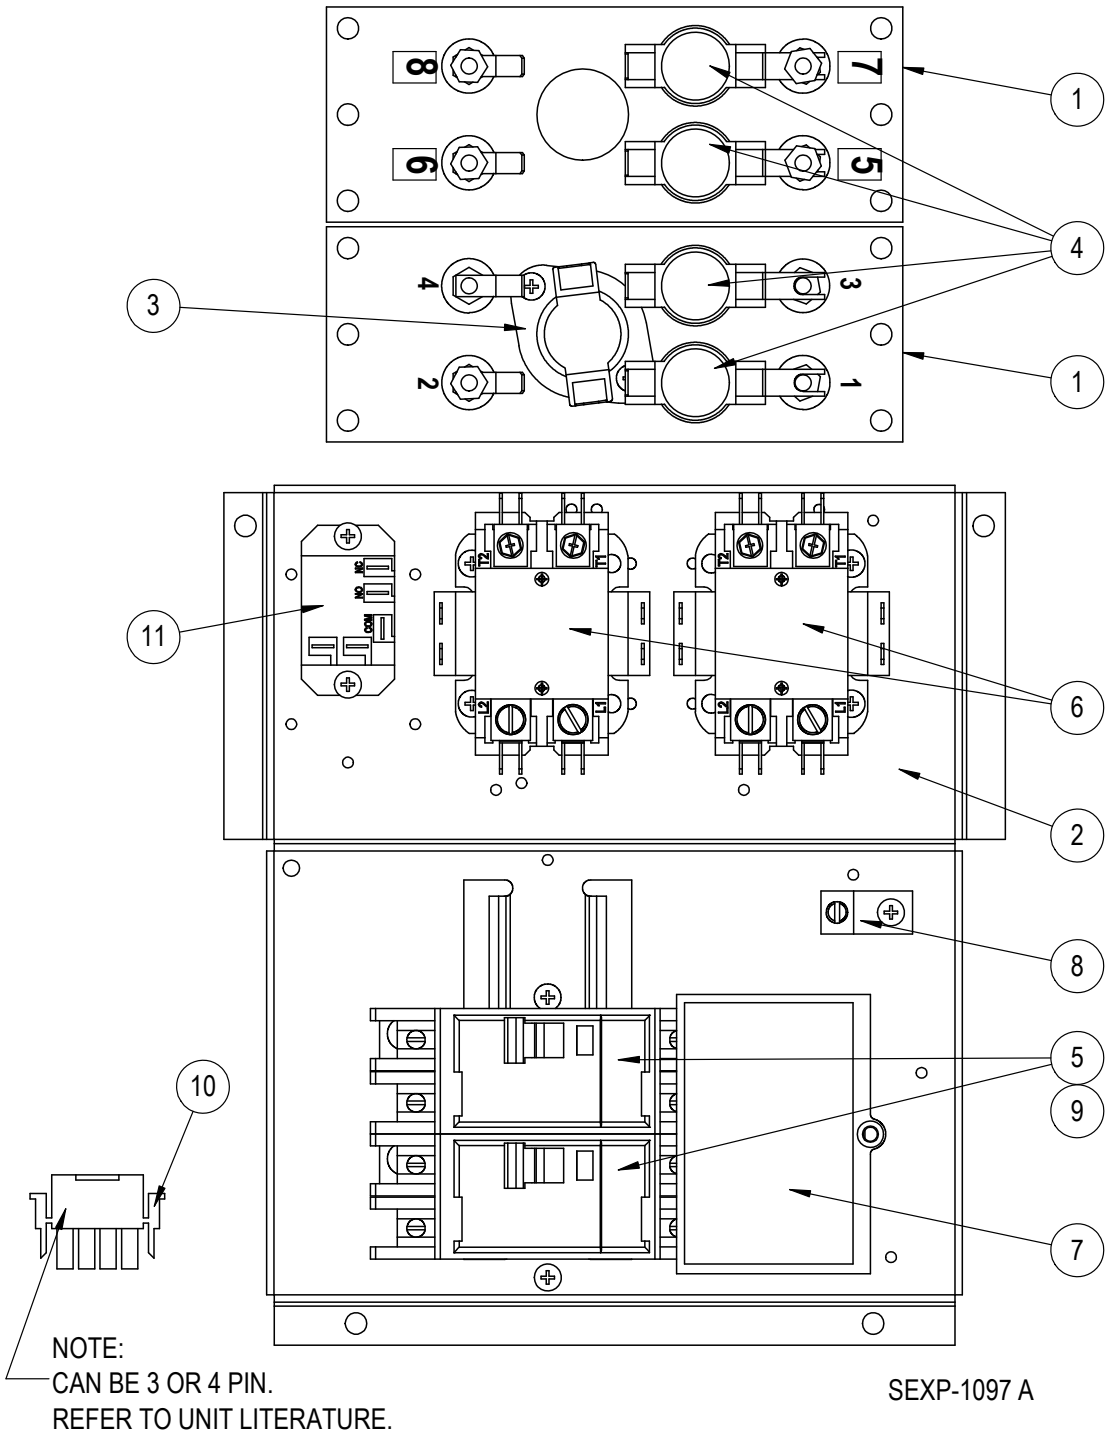

This drawing is referenced in tables on pages 3 and 4

FUNCTIONAL COMPONENTS

Dwg. No.	Part No.	Description	EHWL018A-A05	EHWL018A-A10	EHWL024A-A05	EHWL024A-B05	EHWL024A-C05	EHWL030A-A05	EHWL030A-A10	EHWL030A-A15	EHWL030A-B09	EHWL030A-B15	EHWL030B-B15	EHWL030A-C09	EHWL030A-C15	EHWL036A-A15	EHWL036A-B15	EHWL036A-C09	EHWL036A-C15
1	8604-100BX	Heat Strip 6KW 480V 3 TERM												X					X
1	8604-101BX	Heat Strip 9KW 480V 3 TERM												X	X				X
1	8604-116BX	Heat Strip 10KW 240V 4 TERM	X	X				X	X							X			X
1	8604-118BX	Heat Strip 5KW 240V 2 TERM L	X		X			X	X										X
1	8604-121BX	Heat Strip 9KW 240V 3 TERM L								X	X	X							X
1	8604-126BX	Heat Strip 6KW 240V 3 TERM L									X	X							X
1	8604-155BX	Heat Strip 5KW 480V 3 PH				X													
1	8604-159BX	Heat Strip 5KW 240V 3 TERM L				X													X
1	8604-169BX	Heat Strip 5KW 240V 2 TERM L																	X
2	127-321BX	Heat Control Base	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2	127Y210BX	Heat Control Base	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
3	8402-220BX	Limit Control L130-4.5	X		X			X											X
3	8402-221BX	Limit Control L140-5.5						X											X
3	8402-222BX	Limit Control L150-5.5				X	X												X
3	8402-224BX	Limit Control L160-7.0		X						X									X
3	8402-225BX	Limit Control L170-8.0								X				X					X
3	8402-226BX	Limit Control L180-8.0									X	X				X			X
3	8402-227BX	Limit Control L190-8.0												X					X
4	8402-094BX	Limit Control 210 DEG ONESHOT								3		4	4						
4	8402-095BX	Limit Control 190 DEG ONESHOT						1						2					
4	8402-098BX	Limit Control 200 DEG ONESHOT																	4
4	8402-128BX	Limit Control 220 DEG ONESHOT												4		3			4
4	8402-230BX	Limit Control 185 DEG ONESHOT	1	2	1	2	2		2		2							2	
5	8615-037BX	Circuit Breaker 30A 2 Pole	X						X							X			
5	8615-038BX	Circuit Breaker 35A 2 Pole			X			X		X						X			
5	8615-041BX	Circuit Breaker 60A 2 Pole		X					X	X						X			
5	8615-042BX	Circuit Breaker 35A 3 Pole									X								
5	8615-045BX	Circuit Breaker 50A 3 Pole										X							
5	8615-046BX	Circuit Breaker 60A 3 Pole											X						X
5	8615-054BX	Circuit Breaker 20A 3 Pole				X								X	X				X
5	8615-095BX	Toggle Disconnect				X								X	X				X
6	8401-035BX	Contactor 3 Pole 25 Amp	X		X	X	X	X		X	2	2	X	2		X	2	X	2
6	8401-033BX	Contactor 2 Pole 20 Amp		X					X	X						X			
6	8401-034BX	Contactor 2 Pole 40 Amp		X					X	X						X			
7	8615-047BX	Jumper Bar Base 4 Pole								X						X			
8	8611-281	Terminal	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
9	8615-049BX	Jumper Bar Cover 4 Pole								X						X			
10	3000-1762	Wire Assembly	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
10	3000-1763	Wire Assembly								X	X	X		X	X	X	X		X
NS	116-436BX	Cover Plate 3PH				X					X	X	X						X
NS	8615-096BX	Disconnect Cover					X							X	X				X
NS	4116-127	Wiring Diagram	X		X			X											
NS	4116-128	Wiring Diagram		X					X										
NS	4116-129	Wiring Diagram								X									
NS	4116-130	Wiring Diagram																	
NS	4116-227	Wiring Diagram				X					X								
NS	4116-228	Wiring Diagram										X	X						
NS	4116-229	Wiring Diagram																	
NS	4116-327	Wiring Diagram					X							X					X
NS	4116-328	Wiring Diagram												X	X				X

NS = Not Shown

This table references drawing on page 2