

---

# MASTER CONTROLLER

## Replacement Parts Manual

### Models:

MC91A      MC91AE  
MC92A      MC92AE  
MC93AE    MC94AE  
MC94AEH

---

### General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

### Contents

Description	Page
Functional and Cabinet Components	
♦ Exploded View .....	1
♦ Usage List .....	2




**BARD MANUFACTURING COMPANY**  
Bryan, Ohio 43506

*Since 1914...Moving ahead, just as planned.*

Manual: 2110-654F  
Supersedes: Rev. E  
Date: 05-27-97

# Functional and Cabinet Components

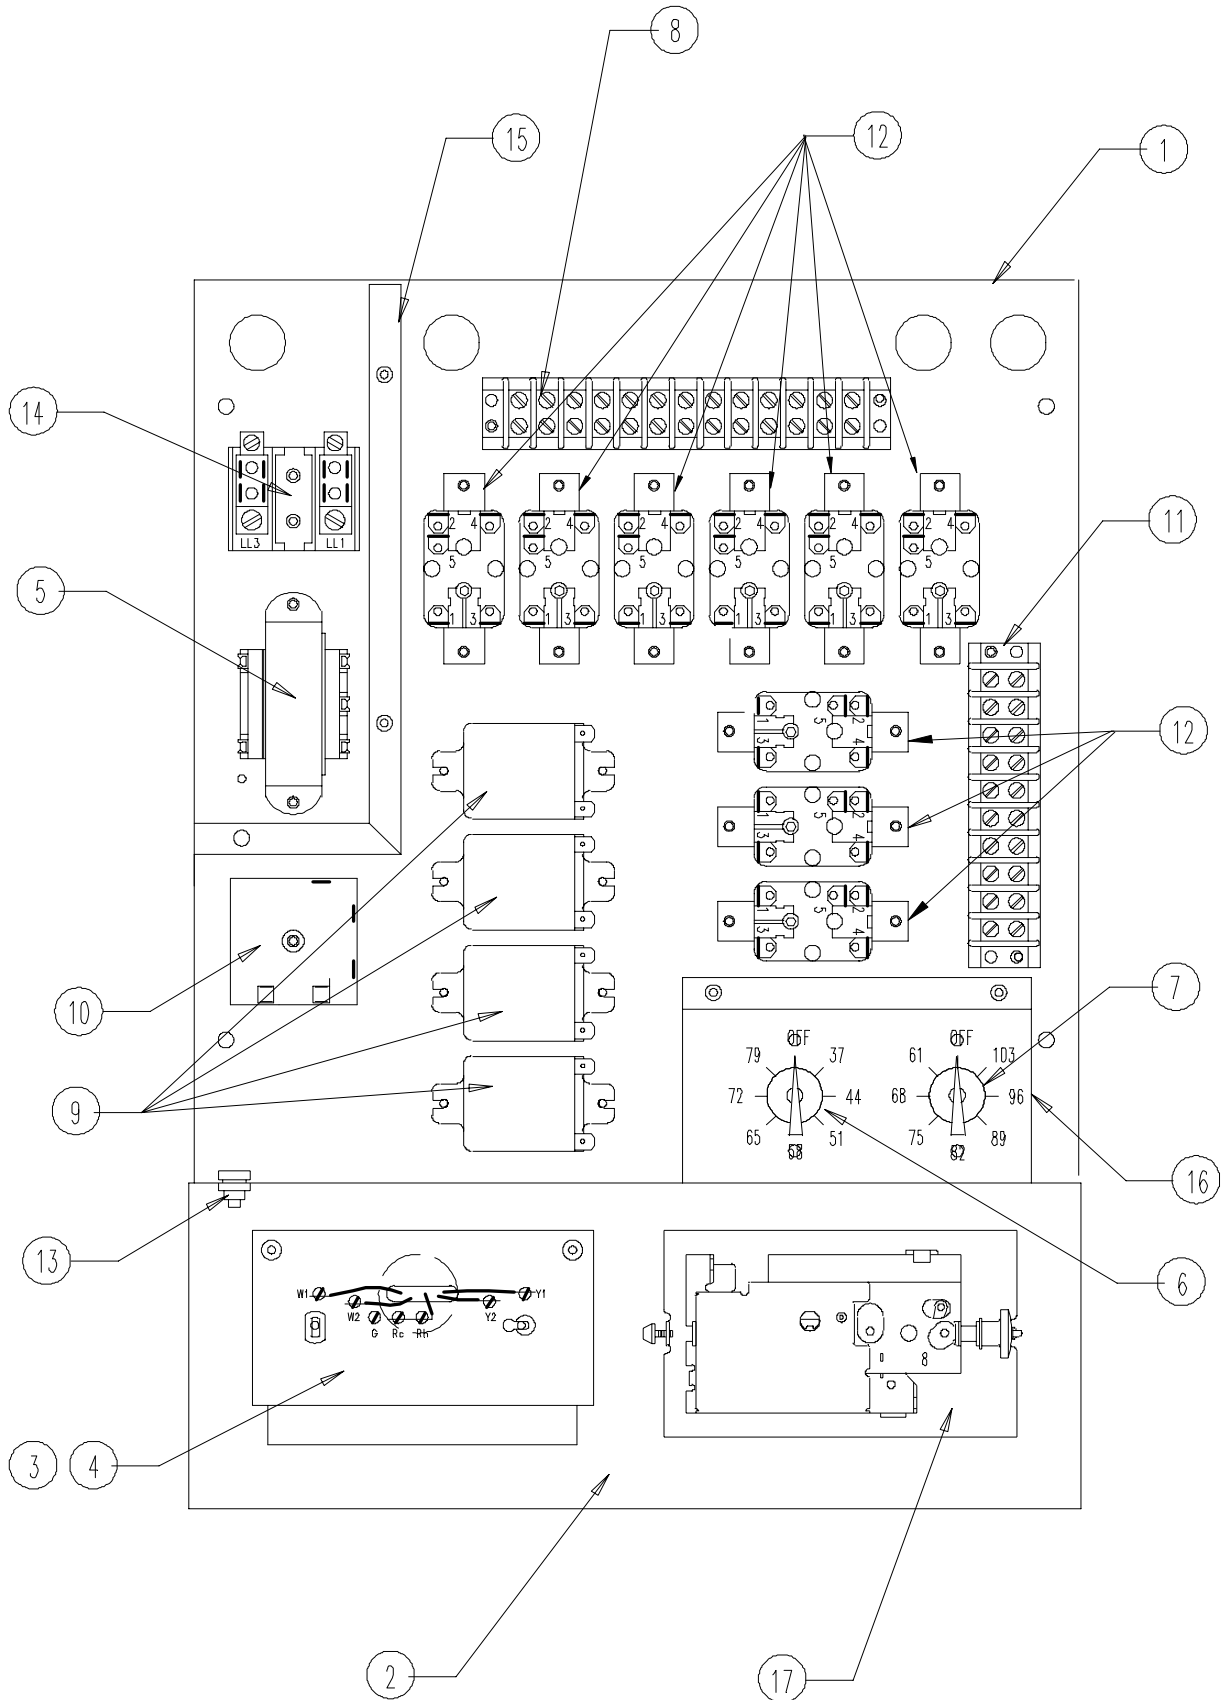

## Functional and Cabinet Components

Drawing No.	Part No.	Description	MC91A	MC91AE	MC92A	MC92AE	MC93AE	MC94AE	MC94AEH
1	127-209-X	Base	X	X	X	X	X	X	X
2	141-186-X	Thermostat Mounting Base	X	X	X	X	X	X	X
3	8404-013	Subbase	X	X	X	X	X	X	X
4	8403-031	Thermostat	X	X	X	X	X	X	X
5	8407-041	Transformer	X	X	X	X	X	X	X
6	8408-021	Low Alarm Thermostat	X	X	X	X	X	X	X
7	8408-022	High Alarm Thermostat	X	X	X	X	X	X	X
8	8607-006	Terminal Strip (8 position)					2		
8	8607-010	Terminal Strip (13 position)	X	X	X	X		X	X
9	8201-048	Switching Relay	2	3	3	4	4	3	4
10	8612-014	24 hour and 7 Day Recycle Timer	X	X	X	X	X	X	X
11	8607-011	Terminal Strip (10 position)		X	X	X	X	X	X
11	8607-006	Terminal Strip (8 position)			X				
11	8607-010	Terminal Strip (13 position)	X						
12	8201-062	Relays	8	9	8	9	9	9	9
13	8406-082	Timer Speedup Switch	X	X	X	X	X	X	X
14	8607-013	Terminal Block	X	X	X	X	X	X	X
15	117-136-X	High Voltage Box	X	X	X	X	X	X	X
16	141-187-X	Mounting Bracket	X	X	X	X	X	X	X
17	8403-038	Humidistat							X
NS	133-108-X	Control Cover	X	X	X	X	X	X	X
NS	4093-111	Wiring Diagram	X						
NS	4093-112	Wiring Diagram		X					
NS	4093-118	Wiring Diagram				X			
NS	4093-119	Wiring Diagram			X				
NS	4093-124	Wiring Diagram					X		
NS	4093-125	Wiring Diagram						X	
NS	4093-128	Wiring Diagram							X