
MASTER CONTROLLER

REPLACEMENT PARTS MANUAL

Models:

MC91A MC91AE
MC92A MC92AE
MC93AE MC94AE
MC94AEH MC96AEH

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Contents

<u>Description</u>	<u>Page</u>
Functional and Cabinet Components	
♦ Exploded View	1
♦ Usage List	2

Important

- Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.




BARD MANUFACTURING COMPANY
Bryan, Ohio 43506

Since 1914....Moving ahead, just as planned.

Manual: 2110-654G
Supersedes: 2110-654F
Date: 04-23-01

FUNCTIONAL AND CABINET COMPONENTS

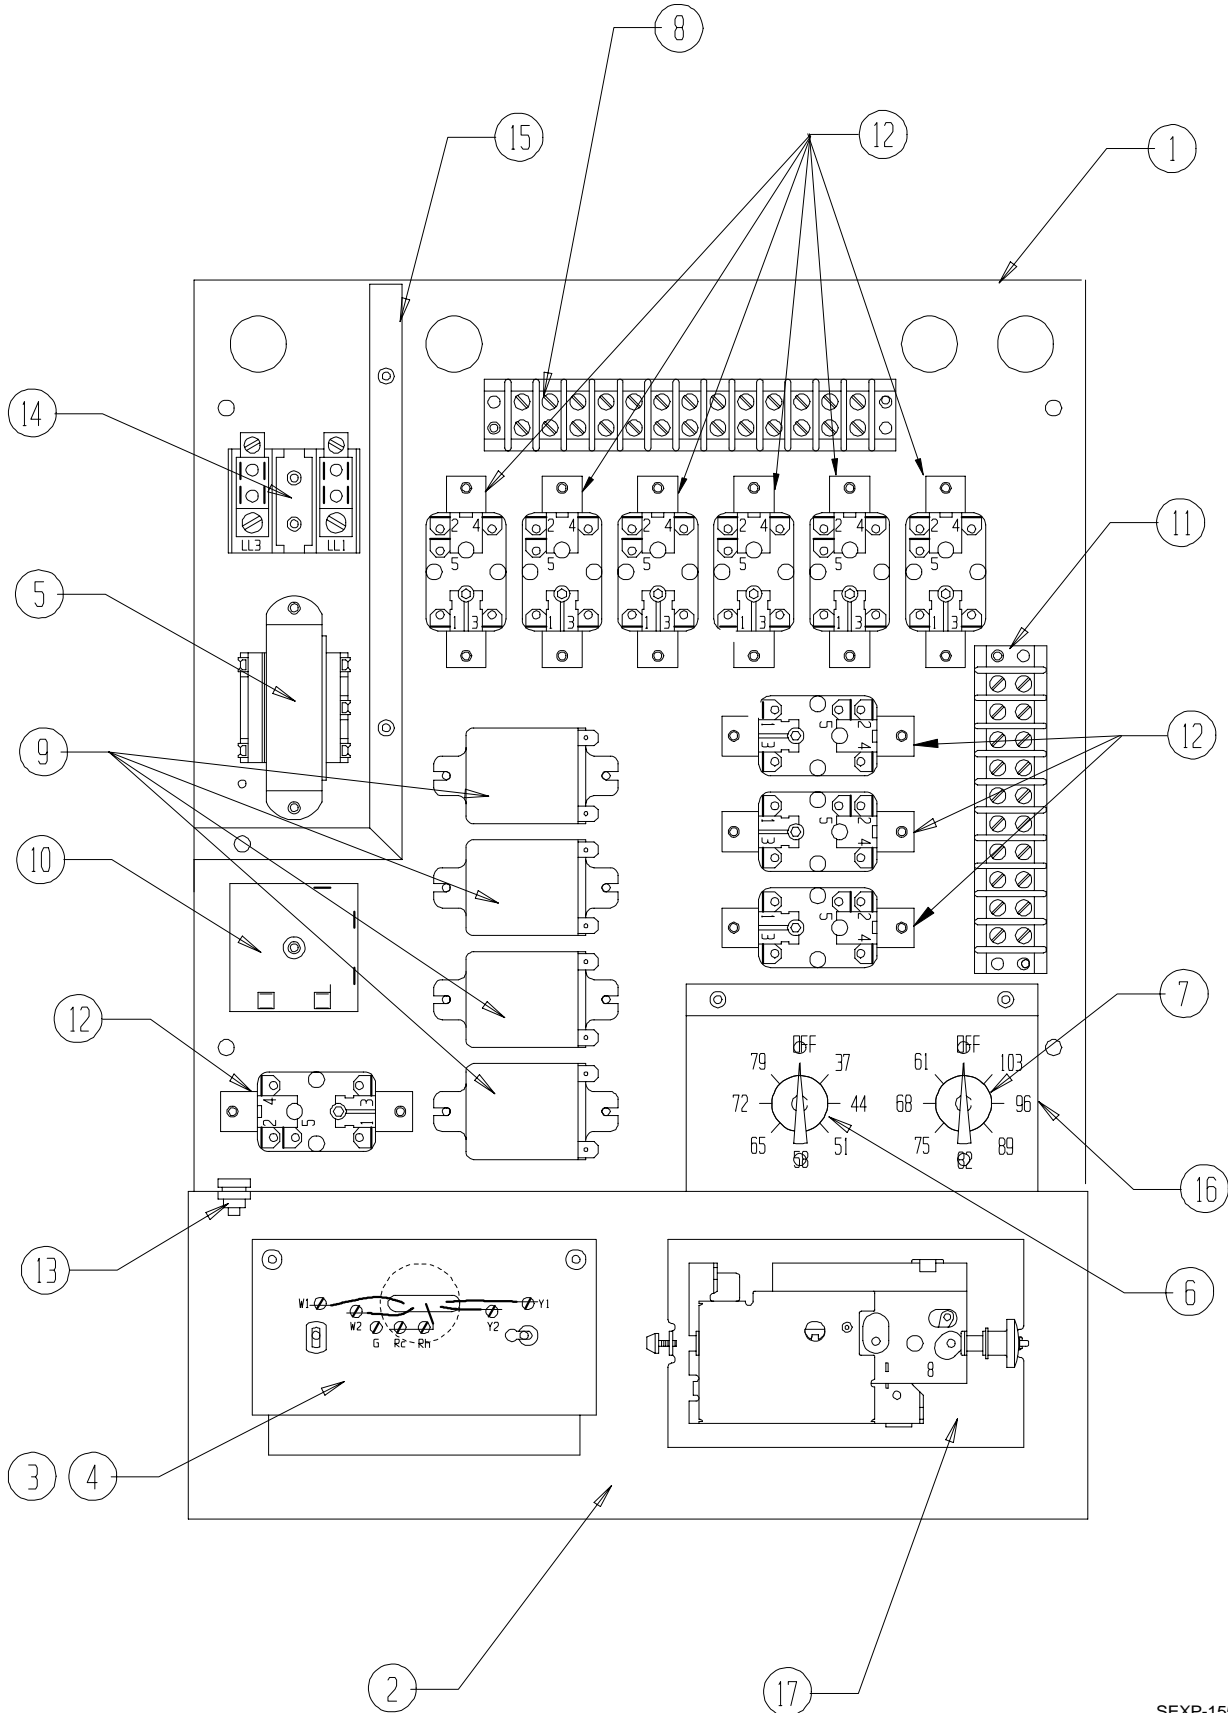

SEXP-155

FUNCTIONAL AND CABINET COMPONENTS

Drawing No.	Part No.	Description	MC91A	MC91AE	MC92A	MC92AE	MC93AE	MC94AE	MC94AEH	MC96AEH
1	127-209-X	Base	X	X	X	X	X	X	X	X
2	141-186-X	Thermostat Mounting Base	X	X	X	X	X	X	X	X
3	8404-013	Subbase	X	X	X	X	X	X	X	X
4	8403-031	Thermostat	X	X	X	X	X	X	X	X
5	8407-041	Transformer	X	X	X	X	X	X	X	X
6	8408-021	Low Alarm Thermostat	X	X	X	X	X	X	X	X
7	8408-022	High Alarm Thermostat	X	X	X	X	X	X	X	X
8	8607-006	Terminal Strip (8 position)					2			
8	8607-010	Terminal Strip (13 position)	X	X	X	X		X	X	X
9	8201-048	Switching Relay	2	3	3	4	4	3	4	4
10	8612-014	24 hour and 7 Day Recycle Timer	X	X	X	X	X	X	X	X
11	8607-011	Terminal Strip (10 position)		X	X	X	X	X	X	X
11	8607-006	Terminal Strip (8 position)			X					
11	8607-010	Terminal Strip (13 position)	X							
12	8201-062	Relays	8	9	8	9	9	9	9	10
13	8406-082	Timer Speedup Switch	X	X	X	X	X	X	X	X
14	8607-013	Terminal Block	X	X	X	X	X	X	X	X
15	117-136-X	High Voltage Box	X	X	X	X	X	X	X	X
16	141-187-X	Mounting Bracket	X	X	X	X	X	X	X	X
17	8403-038	Humidistat							X	X
NS	133-108-X	Control Cover	X	X	X	X	X	X	X	X
NS	4093-111	Wiring Diagram	X							
NS	4093-112	Wiring Diagram		X						
NS	4093-118	Wiring Diagram				X				
NS	4093-119	Wiring Diagram			X					
NS	4093-124	Wiring Diagram					X			
NS	4093-125	Wiring Diagram						X		
NS	4093-128	Wiring Diagram							X	
NS	4093-134	Wiring Diagram								X

NS = Not Shown