
MASTER CONTROLLER

Models:

REPLACEMENT PARTS MANUAL

MC91A MC91AE
MC92A MC92AE
MC93AE MC94AE
MC94AEH MC96AEH
MC97AE

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Important

- Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.

Contents


<u>Description</u>	<u>Page</u>
Functional and Cabinet Components	
♦ Exploded View	1
♦ Usage List	2



BARD MANUFACTURING COMPANY
Bryan, Ohio 43506
Since 1914....Moving ahead, just as planned.

Manual: 2110-654H
Supersedes: 2110-654G
Date: 10-22-01

FUNCTIONAL AND CABINET COMPONENTS

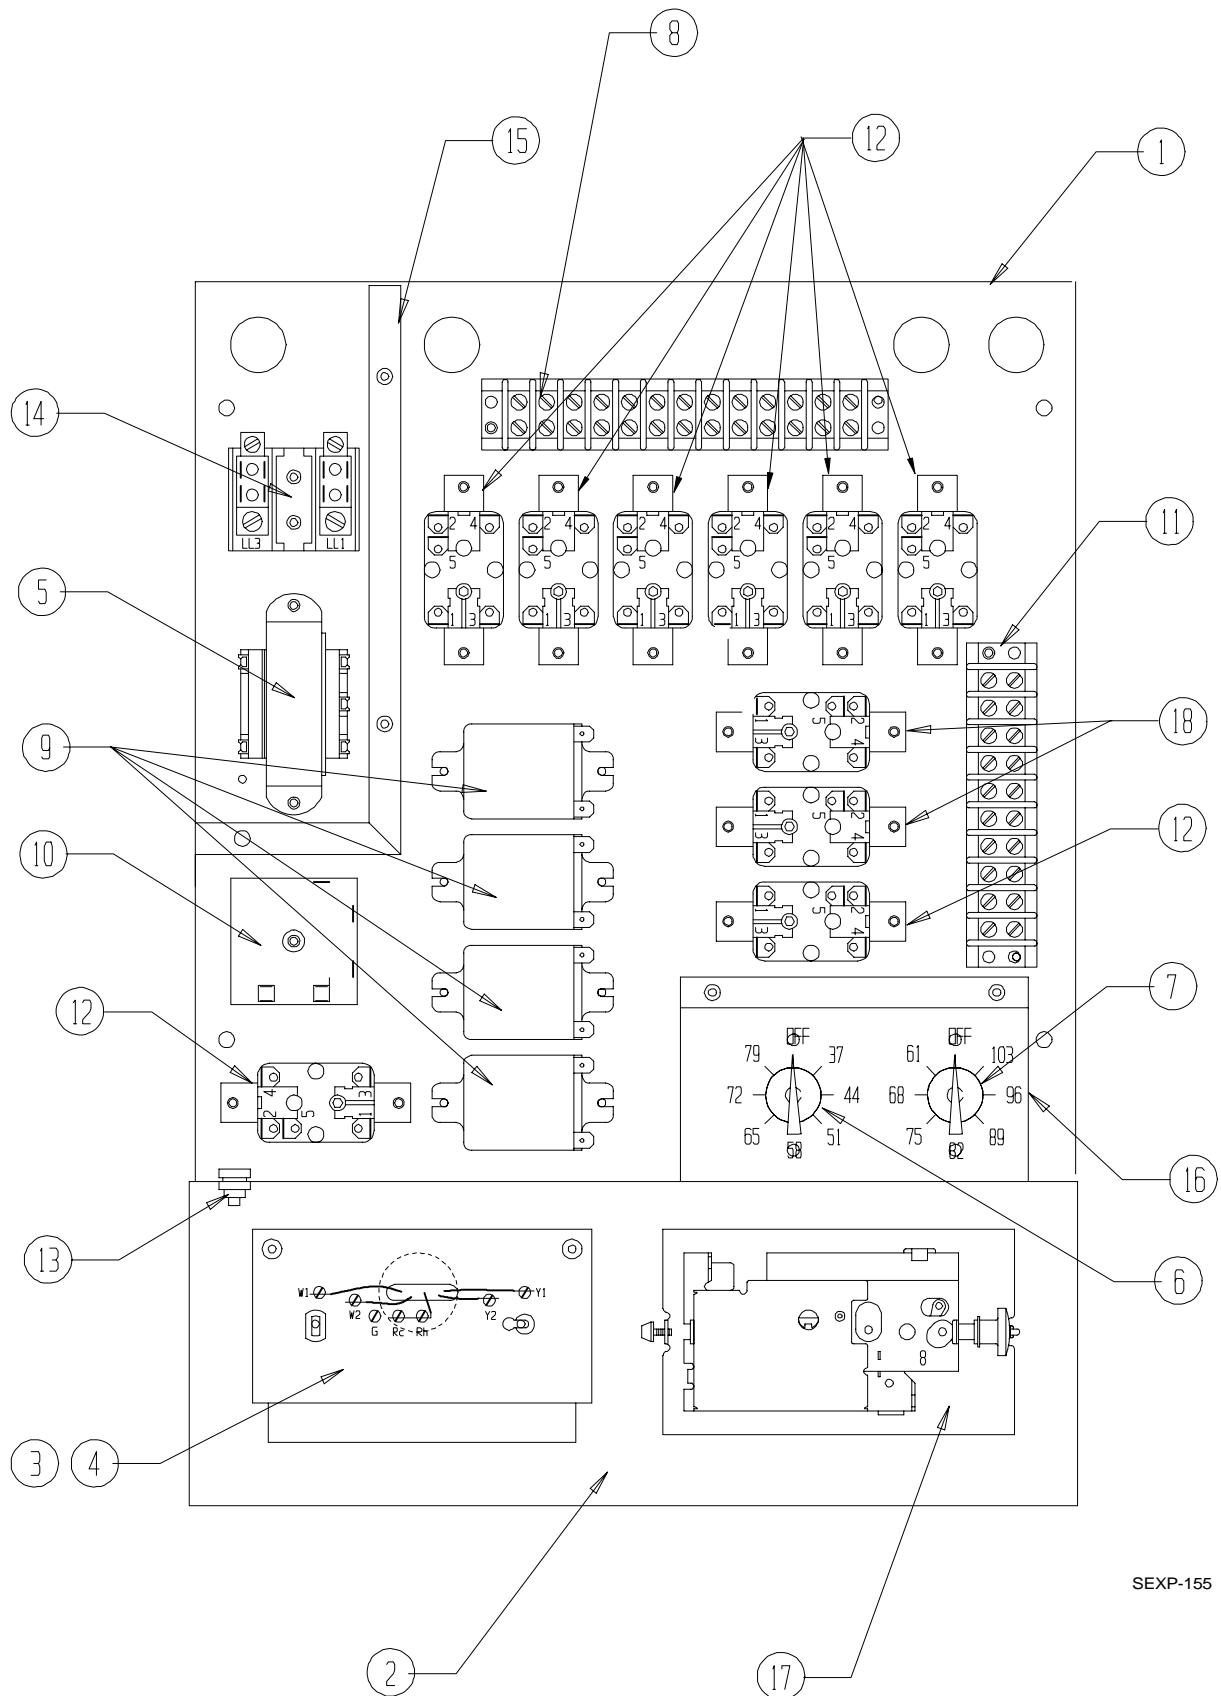

SEXP-155

FUNCTIONAL AND CABINET COMPONENTS

Drawing No.	Part No.	Description	MC91A	MC91AE	MC92A	MC92AE	MC93AE	MC94AE	MC94AEH	MC96AEH	MC97AE
1	127-209-X	Base	X	X	X	X	X	X	X	X	X
2	141-186-X	Thermostat Mounting Base	X	X	X	X	X	X	X	X	X
3	8404-013	Subbase	X	X	X	X	X	X	X	X	X
4	8403-031	Thermostat	X	X	X	X	X	X	X	X	X
5	8407-041	Transformer	X	X	X	X	X	X	X	X	X
6	8408-021	Low Alarm Thermostat	X	X	X	X	X	X	X	X	X
7	8408-022	High Alarm Thermostat	X	X	X	X	X	X	X	X	X
8	8607-006	Terminal Strip (8 position)				2	2				X
8	8607-010	Terminal Strip (13 position)	X	X	X			X	X	X	
8	8607-011	Terminal Strip (10 position)									X
9	8201-048	Switching Relay	2	3	3	4	4	3	4	4	4
10	8612-014	24 Hour and 7Day Recycle Timer	X	X	X	X	X	X	X	X	X
11	8607-006	Terminal Strip (8 position)			X						
11	8607-010	Terminal Strip (13 position)	X								
11	8607-011	Terminal Strip (10 position)		X	X	X	X	X	X	X	X
12	8201-062	Relays	6	7	6	7	7	7	7	8	7
13	8406-082	Timer Speedup Switch	X	X	X	X	X	X	X	X	X
14	8607-013	Terminal Block	X	X	X	X	X	X	X	X	X
15	117-136-X	High Voltage Box	X	X	X	X	X	X	X	X	X
16	141-187-X	Mounting Bracket	X	X	X	X	X	X	X	X	X
17	8403-038	Humidistat							X	X	
18	8201-062	Relay	2	2	2	2	2	2	2	2	
18	8201-048	Relay									2
NS	133-108-X	Control Cover	X	X	X	X	X	X	X	X	X
NS	4093-111	Wiring Diagram	X								
NS	4093-112	Wiring Diagram		X							
NS	4093-118	Wiring Diagram				X					
NS	4093-119	Wiring Diagram			X						
NS	4093-124	Wiring Diagram					X				
NS	4093-125	Wiring Diagram						X			
NS	4093-128	Wiring Diagram							X		
NS	4093-134	Wiring Diagram								X	
NS	4093-135	Wiring Diagram									X

NS = Not Shown