
MASTER CONTROLLER

Models:

REPLACEMENT PARTS MANUAL

MC91A MC91AE
MC92A MC92AE
MC93AE MC94AE
MC94AEH MC96AEH
MC97AE-1

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Contents

<u>Description</u>	<u>Page</u>
Functional and Cabinet Components	
♦ Exploded View	1
♦ Usage List	2

Important

- Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.




CLIMATE CONTROL SOLUTIONS

BARD MANUFACTURING COMPANY
Bryan, Ohio 43506

Since 1914....Moving ahead, just as planned.

Manual: 2110-654I
Supersedes: 2110-654H
File: Tab 19
Date: 03-28-02

FUNCTIONAL AND CABINET COMPONENTS

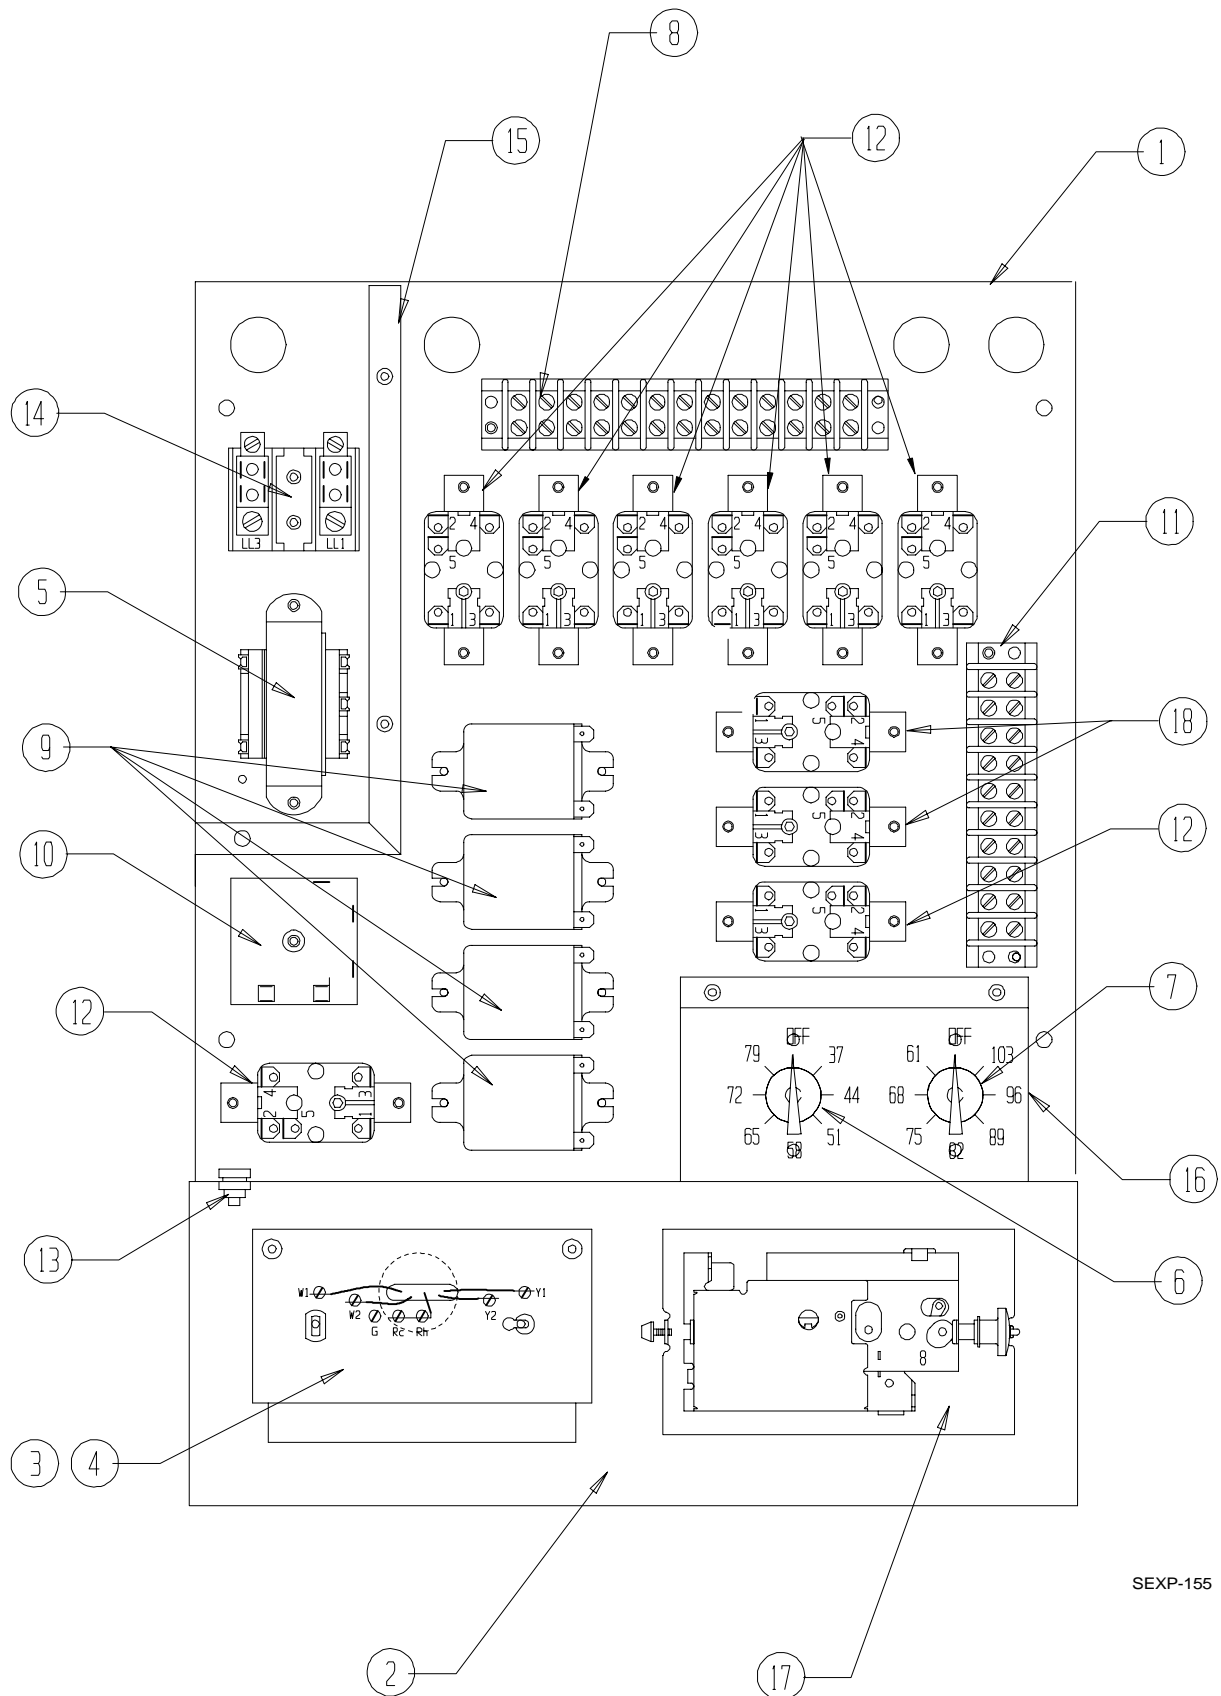

SEXP-155

FUNCTIONAL AND CABINET COMPONENTS

Drawing No.	Part No.	Description	MC91A	MC91AE	MC92A	MC92AE	MC93AE	MC94AE	MC94AEH	MC96AEH	MC97AE-1
1	127-209-X	Base	X	X	X	X	X	X	X	X	X
2	141-186-X	Thermostat Mounting Base	X	X	X	X	X	X	X	X	X
3	8404-013	Subbase	X	X	X	X	X	X	X	X	X
4	8403-031	Thermostat	X	X	X	X	X	X	X	X	X
5	8407-041	Transformer	X	X	X	X	X	X	X	X	X
6	8408-021	Low Alarm Thermostat	X	X	X	X	X	X	X	X	X
7	8408-022	High Alarm Thermostat	X	X	X	X	X	X	X	X	X
8	8607-006	Terminal Strip (8 position)				2	2				X
8	8607-010	Terminal Strip (13 position)	X	X	X			X	X	X	
8	8607-011	Terminal Strip (10 position)									X
9	8201-048	Switching Relay	2	3	3	4	4	3	4	4	4
10	8612-014	24 Hour and 7Day Recycle Timer	X	X	X	X	X	X	X	X	X
11	8607-006	Terminal Strip (8 position)			X						
11	8607-010	Terminal Strip (13 position)	X								
11	8607-011	Terminal Strip (10 position)		X	X	X	X	X	X	X	X
12	8201-062	Relays	6	7	6	7	7	7	7	8	8
13	8406-082	Timer Speedup Switch	X	X	X	X	X	X	X	X	X
14	8607-013	Terminal Block	X	X	X	X	X	X	X	X	X
15	117-136-X	High Voltage Box	X	X	X	X	X	X	X	X	X
16	141-187-X	Mounting Bracket	X	X	X	X	X	X	X	X	X
17	8403-038	Humidistat							X	X	
18	8201-062	Relay	2	2	2	2	2	2	2	2	
18	8201-048	Relay									2
NS	133-108-X	Control Cover	X	X	X	X	X	X	X	X	X
NS	4093-111	Wiring Diagram	X								
NS	4093-112	Wiring Diagram		X							
NS	4093-118	Wiring Diagram				X					
NS	4093-119	Wiring Diagram			X						
NS	4093-124	Wiring Diagram					X				
NS	4093-125	Wiring Diagram						X			
NS	4093-128	Wiring Diagram							X		
NS	4093-134	Wiring Diagram								X	
NS	4093-135	Wiring Diagram									X

NS = Not Shown