

REPLACEMENT PARTS MANUAL

MASTER CONTROLLER MODEL MC91A, MC91AE

Manual 2110-654 Revision Date 01-10-92 Supersedes

* GENERAL NOTES *

*Revised and/or additional pages may be issued from time to time.
*A complete and current manual consists of pages dated as shown in the following index.


** INDEX **

<u>Page Description</u>	<u>Page</u>	<u>Date</u>	<u>Supersedes</u>
Functional and Cabinet Components--Exploded View	1	01-10-92	
" " " " --Usage List	2	01-10-92	

*** IMPORTANT ***

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

FUNCTIONAL AND CABINET COMPONENTS

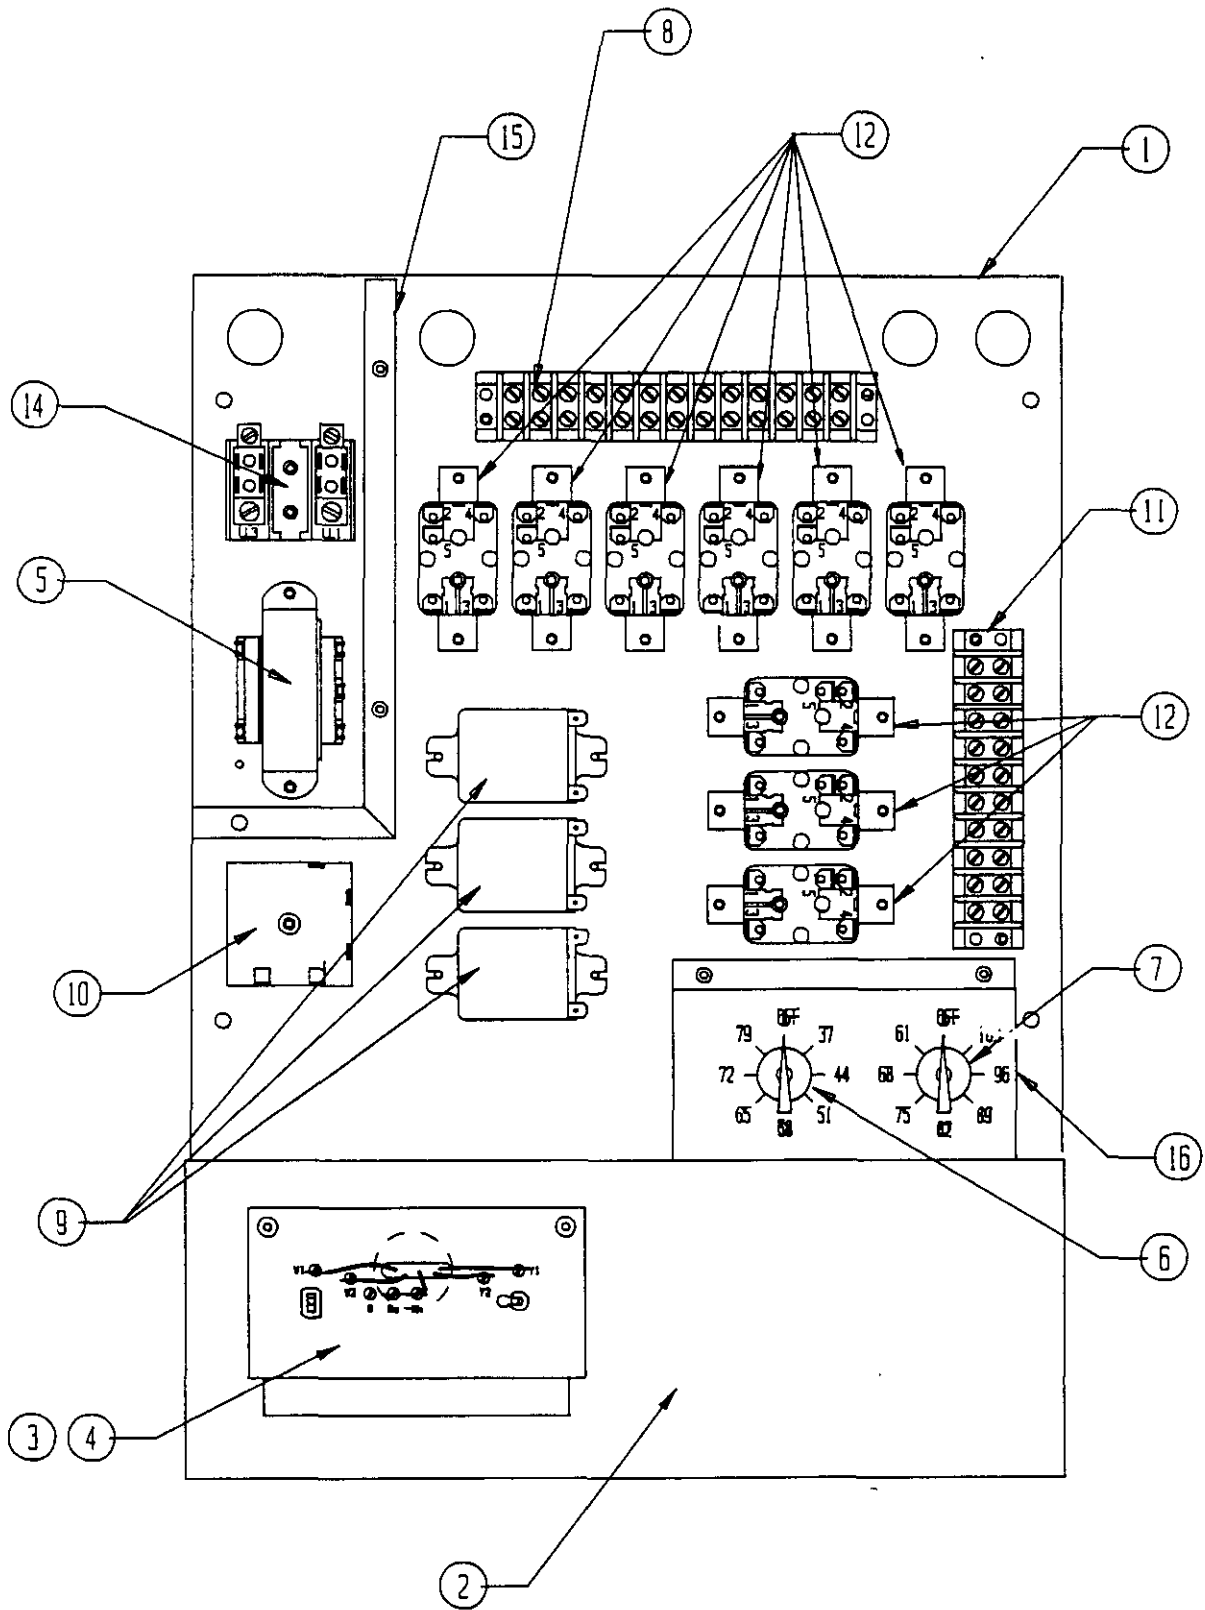

Date: 01-10-92
 Supersedes:

FUNCTIONAL AND CABINET COMPONENTS

Dwg. No.	Part No.	Description	MC91A	MC91AE
1	126-209	Base	X	X
2	140-186	Thermostat Mounting Base	X	X
3	8404-013	Subbase	X	X
4	8406-031	Thermostat	X	X
5	8407-041	Transformer	X	X
6	8408-021	Low Alarm Thermostat	X	X
7	8408-022	High Alarm Thermostat	X	X
8	8607-010	Terminal Strip	X	X
9	8201-048	Switching Relay	2	2
10	8612-014	24 Hour Recycle Timer	X	X
11	8607-011	Terminal Strip		X
11	8607-010	Terminal Strip	X	
12	8201-062	Relays	X	X
14	8607-013	Terminal Block	X	X
15	116-136	High Voltage Box	X	X
16	140-187	Mounting Bracket	X	X
	132-108	Control Cover	X	X
	4093-111	Wiring Diagram	X	
	4093-112	Wiring Diagram		X

Date: 01-10-92
Supersedes:

