

---

# REPLACEMENT PARTS MANUAL

---

## COMMERCIAL ROOM VENTILATOR

Models:

CRVS-3    CRVS-5    CRVMWH-3  
CRVP-3    CRVP-5  
CRVP-3L    CRVP-5L

---

### General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

### Important

- Contact the installing and/or local Bard distributor for all parts requirements. Be sure to have the complete model and serial number available from the unit rating plates.

### Contents

<u>Description</u>	<u>Page</u>
Functional and Cabinet Components	
♦ CRVS-3, CRVWH-3 Exploded View .....	2
♦ CRVP-3, CRVP-3L Exploded View .....	2
♦ CRVS-3 Exploded View .....	2
♦ CRVP-5, CRVP-5L Exploded View .....	2
♦ Usage List .....	3
Economizer and Control – ECONCHS-E5-*	
♦ Exploded View .....	4
♦ Usage List .....	5



*Climate Control Solutions*


Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506  
www.bardhvac.com

Manual: 2110-684D  
Supersedes: 2110-684C  
Date: 7-13-17

# FUNCTIONAL and CABINET COMPONENTS

SEXP-437 A


CRVS-3, CRVMWH-3

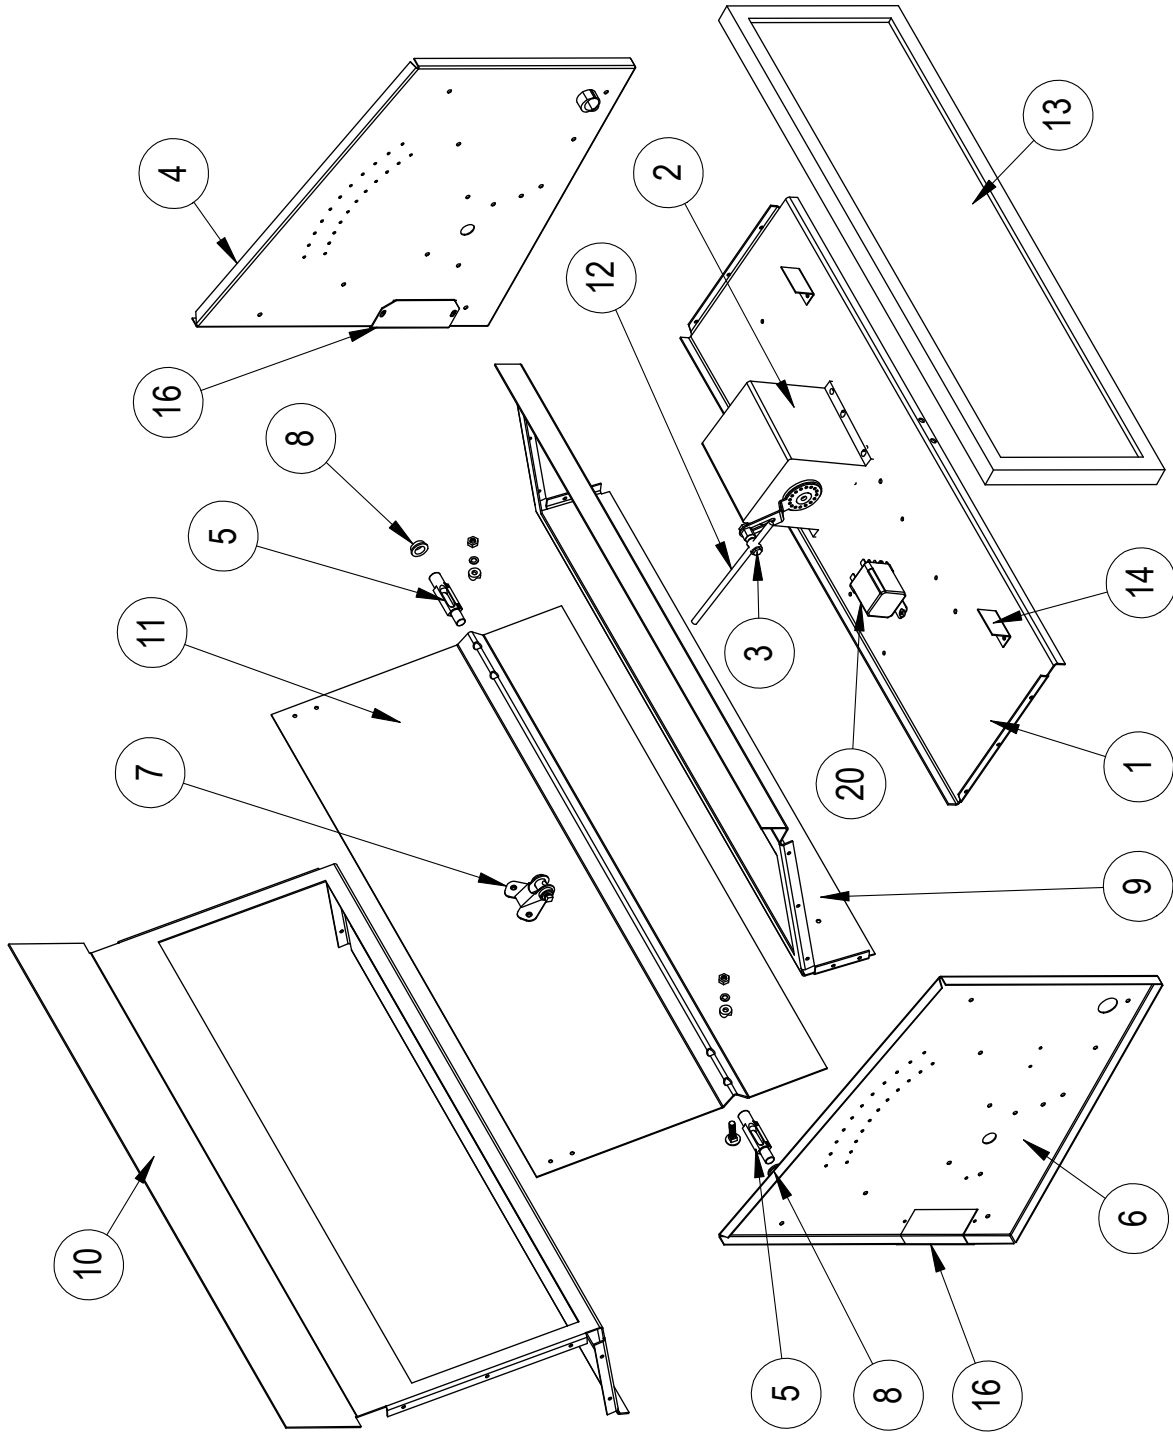

# FUNCTIONAL and CABINET COMPONENTS

SEXP-438


CRVP-3, CRVP-3L

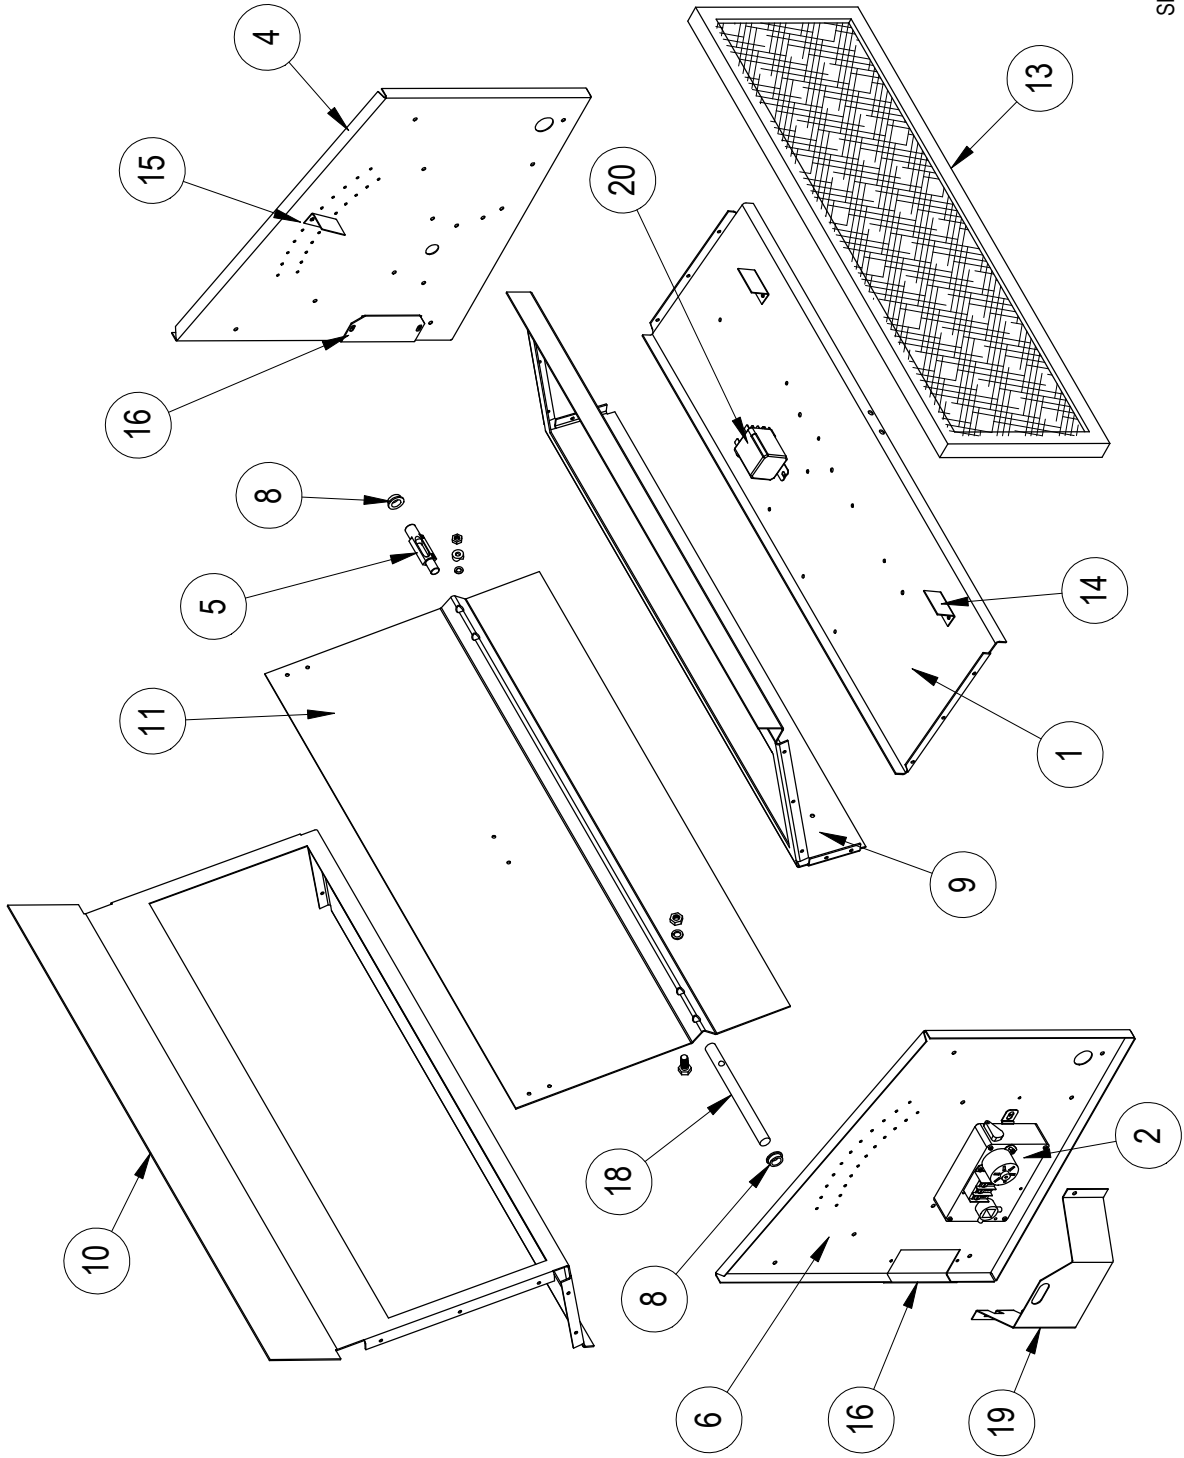

# FUNCTIONAL and CABINET COMPONENTS


SEXP-439 A

CRVS-5

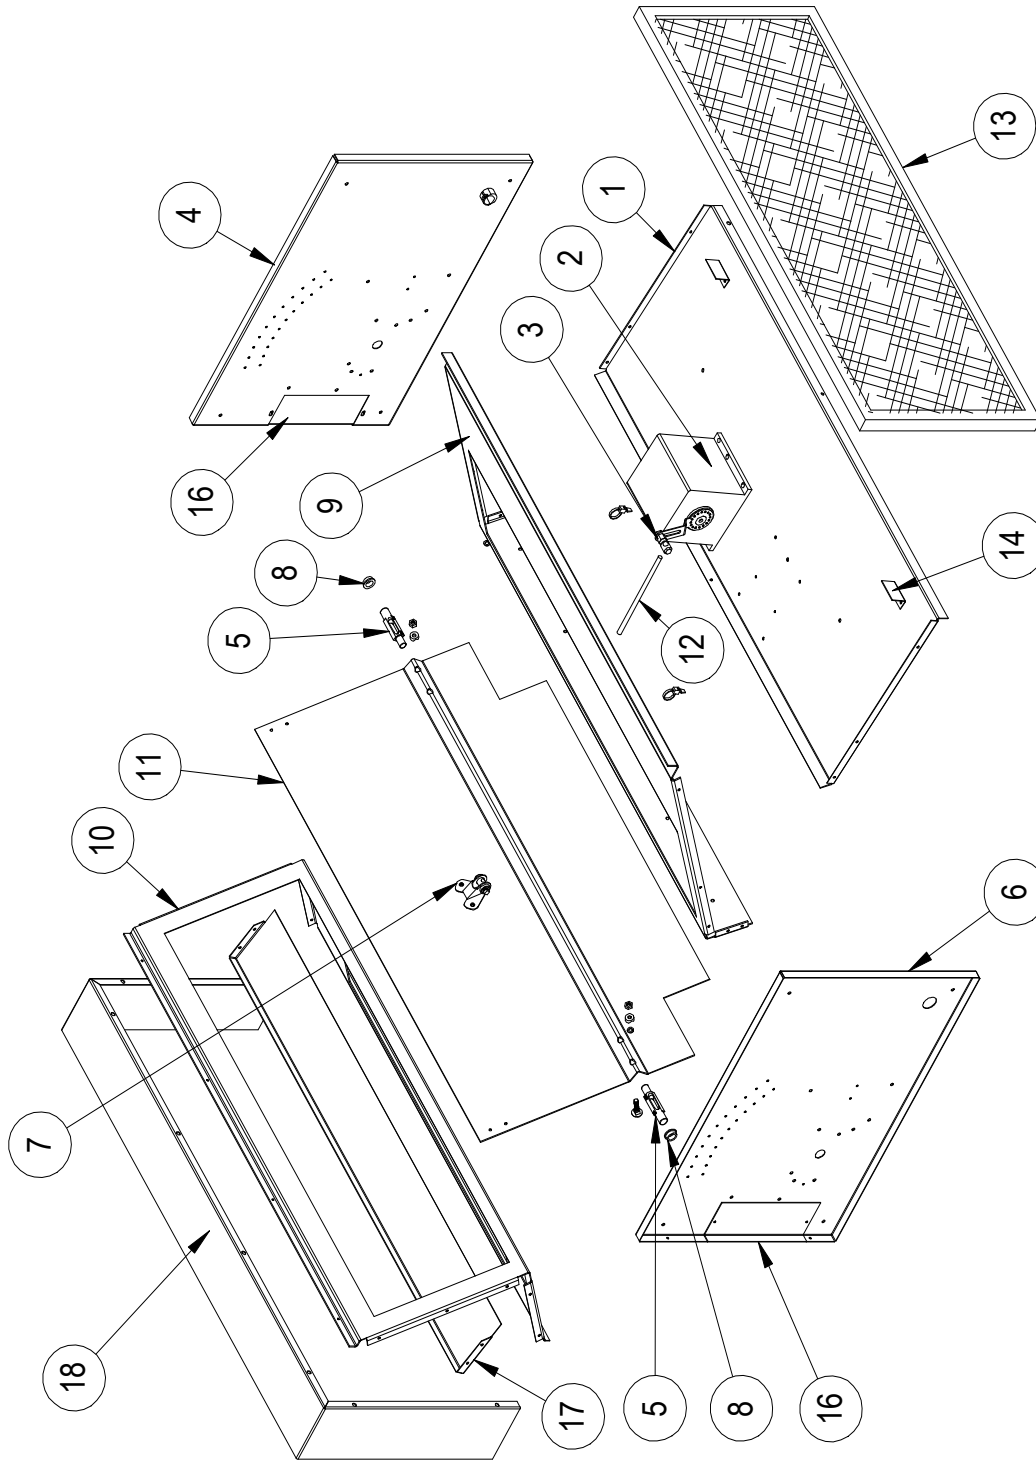

# FUNCTIONAL and CABINET COMPONENTS

CRVP-5, CRVP-5L

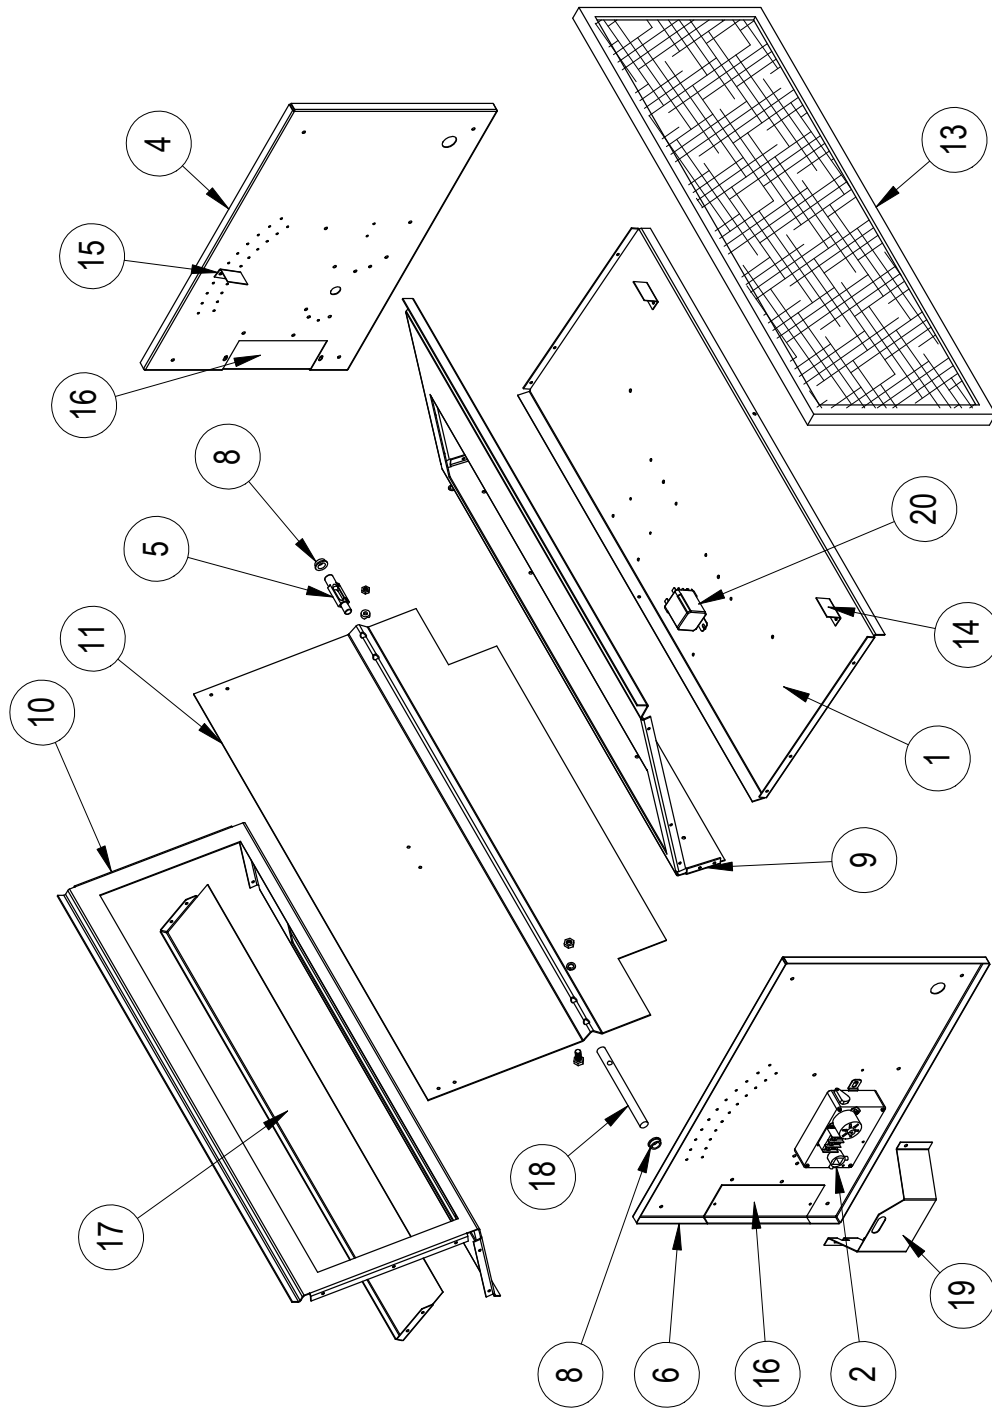

SEXP-440

# FUNCTIONAL and CABINET COMPONENTS

Drawing No.	Part No.	Description	CRVS-3	CRVP-3	CRVP-3L	CRVS-5	CRVP-5	CRVP-5L	CRVMWH-3
1	127-212	Base	X	X					
1	127-215	Base				X	X		
2	8602-020	Motor	X			X			
2	8602-050	Motor		X			X		
2	8602-017	Motor							X
3	8602-008	Ball Joint	X			X			
4	S100X434	Right End	X	X					
	S100X440	Right End				X	X		
5	8602-038	Damper Blade Pin	2	X		2	X		
6	S100Y434	Left End	X	X					
6	S100Y440	Left End				X	X		
8	8602-039	Bronze Bushing	2			2			
8	8602-052	Bronze Bushing		2			2		
9	S137-178	Front Fill	X	X					
9	S137-218	Front Fill				X	X		
10	S137-481	Return Fill				X	X		
10	S137-484	Return Fill	X	X					
11	S139-180	Damper Blade				X	X		
11	S139-181	Damper Blade	X	X					
12	8602-042	Rod	X			X			
13	7003-033	Mist Eliminator	X	X					
13	7003-035	Mist Eliminator				X	X		
14	131-095	Filter Stop	2	2		2	2		
15	105-1044	Blade Position Angle		2			2		
16	137-485	Side Fill	2	2					2
16	137-486	Side Fill				2	2		
17	137-483	Exhaust Partition				X	X		
18	8602-051	Shaft		X			X		
19	143-087	Motor Cover Plate		X			X		
20	8201-048	Relay	X	X		X	X		
NS	4056-189	Wiring Diagram	X			X			
	4056-180	Wiring Diagram		X			X		
	4056-196	Wiring Diagram			X			X	
	4056-187	Wiring Diagram							X
NS	8201-104	3 Position CRV Control Board							X

NS = Not Shown