REPLACEMENT PARTS MANUAL

HIGH ECONOMY GAS FIRED FURNACES MODELS: IC60D36A, IC85D42D, IC115D48A

Manual 2110-854

Revision E Date 3-26-92

Supersedes 8-30-91

****** * GENERAL NOTES *

***** INDEX *****

Page Description	<u>Page</u>	<u>Date</u>	<u>Supersedes</u>	
Cabinet ComponentsExploded View	1	Z -19-90	9-21-89	
Cabinet ComponentsExploded ViewUsage List	2	3-26-92	Z-19-90	
Functional ComponentsExploded View	3	3-26-92	Z -19-90	
∥ ·-Usage List	4	3-26-92	8-30-91	


***** *** IMPORTANT ***

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

BRYAN, OHIO 43506

^{*}Revised and/or additional pages may be issued from time to time.

^{*}A complete and current manual consists of pages dated as shown in the following index.

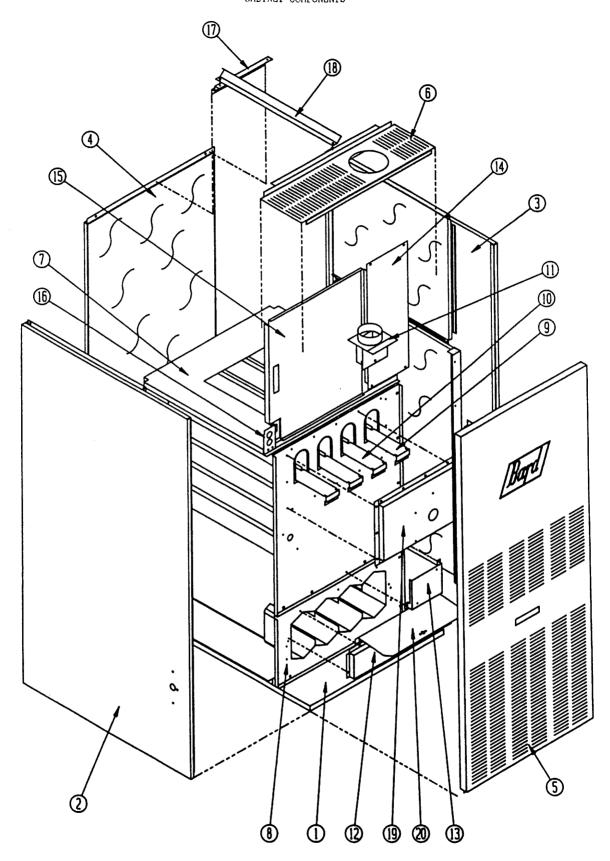

IC115D48A model shown above

Date: 2-19-90 Supersedes: 9-21-89

> 2110-854 Page 1

CABINET COMPONENTS


Dwg. No.	Part No.	Description	I C 6 O D 3 6 A	I C 8 5 D 4 2 D	I C 1 1 5 D 4 8 A
1	127-039	Lower Base Assembly	X	. [
1 1	127-041	Lower Base Assembly		X	
1	127-043	Lower Base Assembly		_	X
2	501-126	Left Side Assembly	Х	X	X
3	501-125	Right Side Assembly	X	X	Х
4	508-017	Back Assembly	X		
4	508-018	Back Assembly		X	_
4	508-019	Back Assembly			X
5	152-083	Burner Door	X		
5	152-086	Burner Door		X	
5	152-088	Burner Door			<u> </u>
6	107-074	Top Fill Assembly	X		1
6	107-075	Top Fill Assembly		Х	
6	107-076	Top Fill Assembly	╁		X
7	126-038	Blower Base	X	ا ا	
7	126-040	Blower Base		Х	
7	126-044	Blower Base	١,,	-	X
8	171-137	Heat Exchanger Assembly	X	x	
8	171-141	Heat Exchanger Assembly		^	х
8	171-146	Heat Exchanger Assembly Internal Flue Baffle Outside	2	3	2
9	168-002	Internal Flue Baffle Inside	-	-	2
10	168-013 913-0002		X		
111	913-0002	-	"	x	x
12	168-003	Secondary Air Baffle	X	1	
12	168-008	Secondary Air Baffle		x	1 1
12	168-010	Secondary Air Baffle			x
13	112-099	Ignition Module Bracket	Х	Х	Х
14	152-118	Right Filter Door	Х	Х	х
15	152-115	Left Filter Door	Х		
15	152-116	Left Filter Door		X	
15	152-117	Left Filter Door			х
16	112-028	Door Switch Bracket	Х	Х	Х
17	130-062	Rear Filter Support	Х		Х
18	130-023	Filter Support	Х	Х	х
19	913-0005		X		
19	913-0006	<u>-</u>		X	
19	913-0007	Ţ <u>=</u>			Х
20	140-159	Switch Support	Х		
20	140-163	Switch Support		X	
20	140-161	Switch Support			х

Date: 3-26-92 Supersedes: 2-19-90

2110-854

Page: 2

FUNCTIONAL COMPONENTS

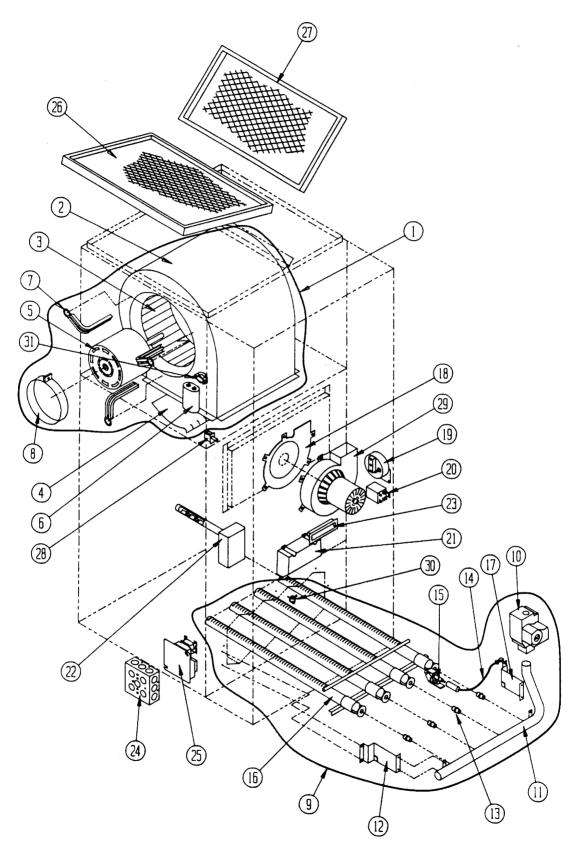

Date: 3-26-92

Supersedes: 2-19-90

2110-854

Page: 3

FUNCTIONAL COMPONENTS

			I	I	I
			C	С	C
			6	8	1
Dwg.	Part No.	Description	0	5	1
No.			D	D	5
			3	4	D
		İ	6	2	4
			A	D	8
					<u> </u>
1	900-114	Blower Assembly	Х		.
1	900-116	Blower Assembly		X	
1	900-118	Blower Assembly			X
2	151-075	Blower Housing	Х		
2	151-076	Blower Housing		Х	
2	151-077	Blower Housing			Х
3	5152-010	Blower Wheel	Х		
3	5152-014	Blower Wheel		X	
3	5152-059	Blower Wheel			Х
4	144-125	Diffuser	Х		
4	144-128	Diffuser		Х	
4	1 44 -129	Diffuser			Х
5	8105-008	Motor	X		
5	8105-009	Motor		X	
5	8106-018	Motor			х
6	8552-002	Capacitor	Х	X,	
6	8552-004	Capacitor			X
7	8200-036	Motor Mount Arm	3		
7	8200-034	Motor Mount Arm		3	3
8	8200-033	Motor Mount Band	Х	X	Х
9	901-0074	Burner Assembly	Х]
9	901-0050	Burner Assembly		X	
9	901-0061	Burner Assembly			x
10	5651-062	Gas Valve	Х	X	Х
11	5818-019	Burner Manifold	Х		
11	5818-020	Burner Manifold		X	
11	5818-021	Burner Manifold			X
12	1127095	Left Manifold Bracket	Х	X	Х
13	9010-010	Gas Orifice #38	2	3	4
14	8600-009	Ignition Cable	Х	X	Х
15	8620-038	Pilot Burner Assembly	Х	X	Х
16	9010-036	Burner Venturi 2 Section	Х	,	
16	9010-037	Burner Venturi 3 Section		X	1
16	9010-038	Burner Venturi 4 Section	İ		X
17	112X095	Right Manifold Bracket	Х	Х	х
	1120070	1		+	+

Dwg. No.	Part No.	Description	I C 6 D 3 6	I C 8 5 D 4 2 D	I C 1 1 5 D 4 8 A
18	1921-019	IDB Gasket	Х	Х	Х
19	8406-051	Pressure Switch	Х	Х	Х
20	8201-048	DPST_Relay24V	Х	X	Х
21	5651-093	Ignition Module	Х	Х	Х
22	8402-046	Fan/Limit Control	Х		
22	8402-045	Fan/Limit Control		Х.	Х
23	1171-025	Door Pull	Х	X	Х
24	8614-001	Junction Box	Х	Х	Х
25	8201-006		Х	Х	Х
26	7003-001	Permanent Filter 10x20x1		2	1
27	7003-003	Permanent Filter 15x20x1	1	<u> </u>	1
28	8406-013	Door Switch	Х	Х	Х
29	8109-001	Induced Draft Blower	Х	Х	х
30	8406-038	Flame Rollout Switch	Х	Х	Х
31	8402-014	Upper Limit	Х	Х	Х
	4046-119	Wiring Diagram	Х	Х	Х
	8620-040	Pilot Gas Tube W/Fitting	Х	Х	Х

Date: 3-26-92 Supersedes: 8-30-91

2110-854

Page: 4