REPLACEMENT PARTS MANUAL

OIL FIRED FURNACE MODELS FH085D36B, FH110D48B, FH110D60B

Manual 2110-901 Revision G Date 04-06-92

Supersedes 02-07-92

****** * GENERAL NOTES *

*Revised and/or additional pages may be issued from time to time.

INDEX ** *****

Page Description	<u>Page</u>	Date	Supersedes
Cabinet ComponentsExploded View	1	4-06-92	2-07-92
"Usage List	2	4-06-92	9-20-91
Functional ComponentsExploded View	3	4-06-92	2-07-92
"Usage List	4	4-06-92	2-07-92
Burner ComponentsLayout	5	12-03-91	9-18-89
"Usage List	6	12-03-91	5-18-90


****** *** IMPORTANT ***

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

BARD MANUFACTURING COMPANY

BRYAN, OHIO 43506

^{*}A complete and current manual consists of pages dated as shown in the following index.

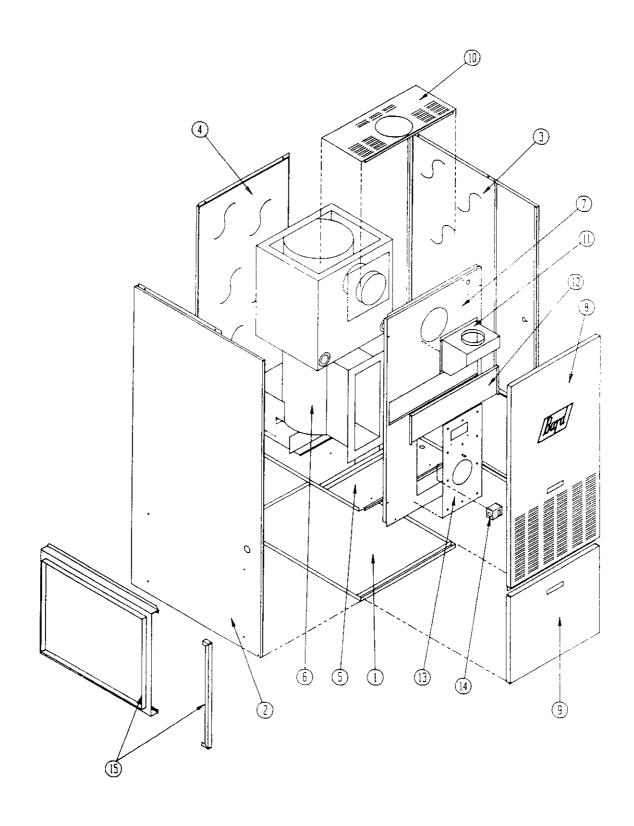

Date: 4-06-92 Supersedes: 2-07-91

2110-901

CABINET COMPONENTS


	1		F	F	F
['	1		H	H	H
1	1		0	1	1
ſ	[8	1	1
Dwg.	Part No.	Description	5	0	0
No.	[D	D	D
1			3	4	6
[!	[6	8	0
1			В	В	В
1_	127-174	Lover Base	Х	X	X
2	501-239	Left Side		X	х
2	501-237	Left Side	Х		
3	501-238	Right Side		X	Х
3	501-236	Right Side	<u>_x</u>		
4	508-077	Back Assembly	Х		}
4	508-076	Back Assembly		Х	_х
5	127-173	Blower Base	ĸ		}
5	127-17 <u>0</u>	Blower Base		_ х	х
6	171-166	Heat Exchanger Assembly	8	}	1 1
1		(includes combustion chamber part No. 7090-005) (1)			
6	171-165	Heat Exchanger Assembly	-	k	х
		(includes combustion chamber part No. 7090-005) (1)			
7	520-205	Burner Partition	K		1
7	520-206	Burner Partition	<u> </u>	Х	_ X
8	152-180	Burner Door	Х	Ì	
8	152-176	Burner Door		<u> </u>	х
9	152-155	Blower Door	Х	X	х
10	106-138	Top Fill	_х_	_х	х
11	913-0065	Flue Box Assembly	Х	X_	X
12	542-037	Cleanout Cover Plates	X	X	Х
13	161-027	Front Plate Assembly	<u> </u>	_ х	Х
14	112-031	Door Switch Bracket	х	Х	X
15	919-0002	Filter Rack W/Door	X	, x	
15	919-0003	Filter Rack W/Door	<u> </u>	l	Х

⁽¹⁾ Combustion chamber part No. 7090-005 may be ordered separately.

Date: 4-06-92 Supersedes: 9-20-91

2110-901

FUNCTIONAL COMPONENTS

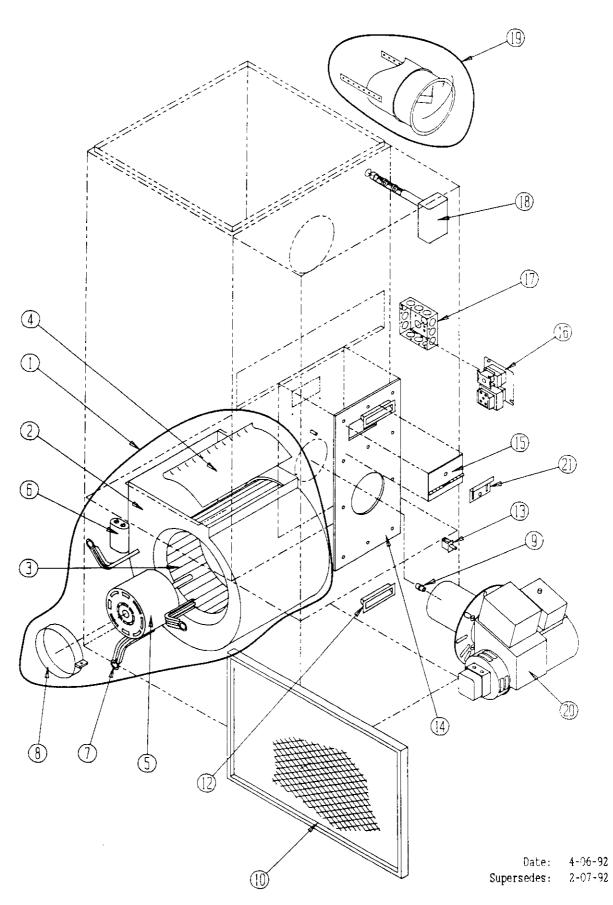

2110-901

FUNCTIONAL COMPONENTS

T			F	F	F
	1		<u>г</u> Я	T H	H
			0	п 1	n 1
ł	}		8	1	' '
Draw Donk No.	Part No.	Dongrishion	I		1
D⊮g. No.	fair MO.	Description	5	0	0
, NO.			D	D	D
			3	4	6
			6	8	0
1	900-156	Blower Assembly	В	В	В
1	900-111	Blower Assembly	X		
1 1	900-111	Blower Assembly		X	
2		Blower Housing Assembly	 		X
2	144-1 =	· -	X		
				X	
2		Blower Housing Assembly (1)			Х
3	5152-013		X		
3	5152-053				X
3	5152-059		l	X	
4	144-127	Diffuser	Х		
4	144-129	Diffuser		Х	
4	NA	Diffuser (1)			_ X
5	8105-008		X]
5	8106-018			X	
5	8107-004				Х
6	8552-002	•	Х		ļ
6	8552-004	•		Х	
6	8552-026		ļ		Х
7	8200-034		3	3	
7	8200-035	Motor Mount Arm			3
8	8200-033	Motor Mount Band	Х	X	_ х
9	9011-001	Nozzle .75 GPH 80 degree			
9	9011-003	,		Х	х
10	7003-004	Permanent Filter 16x25x1	Х	Х	
10	7003-028				х
12	1171-025	Door Pull	l	1	1
13	8406-013	Door Switch	Х	Х	Х
14	1921-021	Pront Plate Gasket	Х	Х	Х
15	5400-003	Inspection Door Hinge		Х	Х
16	8201-006	Fan CenterTwo Speed	Х	Х	X
17	8614-039	Square Outlet Box	X	Х	X
18	8402-043	Fan/Limit Control	Х	Х	Х
19	8601-031		Х	Х	Х
20	9020-017		Х	Х	Х
21	142-026	Inspection Door Cover	Х	Х	X


⁽¹⁾ Drawing No. 2 part No. 5152-050 includes housing, diffuser, and blower wheel part No. 5152-053.

Date: 4-06-92 Supersedes: 2-07-91

2110-901

Beckett BURNER COMPONENTS

Burner Replacement Parts

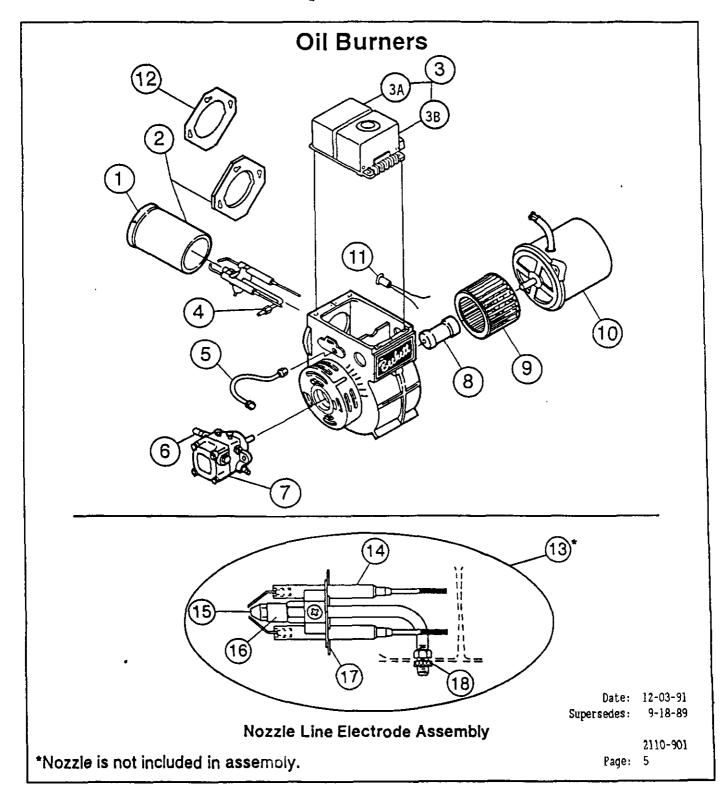

BURNER COMPONENTS

	 	 			
]		F	F
	}	j		H	Ħ
	ŀ			0	1
]	1		8	1
Dwg.	Bard	Supplier	Description	5	0
No.	Part No.	Part No.		D	D
ĺ	1	[3	4
				6	8
				В	В
1	9022-003	F3	Head	Х	Х
2	9022-004	51236007BK	Air Tube and Flange Assembly	Х	Х
		İ	7-5/8" Insertion	<u></u>	
3	9022-036	40100-02-BK	Primary Control and Iquitor Assembly*	Х	Х
34	9022-037	14280-SO-S	Interrupted Duty Ignitor Only	х	Х
3B	9022-038	14290-02-AOS	Primary Control Only	K	Х
4	9022-007	571801	Bulkhead Fitting	х	Х
5	9022-008	5636	Connector Tube	Х	Х
6	9022-009	2256	Pump Outlet Elbow	Х	Х
7	9022-010	2460U	Pump, Single Stage	Х	Х
8	9022-011	2454	Coupling	_ х	Х
9	9022-012	2 4 59U	Blower	Х	×
10	9022-013	2 4 56U	Motor 1/7 EP 3450 RPM	X	Х
11	9022-039	40153-SO-E	Cad Cell Assembly**	Х	Х
	9022-040	14407S	Cad Cell Eye Only	∫ x	X
12	9022-021	3811	Mounting Flange Gasket	Х	Х
13	9022-014	NL90YE	Nozzle Line Electrode Assembly	Х	Х
14	9022-017	5780	Rlectrode Insulator Assembly	X	Х
15	9011-001		Nozzle ,75 GPH 80 degree A	Х	
15	9011-003		Nozzle 1.00 GPH 80 degree A		X
16	9022-016	213U	Nozzle Adapter, Single	Х	Х
17	9022-023	3384P	Static Plate 3-3/8"	Х	Х
18	9022-018	3666	Bulkhead Fitting Locknut	Х	Х
					•

^{*} Includes 9022-037 interrupted duty ignitor, 9022-038 primary control, and 9022-039 cad cell assembly.

Date: 12-03-91 Supersedes: 5-18-90

2110-901

^{**} Includes 9022-040 cad cell eye.

		`	
			•
			•
			_