

1977

Part No.	New Part No.	Description	18ECQ	24ECQ	30ECQ1	36ECQ3	36ECQ3-3	42ECQ	42ECQ-3	48ECQ1	48ECQ1-3	60ECQ	60ECQ-3	36ECQ3-3 480V	48ECQ1-3 480V	60ECQ-3 480V
8552-015	8552-027	Capacitor 370V	X													
8552-007		Capacitor 370V		X	X											
8552-012	8552-028	Capacitor 440V				X	X					X				
8552-009		Capacitor 440V							X							
8552-021		Capacitor 440V										X				
8552-005		Capacitor 370V					X	X	X	X	X	X	X		X	X
8000-001	8000-098	Compressor 1-Ph	X													
	8552-027	Capacitor														
8000-002	8000-140	Compressor 1-Ph		X												
	8552-045	Capacitor 370V														
8000-006		Compressor 1-Ph			X											
8000-008	8000-130	Compressor 1-Ph				X										
	8552-030	Capacitor 440V														
8000-009	8000-131	Compressor 3-Ph					X	X								
8000-011	8000-130	Compressor 1-Ph					X									
	8552-030	Capacitor 440V														
8000-013	8000-081	Compressor 1-Ph							X							
	8552-030															
8000-015	8000-127	Compressor 3-Ph									X					
8000-020	8000-153	Compressor 1-Ph										X				
	8552-061	Capacitor 370V														
8000-021	NLA	Compressor 3-Ph											X			
8000-010		Compressor 3-Ph												X		
8000-018	8000-083	Compressor 3-Ph													X	
8000-022	9999-800	Compressor 3-Ph														X
83672	NLA	Comp. Overload										X				
83684	NLA	Comp. Overload											X			
5051-011		Condenser Coil	X													
5051-013		Condenser Coil		X												
5051-001	5051-034	Condenser Coil			X	X	X							X		
5051-009		Condenser Coil						X	X	X	X	X	X		X	X
8401-007		Contact - Comp.	X	X	X											
8401-003	8401-016	Contact - Comp.				X	X	X								
8401-002		Contact - Comp.				X	X	X	X	X	X	X	X	X	X	X
8401-001	NLA	Contact - Comp.									X					
8605-001		Crankcase Heater				X	X	X	X	X		X				
8605-002		Crankcase Heater												X	X	X
5151-001		Fan Blade	X	X												
5151-007		Fan Blade			X	X	X							X		
5151-017		Fan Blade					X	X	X	X	X	X	X		X	X
8552-002		Capacitor 370V	X	X	X	X	X									
8406-010		High Pressure Switch													X	X
8103-008	8103-013	Motor - Fan	X	X												
8103-009	8103-019	Motor - Fan			X	X	X							X		

8105-005	8105-021	Motor - Fan							X	X	X	X	X	X	X	X	X
	8550-006	Bracket														X	X
	8552-026	Capacitor 370V															
8200-001		Motor Mount - Fan	X	X	X	X	X										
8200-004		Motor Mount - Fan							X	X	X	X	X	X		X	X
8201-008		Relay - Blower													X	X	X
8551-001		Start Capacitor												X			
8201-020	8201-029	Start Relay											X				
8607-002	8607-014	Terminal Block 230V													X	X	X
8407-003		Trans. - Stepdown													X	X	X

1977

Part No.	New Part No.	Description	18WA	24WA	30WA	36WA1	36WA1-3	48WA2	48WA2-3	36WA1-3 480V	48WA2-3 480V						
5152-030	NLA	Blower Housing	X	X	X	X	X			X							
5152-026		Blower Housing						X	X		X						
5152-028	144-174	Diffuser	X	X	X	X	X			X							
5152-051	151-111	Blower Housing															
	5152-090	Blower Wheel															
5152-029	144-174	Diffuser	X	X	X	X	X			X							
5152-052	151-111	Blower Housing															
	5152-091	Blower Wheel															
5152-011		Blower Wheel cw						X	X		X						
5152-012		Blower Wheel ccw						X	X		X						
8552-015	NLA	Capacitor 370V	X														
8552-027	NLA																
8552-007		Capacitor 370V		X	X												
8552-012	8552-028	Capacitor 440V				X											
8552-014	NLA	Capacitor 440V						X									
8552-001		Capacitor 370V	X	X	X	X	X			X							
8552-002		Capacitor 370V	X	X	X	X	X	X	X		X						
8552-003	NLA	Capacitor 370V						X	X		X						
5811-021		Cap Tube - Cool	X	X													
5811-022	5811-016	Cap Tube - Cool (2 req'd)			X	X	X			X							
5811-008		Cap Tube - Cool (3 req'd)						X	X		X						
8000-001	8000-098	Compressor 1-Ph	X														
	8552-027	Capacitor															
8000-002	8000-140	Compressor 1-Ph		X													
	8552-045	Capacitor 370V															
8000-006		Compressor 1-Ph			X												
8000-008	8000-130	Compressor 1-Ph				X											
	8552-030	Capacitor 440V															
8000-009		Compressor 3-Ph					X										
8000-010		Compressor 3-Ph								X							
8000-016	NLA	Compressor 1-Ph						X									
8000-017		Compressor 3-Ph							X								
8000-018	8000-083	Compressor 3-Ph									X						

83493	NLA	Compressor Overload							X									
83672	NLA	Compressor Overload								X								
83684	NLA	Compressor Overload									X							
5051-006	5051-036	Condenser Coil	X	X														
5051-001	5051-034	Condenser Coil			X	X						X						
5051-005	5051-009	Condenser Coil					X	X					X					
5051-009		Condenser Coil							X	X				X				
8401-007		Contactora - Comp.	X	X														
8401-002		Contactora - Comp.				X		X		X	X	X	X					
8401-001	NLA	Contactora - Comp.					X		X									
8401-006		Contactora - Heater	X	X	X	X	X	X	X	X	X	X	X	X				
5811-026		Cap. Tube		X														
8401-003	8401-016	Contactora - Comp.			X													
8605-001		Crankcase Heater				X		X		X								
8605-002		Crankcase Heater										X	X	X				
5060-005	NLA	Evaporator Coil	X	X														
5060-006	5060-023	Evaporator Coil			X	X						X						
5060-001		Evaporator Coil					X	X					X					
5060-011		Evaporator Coil							X	X				X				
5151-009	NLA	Fan Blade	X	X														
5151-004		Fan Blade			X	X						X						
5151-017		Fan Blade					X	X					X					
5151-016		Fan Blade							X	X				X				
8614-022		Fuse - Compressor			X		X		X									
8614-006		Fuse - Heater			X		X		X									
8614-007		Fuse - Heater			X				X									
8614-017		Fuse Block			X		X		X									
8614-013		Fuse Block			X		X		X									
8604-042	8604-089	Heat Strip 5Kw	X	X	X													
8604-044	8604-091	Heat Strip 10Kw	X	X	X		X		X									
8604-047		Heat Strip 15Kw			X	X	X	X	X	X								
8604-046		Heat Strip 12Kw				X		X		X								
8604-048		Heat Strip 9Kw				X		X		X								
8604-050		Heat Strip 9Kw										X	X	X				
8604-052		Heat Strip 15Kw										X	X	X				
8406-010		High Pressure Switch					X	X	X	X	X	X	X	X				
8402-015		Limit Switch	X	X														
8402-012		Limit Switch			X	X	X	X	X	X	X	X	X	X				
8106-005	8620-161	"P" Series Mtr	X	X														
	900-119	Blower Assy-49&60WA																
8105-007	8105-024	Motor - Blower			X	X						X						
8106-006	8106-015	Motor - Blower					X	X	X	X			X	X				
8103-009	8103-019	Motor - Fan			X	X						X						
8105-005	8105-021	Motor - Fan					X	X					X					
	8550-006	Bracket																
	8552-026	Capacitor 370V																
8106-007	NLA	Motor - Fan							X	X				X				
8200-010		Motor Cradle	X	X														
8200-007		Motor Mount - Blower			X	X						X						
8200-003	8620-034	Motor Mount - Blower					X	X	X	X			X	X				
8200-001		Motor Mount - Fan			X	X						X						

8551-001		Start Capacitor							X									
8201-020	8201-029	Start Relay							X									

1977

Part No.	New Part No.	Description	18HPQ	24HPQ	30HPQ2	36HPQ2	36HPQ2-3	48HPQ1	48HPQ1-3	60HPQ2	60HPQ2-3							
8552-007		Capacitor 370V	X	X	X													
8552-012	8552-028	Capacitor 440V				X				X								
8552-014	NLA	Capacitor 440V						X										
8552-021		Capacitor 440V								X								
8552-005		Capacitor 370V						X	X	X	X							
5811-031		Cap Tube - Heat	X															
5811-014		Cap Tube - Heat		X														
5811-027		Cap Tube - Heat			X	X	X											
5811-007		Cap Tube - Heat (2 req'd)						X	X									
5811-016		Cap Tube - Heat (2 req'd)									X	X						
5651-006	5651-036	Check Valve	X	X	X	X	X	X	X	X	X							
8000-004	8000-098	Compressor 1-Ph																
	8552-027	Capacitor 370V																
8000-005	8000-140	Compressor 1-Ph		X														
	8552-045	Capacitor 370V																
8000-006		Compressor 1-Ph			X													
8000-008	8000-130	Compressor 1-Ph				X												
	8552-030	Capacitor 440V																
8000-009	8000-131	Compressor 3-Ph					X											
8000-016	NLA	Compressor 1-Ph						X										
8000-017		Compressor 3-Ph							X									
8000-020	8000-153	Compressor 1-Ph								X								
	8552-061	Cap 370V																
8000-021	NLA	Compressor 3-Ph									X							
83494	NLA	Compressor Overload						X										
83493	NLA	Compressor Overload							X									
83672	NLA	Compressor Overload								X								
83684	NLA	Compressor Overload									X							
5051-004	NLA	Condenser Coil	X															
5051-008	5051-059	Condenser Coil		X														
5051-003		Condenser Coil			X	X	X											
5051-010	NLA	Condenser Coil						X	X									
5051-002		Condenser Coil								X	X							
8401-007		Contact - Compressor	X	X	X													
8401-003	8401-016	Contact - Compressor				X												
8401-002		Contact - Compressor					X	X	X									
8401-001	NLA	Contact - Compressor						X	X	X								
8605-001		Crankcase Heater					X	X	X									
8408-004		Defrost Mounting Plate	X	X	X	X	X	X	X	X	X							
8408-002	8620-024	Defrost Thermostat	X	X	X	X	X	X	X	X	X							
5151-001		Fan Blade	X	X														
5151-007		Fan Blade			X	X	X											
5151-017		Fan Blade						X	X	X	X							

5151-016		Fan Blade								X	X								
8614-022		Fuse - Compressor			X		X			X									
8614-007		Fuse - Heater			X		X			X									
8614-006		Fuse - Heater					X			X									
8614-014	NLA	Fuse Block					X			X									
8614-019	NLA	Fuse Block								X									
8614-013		Fuse Block			X														
8604-042	8604-089	Heat Strip 5Kw	X	X	X														
8604-044	8604-091	Heat Strip 10Kw	X	X	X		X			X									
8604-047		Heat Strip 15Kw			X	X	X	X	X	X	X								
8604-046		Heat Strip 12Kw					X			X		X							
8604-048		Heat Strip 9Kw					X			X		X							
8406-010		High Pressure Switch	X	X	X	X	X	X	X	X	X								
8402-015		Limit Switch	X	X															
8402-012		Limit Switch			X	X	X	X	X	X	X								
8106-005	8620-161	"P" Series Mtr. Kit	X	X															
	900-119	Blower Assy.48,49-60WA																	
8105-007	8105-024	Motor - Blower			X	X													
8106-006	8106-015	Motor - Blower						X	X	X	X								
8103-009	8103-019	Motor - Fan			X	X													
8105-005	8105-021	Motor - Fan						X	X										
	8550-006	Bracket																	
	8552-026	Cap370V																	
8106-007	NLA	Motor - Fan								X	X								
8200-003	8620-034	Motor Mount - Blower						X	X	X	X								
8200-007		Motor Mount - Blower			X	X													
8200-001		Motor Mount - Fan			X	X													
8200-004		Motor Mount - Fan						X	X										
5451-011		Motor Mounting Parts			X	X	X	X	X	X	X								
8201-008		Relay - Blower	X	X	X	X	X	X	X	X	X								
8201-013		Relay - Changeover	X	X	X	X	X	X	X	X	X								
8201-018	8620-105	Relay - Defrost	X	X	X	X	X	X	X	X	X								
8201-011		Relay - Interlock	X	X															
5202-001	5202-013	Accumulator	X																
5202-006	5202-013	Accumulator		X															
5202-004	5202-022	Accumulator			X	X													
5202-005	5202-011	Accumulator						X	X	X	X								
5650-004	5650-005	Reversing Valve	X																
5650-005	5650-017	Reversing Valve		X															
	5650-023	W/24V																	
	5650-029	W/230V																	
5650-006	5650-015	Reversing Valve			X	X	X	X	X	X	X								
	5650-023	W/24V																	
	5650-029	W/230V																	
5650-002		Solenoid Coil	X	X	X	X	X	X	X	X	X								
8551-001		Start Capacitor						X		X									
8201-020	8201-029	Start Relay						X		X									
5210-002		Strainer	X	X	X	X													
5210-004		Strainer			X	X	X	X											
5210-003		Strainer						X	X										
5210-005		Strainer								X	X								

8614-007		Fuse			2	4	4	6										
8614-006		Fuse			2		2											
8614-017		Fuse Block			X													
8614-013		Fuse Block				X												
8614-014	NLA	Fuse Block					X											
8614-019	NLA	Fuse Block						X										
8604-014		Heat Strip 10Kw	X	X			2	X										
8604-015		Heat Strip 15Kw			X			X	2									
8402-015		Limit Switch	2	2	3	4	5	6										
8102-003		Motor	X															
8105-012	8105-022	Motor		X	X	X												
	8552-004	Cap370V																
8105-010		Motor						X	X									
8200-003	8620-034	Motor Mount	X	X	X	X	X	X										
5451-011		Motor Mounting Parts	X	X	X	X	X	X										
8201-014		Relay - Blower	X	X	X	X	X	X										
8401-017	NLA	Sequencer				X		X										
8401-018	NLA	Sequencer	X	X				X	X									
8401-019	NLA	Sequencer			X	X	X	X										
8607-005		Terminal Board 24V	X	X	X	X	X	X										
8607-001	8607-013	Terminal Block 230V	X	X														
8402-018		Thermal Cut-off	2	2	3	4	5	6										
8407-007	8407-034	Transformer	X	X	X	X	X	X										

1977

Part No.	New Part No.	Description	H61SD2	H81SD2	H81SD3	H106S	H106SD2	H106SD3	H121S	H121SD4	H141S	H161S	H201S					
5153-012		Bearings 3/4"				X			X		X	X						
5601-001	NLA	Belt				X			X		X	X						
5601-004	NLA	Belt											X					
8552-002		Capacitor 370V			X			X		X								
5153-018	NLA	Collar 3/4"				X			X		X	X						
5153-014		Cushion - Bearing				X			X		X	X						
8402-001		Fan and Limit	X	X	X	X	X	X	X	X	X	X						
8402-004	8402-007	Fan and Limit											X					
7004-001		Filter	X				X											
7003-004		Filter		X	X	X		X	X	X	X	X	X					
9041-008	URHX2	Heat Exchanger	X	X	X													
9041-009	URHX3	Heat Exchanger				X	X	X	X	X								
9041-010	URHX4	Heat Exchanger									X	X						
9041-023		Heat Exchanger											X					
5152-035	5152-059	Housing - Blower	X	X	X		X											
9043-042																		
5152-034	9043-041	Housing - Blower				X		X	X	X								
5152-037	9043-044	Housing - Blower									X	X						
5152-041	NLA	Housing - Blower											X					
5818-001		Manifold	X	X	X													
5818-002		Manifold				X	X	X	X	X								
5818-003		Manifold									X	X						

5153-002		Washer - Neoprene				X	X	X	X								
5152-003		Wheel - Blower	X	X													
5152-014		Wheel - Blower			X												
5152-002		Wheel - Blower				X	X										
5152-022		Wheel - Blower						X	X								

1977

Part No.	New Part No.	Description	F81	F97	NB120	C1	C2	F86CF	F100CF	F86H	F120H	F120L	HZ95				
5153-012		Bearings 3/4"	X	X	X			X	X	X	X	X	X				
5153-013	NLA	Bearings 1"				X	X										
5601-007	NLA	Belt	X														
5601-001	NLA	Belt								X		X					
5601-003	NLA	Belt			X												
5601-009	NLA	Belt				X	X										
5601-005	NLA	Belt		X				X	X								
5601-002	NLA	Belt									X						
5601-004	NLA	Belt											X				
5153-018	NLA	Collar 3/4"	X	X	X			X	X	X	X	X	X				
5153-021		Collar 1"				X	X										
7090-005		Combustion Chamber	X	X				X	X	X							
7090-003		Combustion Chamber			X						X	X					
7090-006		Combustion Chamber				X	X										
7090-002	NLA	Combustion Chamber											X				
5153-014		Cushion - Bearing	X	X	X			X	X	X	X	X	X				
5153-015		Cushion - Bearing				X	X										
8402-004	8402-007	Fan and Limit	X					X	X								
8402-002		Fan and Limit		X		X	X					X					
8402-005	NLA	Fan and Limit			X					X	X		X				
7004-012		Filter	X		2						X						
7004-013		Filter		X									X				
7004-011		Filter				X				X		2					
7004-001		Filter						2									
7004-003		Filter							2								
7003-004		Filter					2										
7004-010		Filter									X						
1171-002		Handle - Door		X									X				
1171-003		Handle - Door		3				2	2	2		2					
9041-001	171-116	Heat Exchanger	X					X		X							
9041-022	171-197	Heat Exchanger		X													
9041-017	171-120	Heat Exchanger			X												
9041-018	171-121	Heat Exchanger				X											
9041-019	171-122	Heat Exchanger					X										
9041-021	171-119	Heat Exchanger						X									
9041-016	171-117	Heat Exchanger									X						
9041-003	NLA	Heat Exchanger										X					
9041-011	NLA	Heat Exchanger											X				
5152-027	NLA	Housing - Blower	X	X				X	X	X			X				
5152-006		Wheel - Blower	X	X				X	X	X			X				
5152-037	9043-044	Housing - Blower			X						X	X					

