

INSTALLATION INSTRUCTIONS

MC91A MASTER CONTROLLER MC92A MASTER CONTROLLER



Bard Manufacturing Company
Bryan, Ohio 43506

Since 1914...Moving ahead, just as planned.

Manual:	2100-190D
Supersedes:	Rev. C
Date:	05-27-97

TABLE OF CONTENTS

1. Important	1
2. Shipping Damage	1
3. General	1
4. Theory Of Operation	1
A. Timer	1
B. Alarm Circuits	1
1. Power Loss Alarm	2
2. High Temperature Alarm	2
3. Low Temperature Alarm	2
4. Second Stage Cooling Alarm.	2
C. Thermostat	2
D. Flasher Disable, Generator Run Alarms (MC92A Only).	2
5. Sequence Of Operation	2
A. Mechanical Mode--No Economizers	2
1. Cooling	2
2. Heating	2
6. Installation Instructions	3
A. Unpacking	3
B. High Voltage Field Wiring	3
C. Low Voltage Field Wiring	3
D. Alarm Circuit Wiring	3
1. Power Loss Alarm	3
E. Thermostat	4
7. System Checkout And Adjustment	4
8. Troubleshooting	5
A. General	6
B. Timer	6
C. Unit #1 & Unit #2	7
D. Power Loss.	8
E. Low Temp Alarm.	9
F. High Temp Alarm	10
G. Low Voltage Connections, No Economizer.	11
9. Wiring Diagram and Component Locations.	12-14

FIGURES

Figure 1 - Low Voltage Connections	11
Figure 2 - Wiring Diagram MC91A	12
Figure 3 - Wiring Diagram MC92A	13
Figure 4 - Component Locations	14

IMPORTANT

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians. Please read entire manual before proceeding.

SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

GENERAL

These instructions explain the operation, installation and troubleshooting of the MC91A and MC92A controllers.

All internal wiring is complete. Only attach low voltage field wiring to designated terminal strips.

The controller is for use with Bard air conditioning wall mount series units only. The air conditioner units must be identical without economizers. The MC91A and MC92A are only for use without economizers. The MC91AE should be used for units with economizers.

Each unit should be sized to handle the total load of the structure.

It is recommended that a (5) five min. compressor time delay relay be installed in each unit.

THEORY OF OPERATION

The MC91A and MC92A are used to control two wall mount air conditioners from one thermostat. It provides total redundancy for the structure and equal wear on both units. It is used without economizers on the air conditioner units. It is not for use with heat pumps.

TIMER

The timer is a 24 hour or 7 day on/off timer. The changeover period is user selectable. Once every period the timer contacts switch positions. This determines which unit will be the primary unit and which will be the secondary unit for the next period. At the end of this period, the contacts switch again and the primary unit becomes the secondary unit and vice versa. Every 24 hours or 7 days the primary and secondary units switch providing equal wear on the units. This is done by energizing or de-energizing relays R1 and R2 every 24 hours. For 24 hour operation, connect timer speedup switch between pins 6 and 7. For 7 day operation, connect timer speedup switch between pins 6 and 4. For timer speed up, push and hold timer speedup switch for 10 seconds. Release switch after controller has switched. Timer speed up is supplied for ease of troubleshooting.

ALARM CIRCUITS

The MC91A and MC92A are equipped with four (4) alarm circuits: power loss alarm, high temperature alarm, low temperature alarm, and second stage cooling alarm.

All alarm circuits have both normally open and normally closed dry contacts.

Power Loss Alarm

The power loss alarm relay, R5, is normally energized. Upon power loss to the controller, the relay will de-energize and switch contact positions sending the alarm.

High Temperature Alarm

The high temperature alarm thermostat energizes the high temperature alarm relay, R3, if the temperature of the structure drops below the high alarm thermostat set point.

Low Temperature Alarm

The low temperature thermostat energizes the low temperature alarm relay, R4, if the temperature of the structure drops below the low alarm thermostat setpoint.

SECOND STAGE COOLING ALARM

The second stage cooling alarm relay, R6, is energized on a call for second stage cooling (Y2). This signifies that the primary unit cannot keep up with structure load.

THERMOSTAT

As in normal installations, the thermostat is the primary control of the room conditions. The thermostat is equipped with a heating setpoint lever, cooling setpoint lever, system off-auto switch, and fan switch. The fan switch is unused and should be left in the auto position.

FLASHER DISABLE, GENERATOR RUN ALARMS (MC92A ONLY)

The flasher/generator run alarm relay (R12) and the second stage disable relay (R11) are energized when a remote contact closed between terminals A and B on alarm terminal strip. Flasher & generator alarm relay (R12) signals that the generator is running and that the flasher is disabled. Second stage disable relay prevents Y2 or W2 from energizing. This ensures that only one unit will run when the generator is energized.

SEQUENCE OF OPERATION

MECHANICAL MODE--ND ECONOMIZERS

Cooling

1. On a call by the thermostat for first stage cooling, the compressor and fans of the primary unit will be energized.
2. On a call for second stage cooling, the compressor and fans of the secondary unit will be energized. The second stage cooling alarm will also be energized.
3. If the temperature continues to climb and the high alarm setpoint is exceeded, the high temperature alarm relay is energized and an alarm is sent.

Heating

1. On a call by the thermostat for first stage heat, the electric heat in the primary unit will be energized.
2. On a call by the thermostat for second stage heat, the electric heat of the secondary unit will be energized.
3. If the temperature continues to fall and the low alarm setpoint is exceeded, the low temperature alarm relay is energized and an alarm is sent.

INSTALLATION INSTRUCTIONS

UNPACKING

1. Included in the MC91A or MC92A carton are two packages: 1. The T874D1868 thermostat, and 2. the controller. The thermostat subbase is installed on the controller.

Set aside the thermostat for now as it will be installed last.

2. The controller should be installed on a vertical wall approximately four (4) feet above the floor away from drafts and outside doors or windows. Four (4) mounting holes are provided for mounting to the wall and holes for conduit connections are provided in both the base and top of the controller. The controller should not be mounted directly to a block wall, space away from wall with insulation or plywood.

IMPORTANT: The subbase and thermostat must be level for proper operation.

HIGH VOLTAGE FIELD WIRING

No phasing is required between HVAC units. The controller requires a 120, 208 or 240 volt power supply. The unit is wired for 240 volt operation, see wiring diagram for wiring changes required for 208 and 120 volt operation.

Connect high voltage wiring per the wiring diagram in Figure 2.

LOW VOLTAGE FIELD WIRING

Connect the low voltage field wiring from each unit per the low voltage field wiring diagrams in Figure 1.

For continuous blower operation, jumper R to G at the low voltage terminal block of the unit and remove jumper Y1 to G on the low voltage terminal block of the controller, both units.

ALARM CIRCUIT WIRING

All alarm circuit contacts are dry contacts. Maximum contact ratings:

125 VA @ 125 VAC
Pilot Duty Rating

Do not exceed these ratings when wiring your alarm circuit application. Contacts should be used for low voltage applications only.

Power Loss Alarm

Terminal identifications on the power loss alarm circuit represent contact positions in the normal power-on operating condition. When wiring the power loss alarm with no power applied, the contact positions will be opposite of terminal identifications.

THERMOSTAT

Do not install the thermostat until all low voltage connections have been made to the controller and the wiring has been checked for accuracy.

Remove the thermostat from the box. It should include:

- A. Thermostat T874D1868
- B. Instructions

1. Read the thermostat instructions before proceeding.
2. Remove the thermostat cover by pulling outward on the bottom of the cover.
3. Remove thermostat interpacking.
4. Position thermostat heat lever to far left.
5. Position thermostat cool lever to far right.
6. Position subbase system switch to off.
7. Position subbase fan switch to auto.
8. Install thermostat on subbase per the manufacturer's instructions.
9. Install lever locking assembly per instructions supplied with the thermostat.

This completes installation of the MC91A.

SYSTEM CHECKOUT ADJUSTMENT

Refer to Figure 3 for component locations.

1. Turn high alarm thermostat to off. Turn low alarm thermostat to off.
2. Thermostat system and fan switches should be off, the thermostat heating lever should be to the far left and the cooling lever to the far right.
3. Apply power to both units, apply power to master controller.
4. Follow initial start up procedures on side of wall mount.

Failure to follow these procedures may result in compressor failure.

5. Temporarily remove the wire from terminal 1 of the timer. See Figure 3.
6. Set system switch to on. Move cooling level slowly to the left to engage first stage cool. Compressor and blower of Unit 1 should start. Move the cooling level further left to engage second stage cooling. The compressor and blower of Unit 2 should start. Reset cooling lever to left.

7. Move heating lever slowly to the right until first stage heating is engaged. The electric heat and blower of Unit 1 should come on.

Move heating lever further to the right to engage second stage heat. The electric heat and blower of Unit 2 should come on.

Reset heating lever to left.

8. Place a jumper between terminal 2 of the timer and the wire removed from terminal 1 of the timer.

Repeat Steps 6 through 7 replacing the phrase, "Unit 1" with "Unit 2" and vice versa.

9. Remove jumper and reattach the wire to terminal 1 of the timer.

10. Adjust low alarm thermostat setpoint to a temperature above room temperature. The low alarm circuit should activate if employed. Return low alarm thermostat to desired setpoint. In operation, this must be at least 5° below the desired heating lever setpoint. Failure to set alarm thermostat setpoint 5° below the thermostat setpoint could result in nuisance tripping of alarm circuit.

11. Adjust the high alarm setpoint to a temperature below room temperature. If employed, the high alarm circuit should be activated. Return high alarm thermostat to the desired setpoint. In operation, this must be at least 5° above the cooling lever setpoint. Failure to set alarm thermostat setpoint at least 5° above thermostat setpoint could result in nuisance tripping of alarm circuit.

12. Set heating and cooling temperature levers to the desired operating setpoints. Check the high alarm thermostat setpoint to make sure that it is at least 5° above the first stage cooling setpoint temperature. Check the low alarm thermostat to make sure it is at least 5° below the first stage heating setpoint temperature. Failure to set alarm thermostats correctly could result in nuisance tripping of alarm circuit.

13. Set thermostat heat anticipators per directions in thermostat instructions. Move thermostat system switch to off.

14. Push and hold timer speedup switch. Relays 1 and 2 should be heard switching approximately every 10 seconds. This indicates proper timer function. Release switch. Move thermostat system switch to AUTO.

This completes system checkout.


TROUBLESHOOTING

The troubleshooting section is divided into four sections.


1. General
2. Timer
3. Units
4. Alarm Circuits

Always perform general troubleshooting section before performing any other section.

GENERAL TROUBLE SHOOTING PROCEDURES

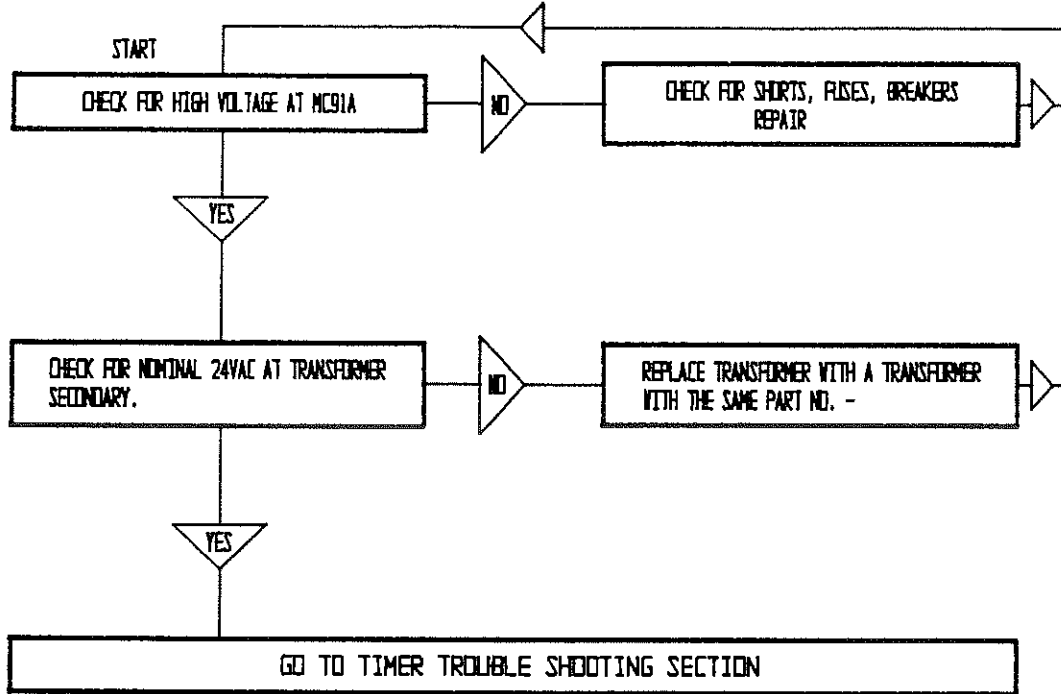

TIMER SECTION - TROUBLE SHOOTING THE TIMER AND ITS RELATED RELAYS (R1) & (R2)

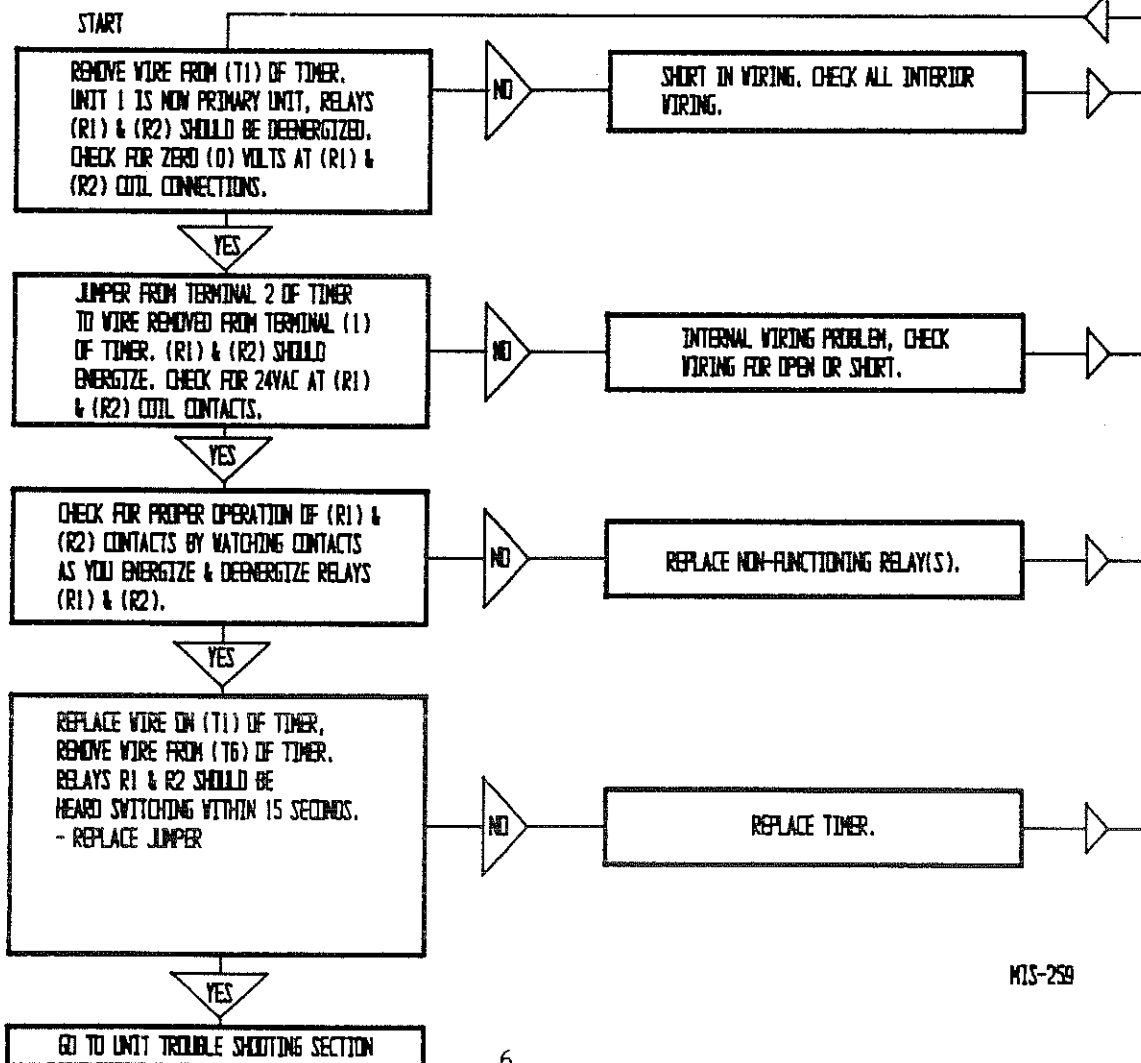

M15-259

UNIT SECTION - TROUBLE SHOOTING UNITS #1 & #2

UNIT #1

YES

REMOVE WIRE FROM (T1) OF TIMER. UNIT 1 NOW PRIMARY UNIT. PERFORM NORMAL TROUBLE SHOOTING TECHNIQUES ON UNIT ONE ELECTRICAL & REFRIGERATION COMPONENTS. USE SEQUENCE OF OPERATION TO VERIFY PROPER OPERATION OF UNIT, THERMOSTAT, AND ECONOMIZER.

YES

NO

CHECK RELAYS R12, R11, AND R10 FOR PROPER OPERATION.
R10 SHOULD ENERGIZE ON A CALL FOR Y1,
R8 SHOULD ENERGIZE ON A CALL FOR Y2,
R9 SHOULD ENERGIZE ON A CALL FOR W1,
R7 SHOULD ENERGIZE ON A CALL FOR W2.

YES

NO

REPLACE MALFUNCTIONING RELAYS.

YES

UNIT #2

YES

REMOVE WIRE FROM (T1) OF TIMER & JUMPER TO TERMINAL 2 OF TIMER. UNIT 2 IS NOW PRIMARY UNIT. PERFORM NORMAL TROUBLE SHOOTING TECHNIQUES ON UNIT TWO ELECTRICAL & REFRIGERATION COMPONENTS. USE SEQUENCE OF OPERATIONS TO VERIFY PROPER OPERATION OF UNIT, THERMOSTAT, AND ECONOMIZER.

YES

NO

CHECK RELAYS R9, R8, AND R7 FOR PROPER OPERATION.
R8 SHOULD ENERGIZE ON A CALL FOR Y1,
R10 SHOULD ENERGIZE ON A CALL FOR Y2,
R7 SHOULD ENERGIZE ON A CALL FOR W1,
R9 SHOULD ENERGIZE ON A CALL FOR W2.

YES

NO


REPLACE MALFUNCTIONING RELAYS.

NO


GO TO ALARM TROUBLE SHOOTING SECTION

YES


POWER LOSS ALARM CIRCUIT TROUBLESHOOTING

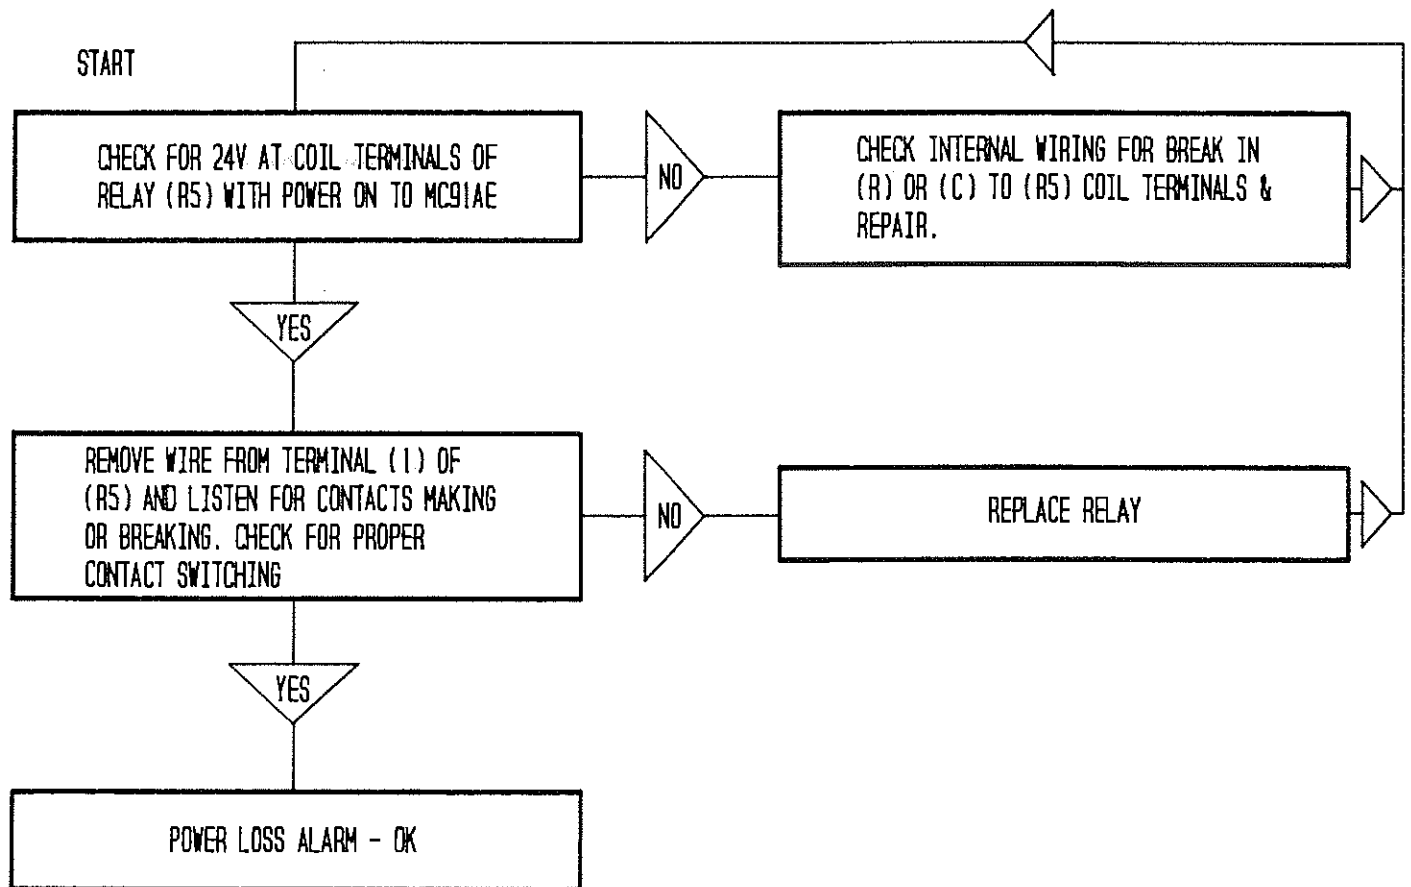

LOW TEMPERATURE ALARM - TROUBLE SHOOTING PROCEDURE

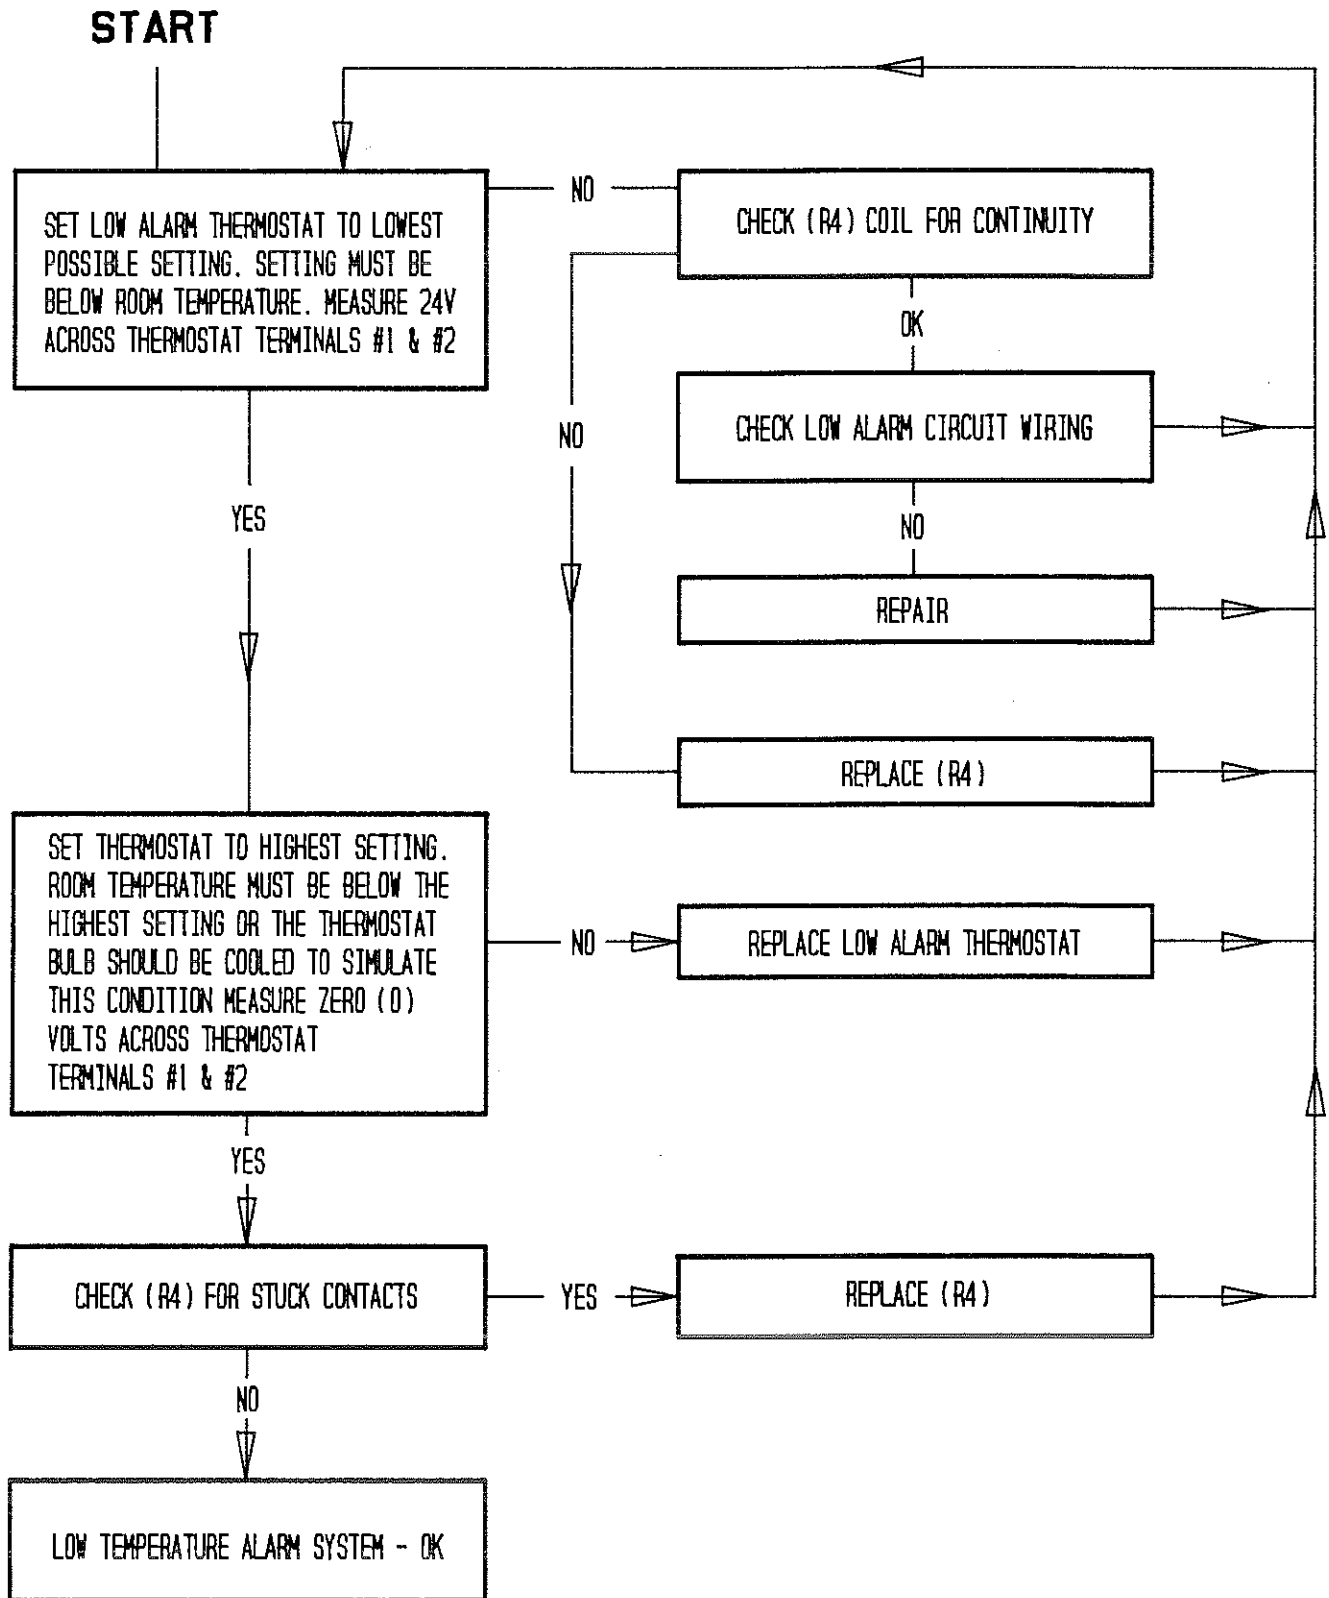

HIGH TEMPERATURE ALARM - TROUBLE SHOOTING PROCEDURE

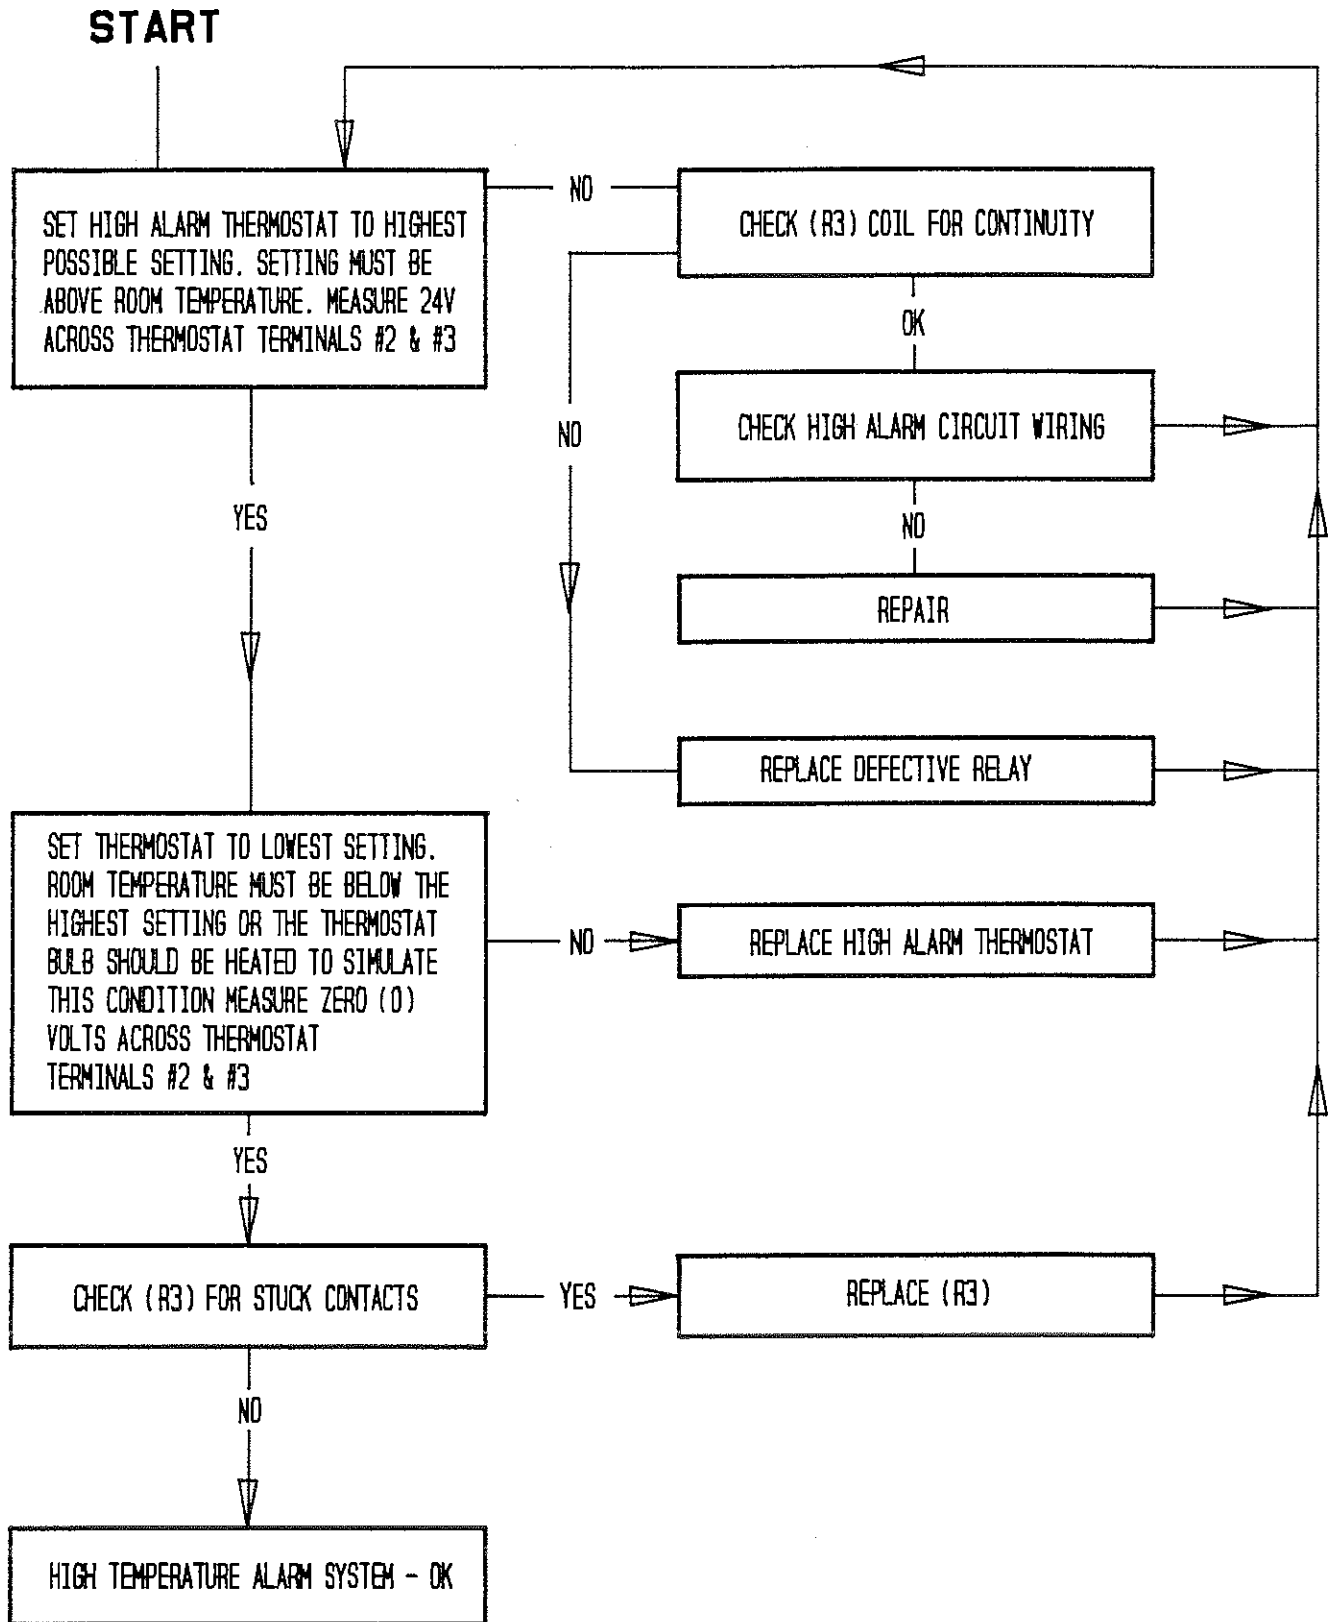

LOW VOLTAGE CONNECTIONS, NO ECONOMIZER


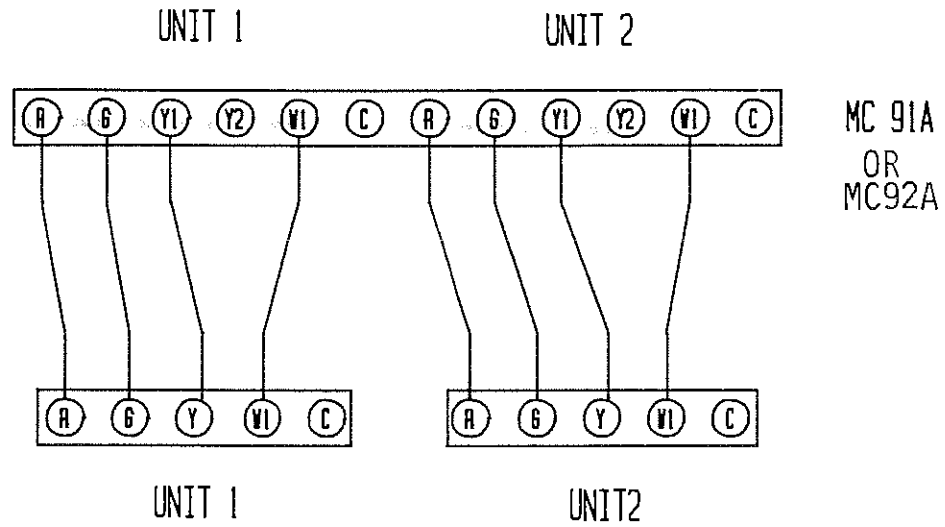


FIGURE 1
11

MC91A LADDER DIAGRAM

L1 240 208 120

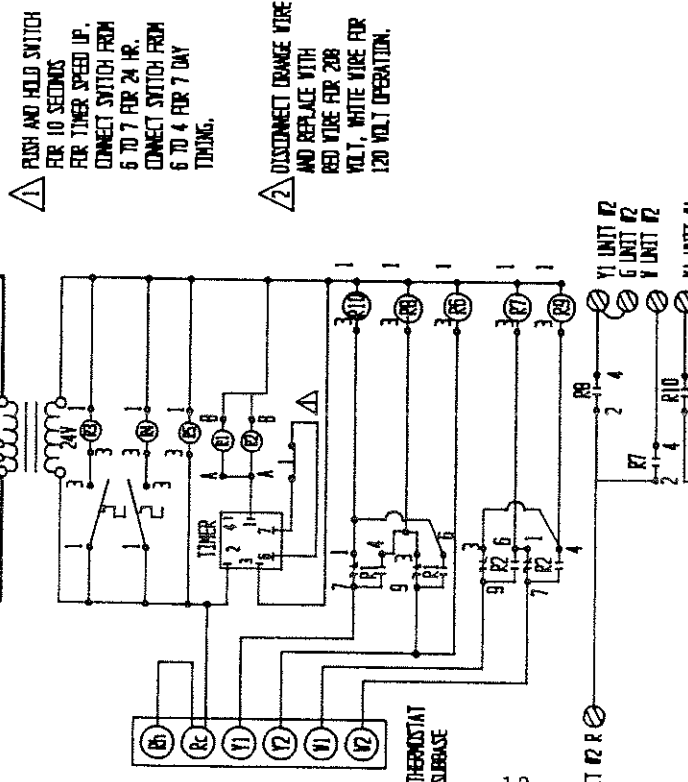


△ 1 PUSH AND HOLD SWITCH FOR 10 SECONDS FOR TIMER SPEED UP. CONNECT SWITCH FROM 6 TO 7 FOR 24 HR. CONNECT SWITCH FROM 6 TO 4 FOR 7 DAY TIMING.

△ 2 DISCONNECT ORANGE WIRE AND REPLACE WITH RED WIRE FOR 208 VOLT. WHITE WIRE FOR 120 VOLT OPERATION.


WIRE COLOR	COLOR CODE ABBREVIATION
BLACK	BK
BROWN	BR
RED	R
ORANGE	O
YELLOW	Y
GREEN	G
BLUE	BL
VIOLET(PURPLE)	W(PR)
GRAY(SLATE)	GY(S)
WHITE	W
TAN	T
PINK	PK
LAVENDER	L

MC91A WIRING DIAGRAM

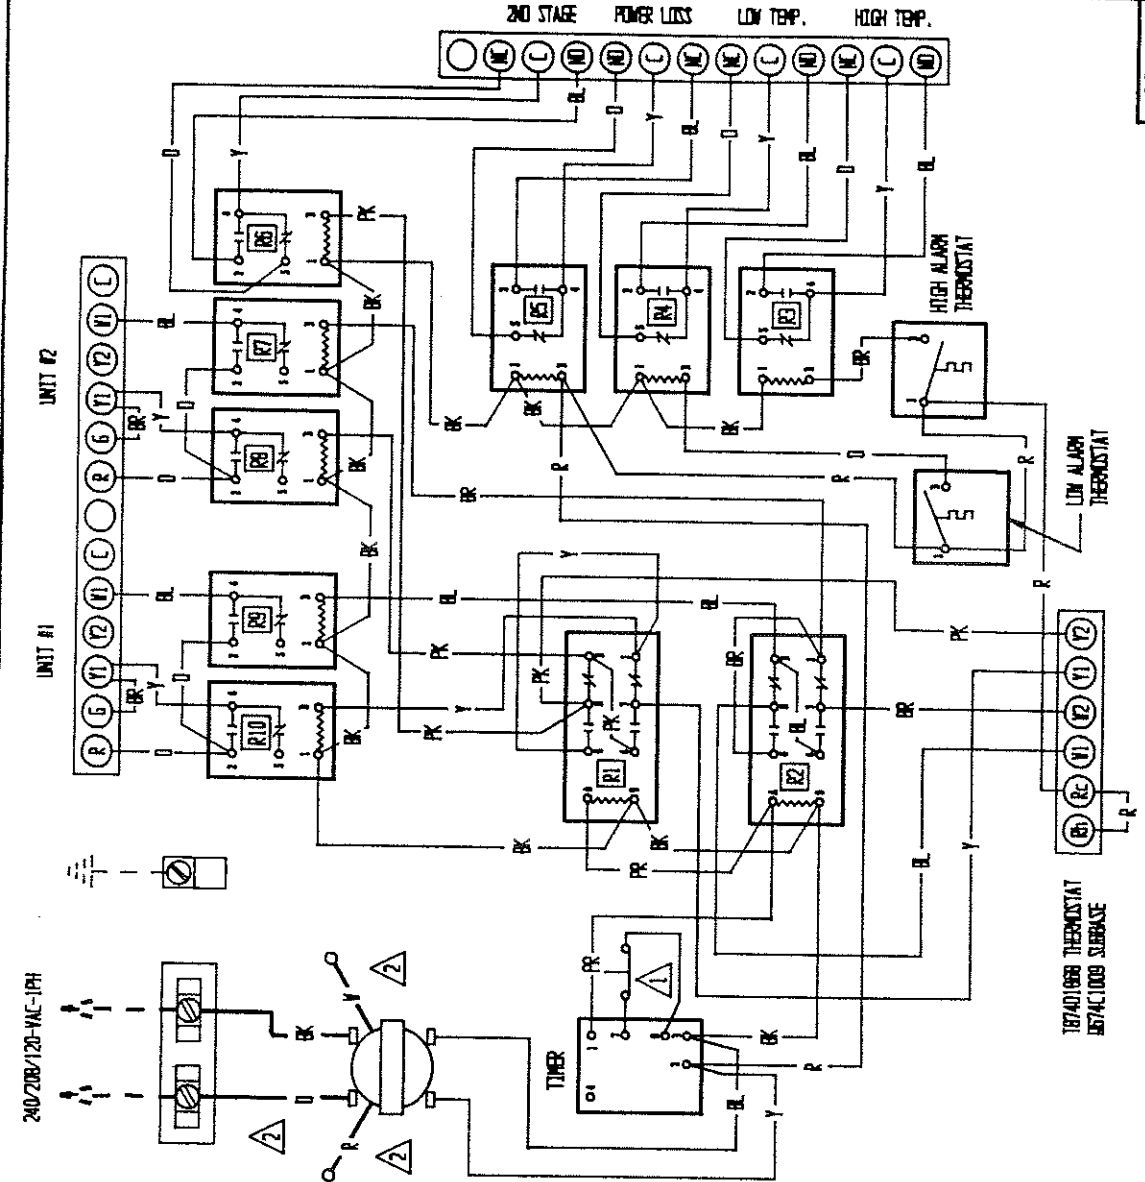

240/208/120-VAC-1PH

MC92A LADDER DIAGRAM

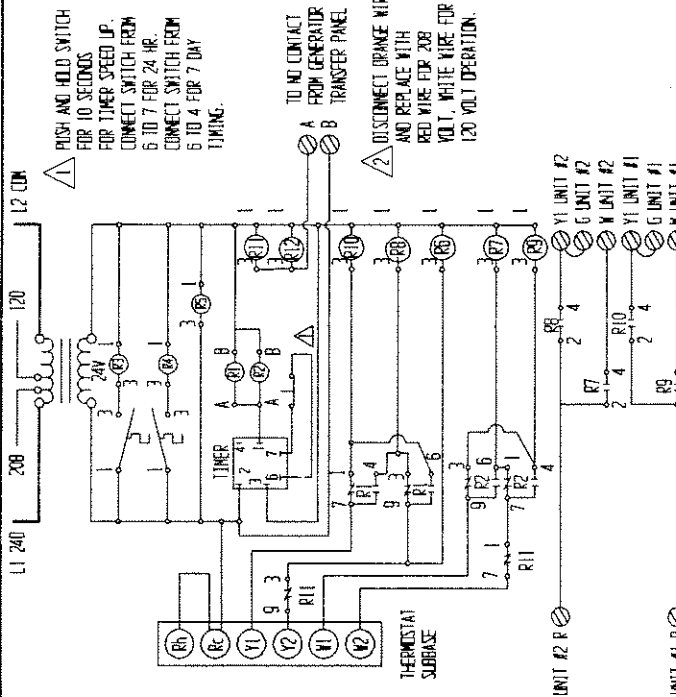

1. PUSH AND HOLD SWITCH FOR 10 SECONDS FOR TIMER SPEED UP. CONNECT SWITCH FROM 6 TO 7 FOR 24 HR. CONNECT SWITCH FROM 6 TO 4 FOR 7 DAY TIMING.

2. TO NO CONTACT FROM GENERATOR TRANSFER PANEL. DISCONNECT ORANGE WIRE AND REPLACE WITH RED WIRE FOR 208 VOLT, WHITE WIRE FOR 120 VOLT OPERATION.

WIRE COLOR	COLOR CODE ABBREVIATION
BLACK	BK
BROWN	BR
RED	R
BROWN	BR
ORANGE	O
YELLOW	Y
GREEN	G
BLUE	BL
VIOLET/PURPLE	VP(P)
GRAY/SLATE	GK(S)
WHITE	W
TAN	T
PINK	PK
LAVENDER	L

MC92A WIRING DIAGRAM



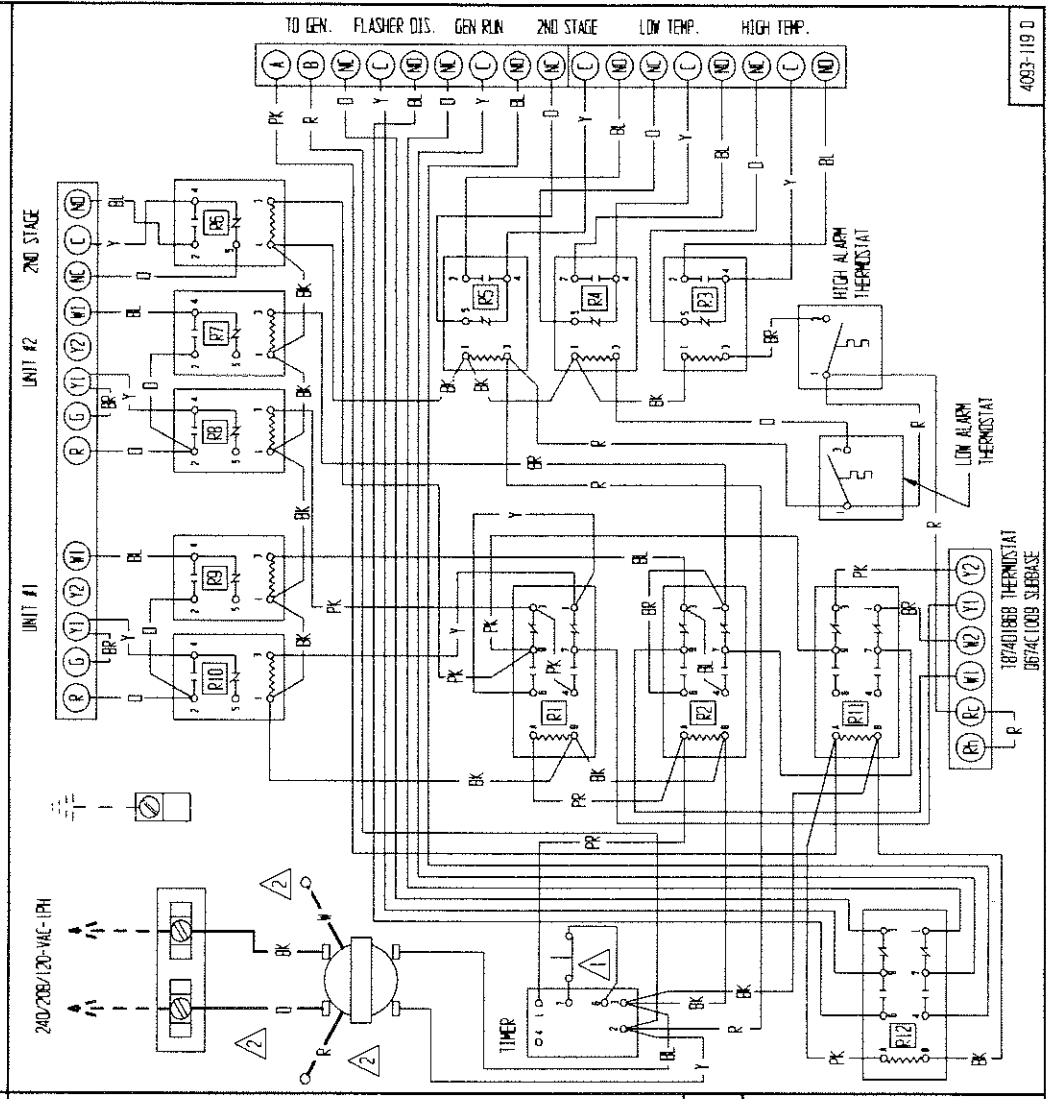


FIGURE 4

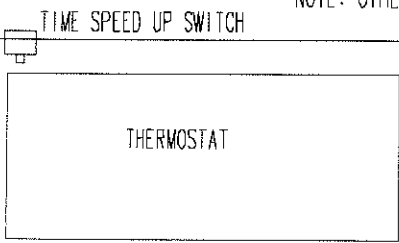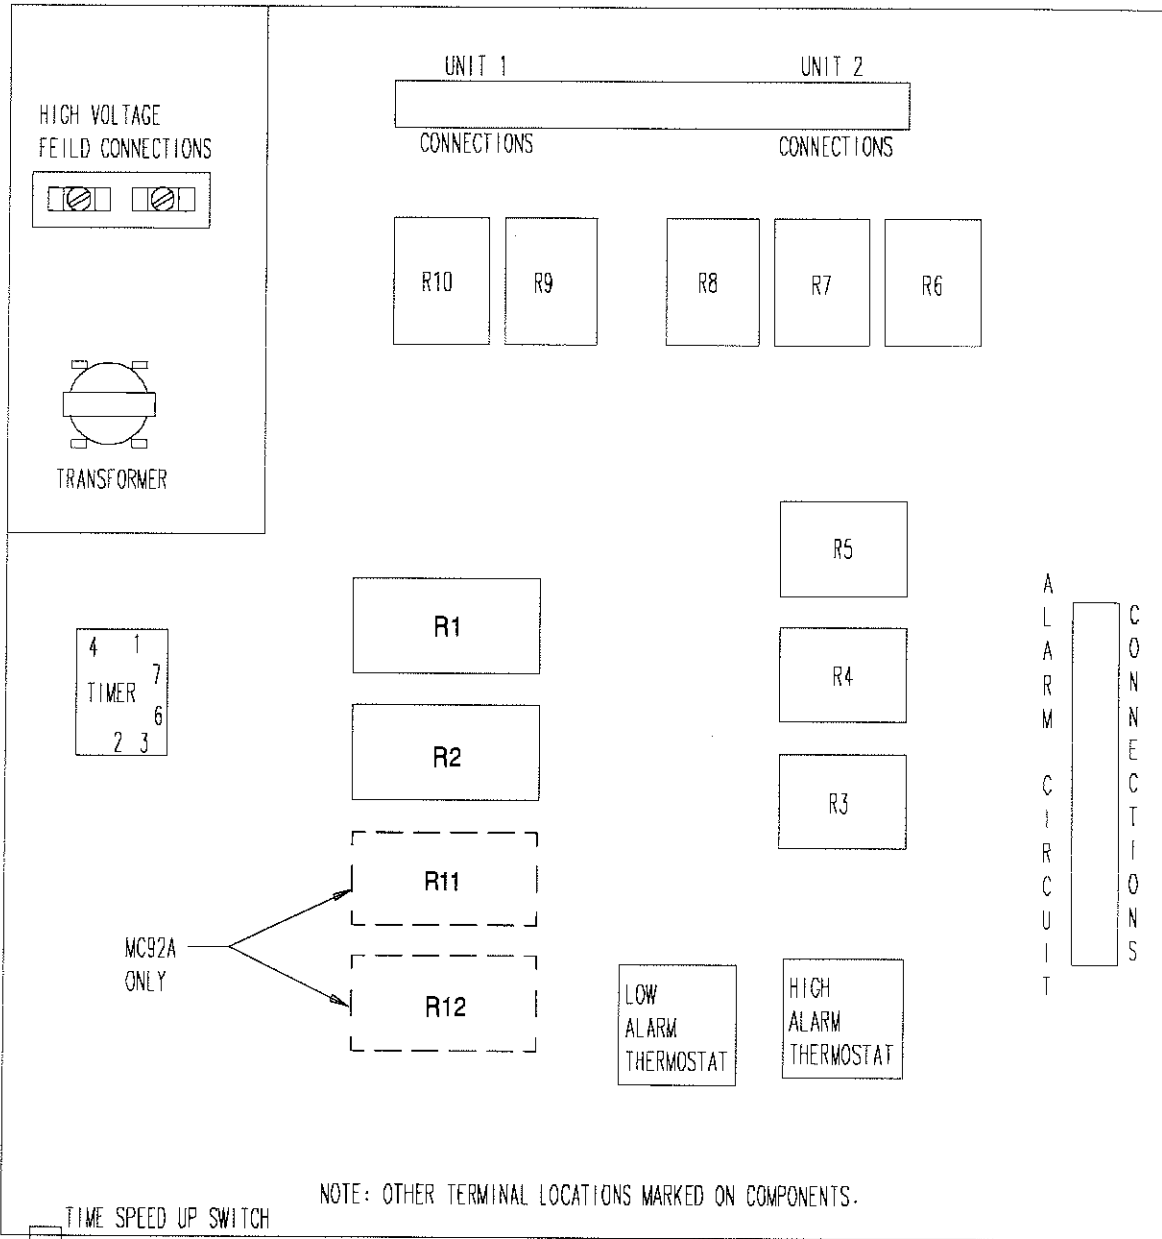

- THERMOSTAT----- PART # 8403-031
- SUBBASE ----- PART # 8404-013
- LOW ALARM THERMOSTAT - PART # 8408-021
- HIGH ALARM THERMOSTAT - PART # 8408-022
- RELAYS (R1 & R2) ----- PART # 8201-048
- RELAYS (R3 - R10) ----- PART # 8201-062
- TIMER ----- PART # 8612-014
- SPEED UP SWITCH----- PART # 8405-082

FIGURE 4
MIS-270