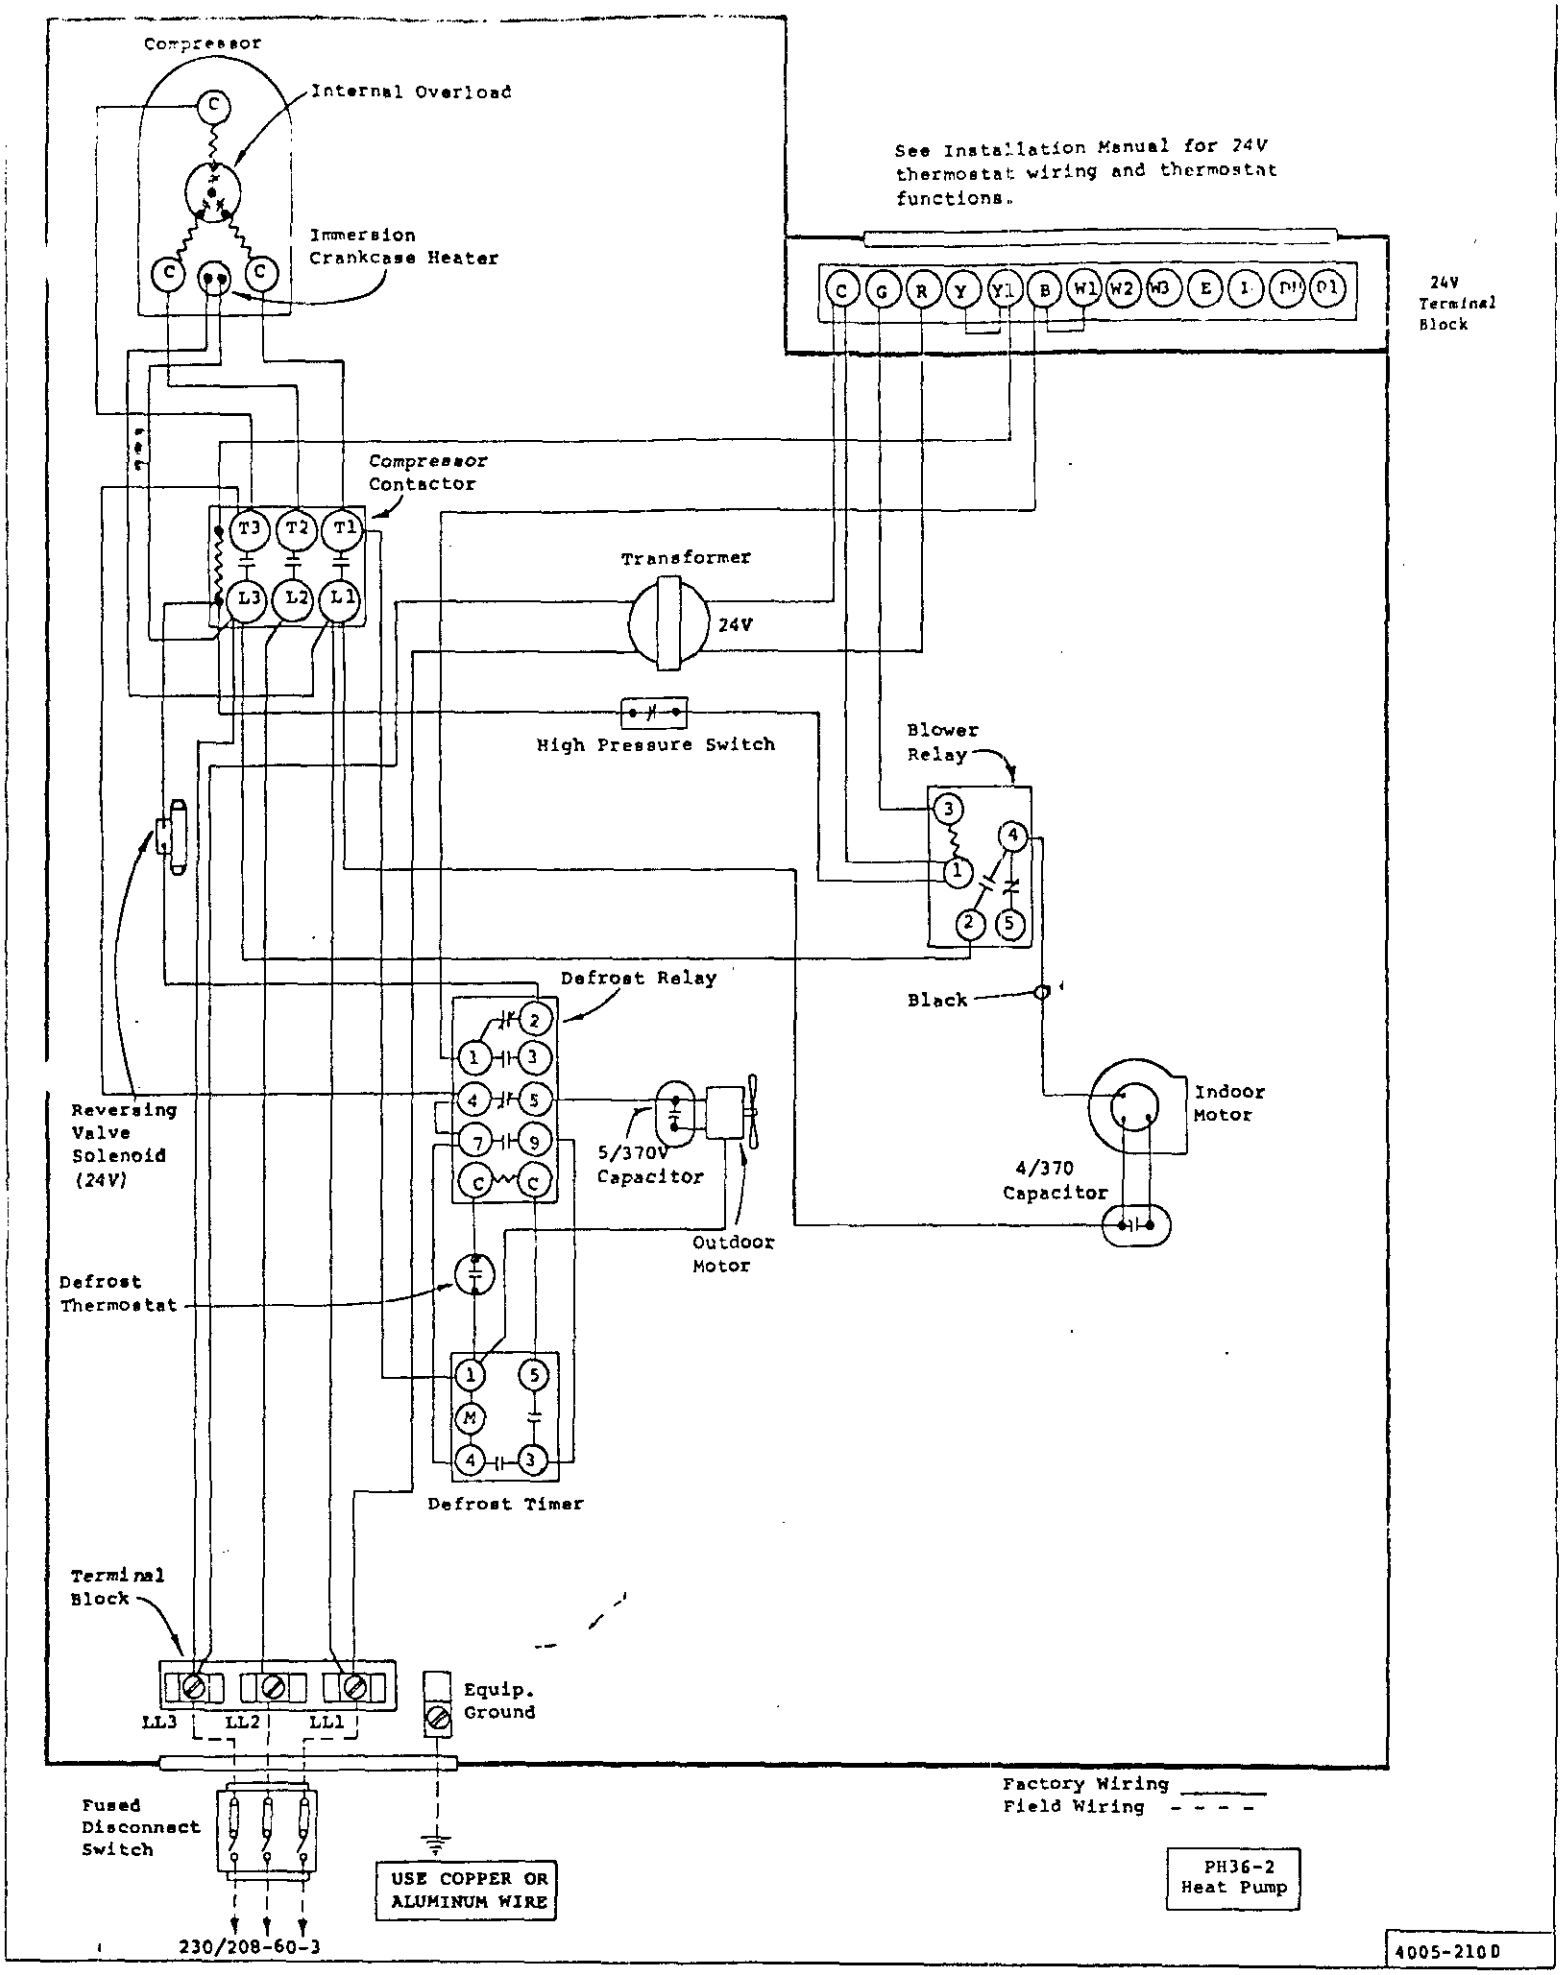
Compressor
Internal Overload
Immersion Crankcase Heater
See Installation Manual for 24V thermostat wiring and thermostat functions.
C G R Y Y1 B W1 W2 W3 E L DH D1
24V Terminal Block
Compressor Contactor
T3 T2 T1
L3 L2 L1
Transformer
24V
High Pressure Switch
Blower Relay
Defrost Relay
Black
Reversing Valve Solenoid (24V)
5/370V Capacitor
Indoor Motor
4/370 Capacitor
Outdoor Motor
Defrost Thermostat
Defrost Timer
Terminal Block
LL3 LL2 LL1
Equip. Ground
Fused Disconnect Switch
USE COPPER OR ALUMINUM WIRE
230/208-60-3
Factory Wiring
Field Wiring
PH36-2 Heat Pump
4005-210D

04