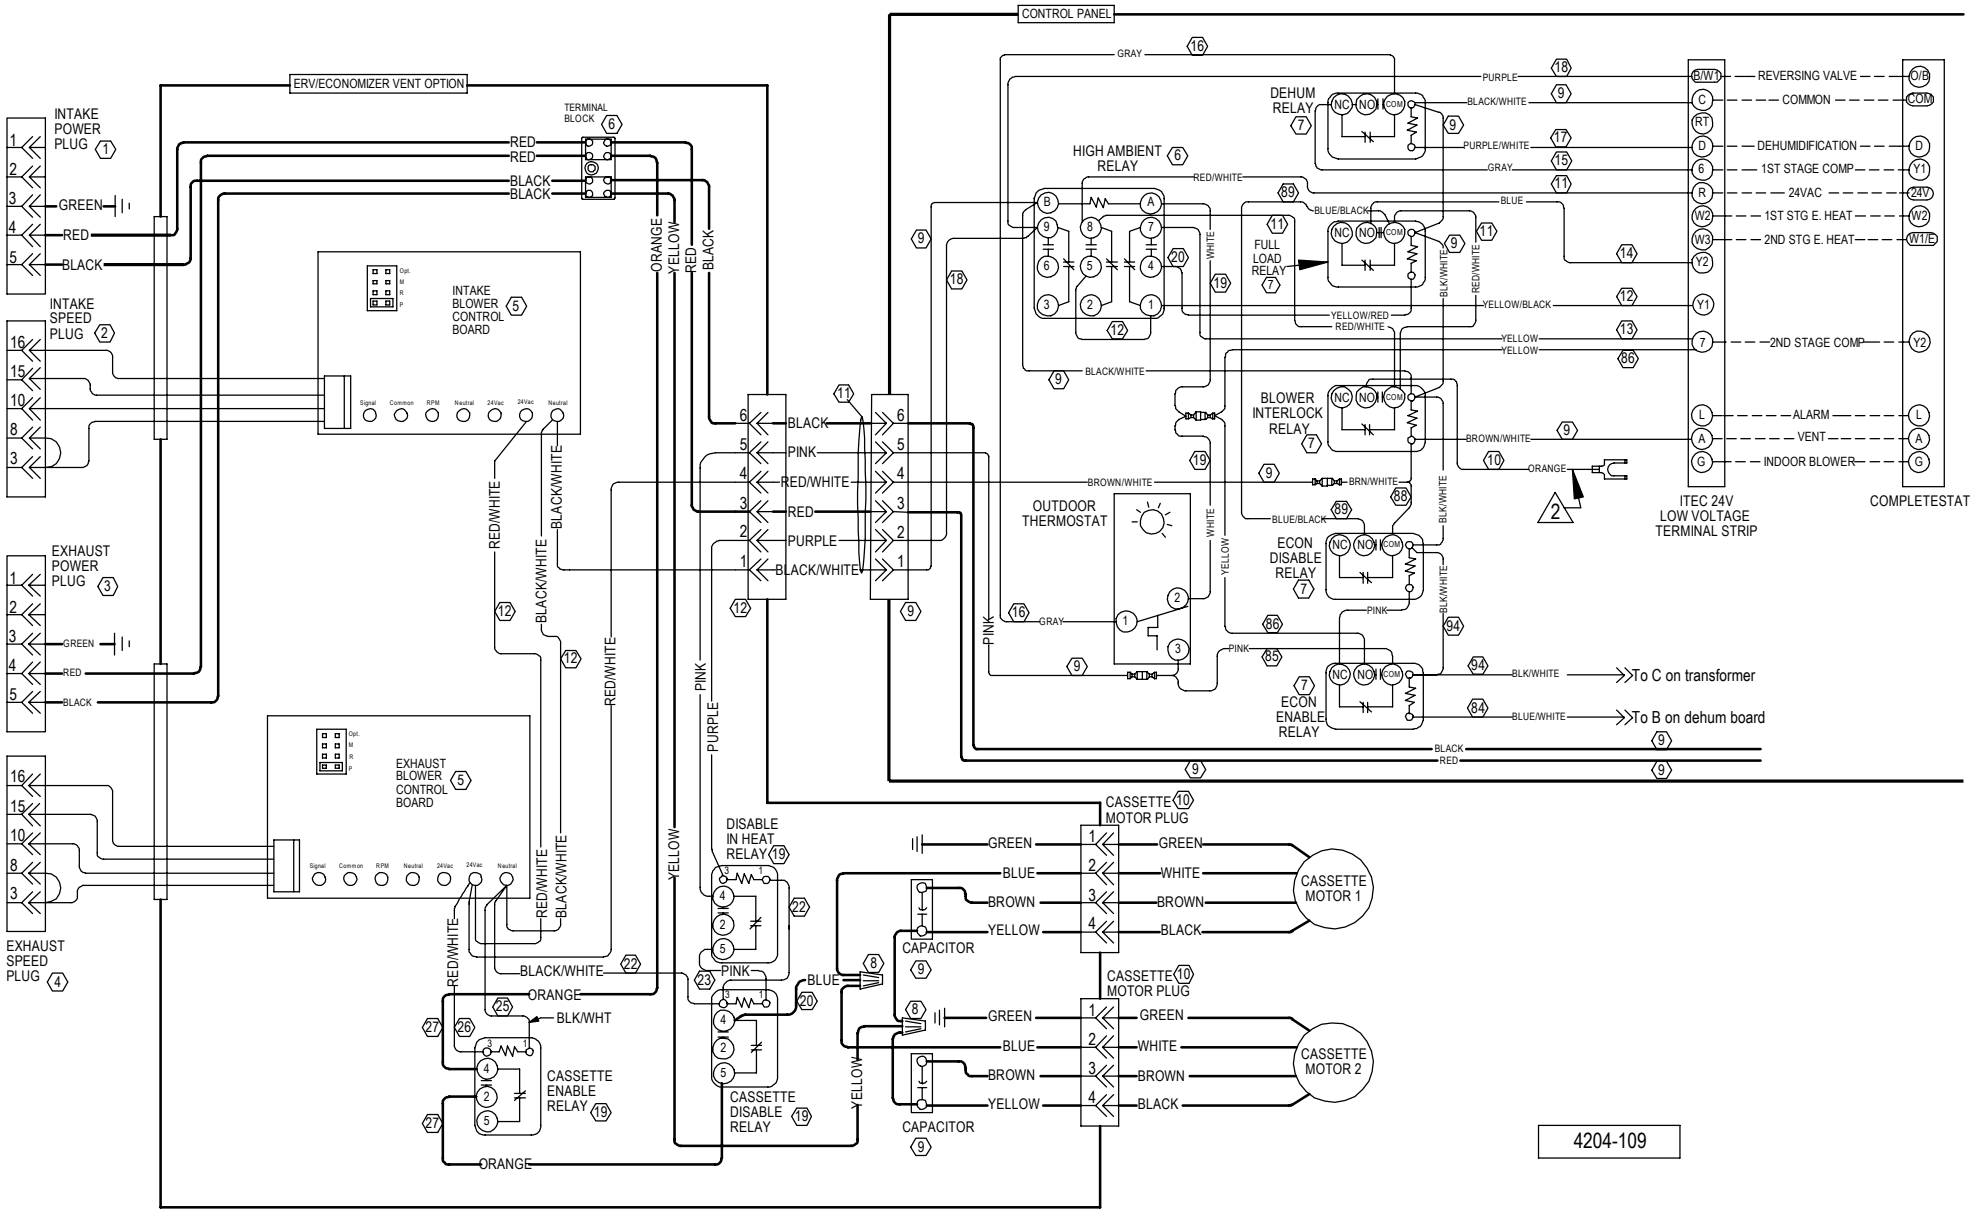
CONTROL PANEL
ERV/ECONOMIZER VENT OPTION
INTAKE POWER PLUG 1
INTAKE SPEED PLUG 2
EXHAUST POWER PLUG 3
EXHAUST SPEED PLUG 4
TERMINAL BLOCK 6
INTAKE BLOWER CONTROL BOARD 5
EXHAUST BLOWER CONTROL BOARD 5
Signal Common RPM Neutral 24Vac 24Vac Neutral
DEHUM RELAY 7
HIGH AMBIENT RELAY 6
FULL LOAD RELAY 7
BLOWER INTERLOCK RELAY 7
OUTDOOR THERMOSTAT
ECON DISABLE RELAY 7
ECON ENABLE RELAY 7
ITEC 24V LOW VOLTAGE TERMINAL STRIP
COMPLETESTAT
REVERSING VALVE
COMMON
DEHUMIDIFICATION
1ST STAGE COMP
24VAC
1ST STG E. HEAT
2ND STG E. HEAT
2ND STAGE COMP
ALARM
VENT
INDOOR BLOWER
To C on transformer
To B on dehum board
DISABLE IN HEAT RELAY 19
CASSETTE ENABLE RELAY 19
CASSETTE DISABLE RELAY 19
CASSETTE MOTOR PLUG 10
CASSETTE MOTOR 1
CASSETTE MOTOR 2
CAPACITOR 9
4204-109