


T872C1004 Thermostat
Q672F1026 Subbase



Emergency
Signal Light

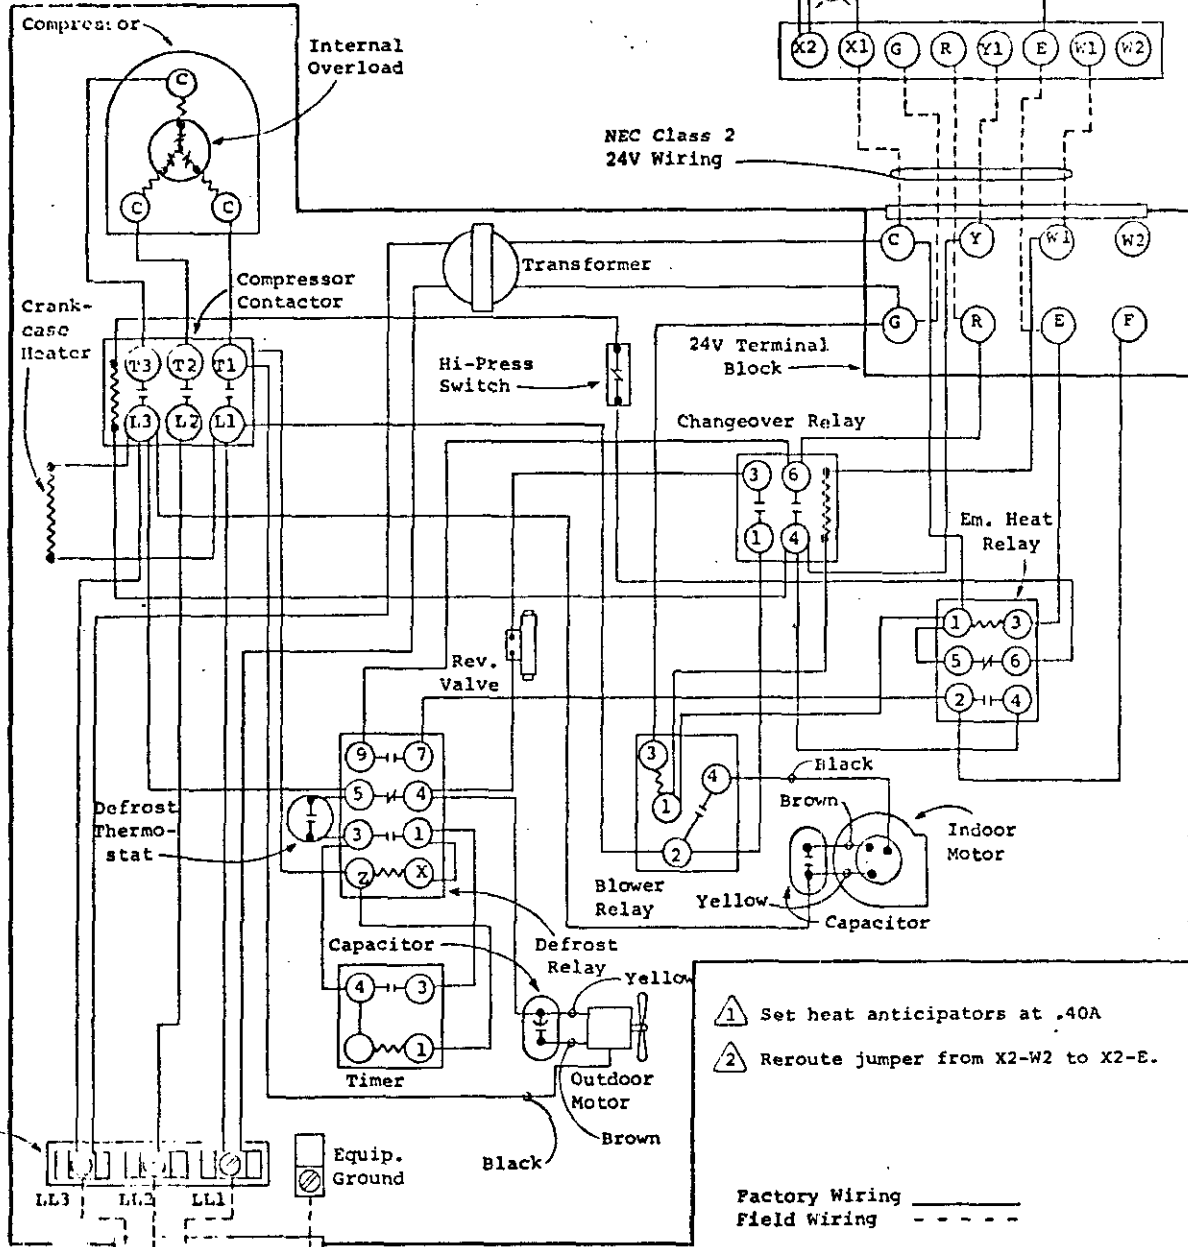

- ① Set heat anticipators at .40A
- ② Reroute jumper from X2-W2 to X2-E.

Factory Wiring ———
Field Wiring - - - - -

USE COPPER OR
ALUMINUM WIRE

Single Package
Heat Pump
3-Ton

240/200-50-3