


**USE COPPER OR ALUMINUM WIRE**

- ⚠ Capacitor provides off-cycle crankcase heat.
- ⚠ See alternate thermostat sheet. Set heat anticipator at .40A.

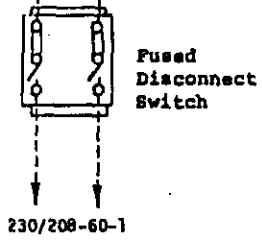

**Models**  
20WA1 & 24WA2  
w/B or 10KW

Factory Wiring ———  
Field Wiring - - - - -