


USE COPPER OR ALUMINUM WIRE

- 1 Capacitor provides off-cycle crankcase heat.
- 2 See alternate thermostat sheet. Set heat anticipator at .4DA.

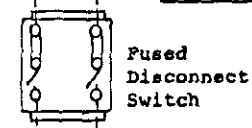

230/208-60-1

MODELS  
20WA1 & 24WA2  
w/4 or 5kw

Factory Wiring ———  
Field Wiring - - - - -