


USE COPPER OR ALUMINUM WIRE

- ⚠ See alternate thermostat sheet. Set heat anticipator at .40A.
- ⚠ For 208V operation move this wire to 208V transformer tap.

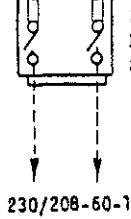

MODELS  
24WA4  
w/8 or 10kw

Factory Wiring ———  
Field Wiring - - - - -

4007-853 A