


Low Ambient Control
C.O. @ 200 PSIG
C.I. @ 250 PSIG

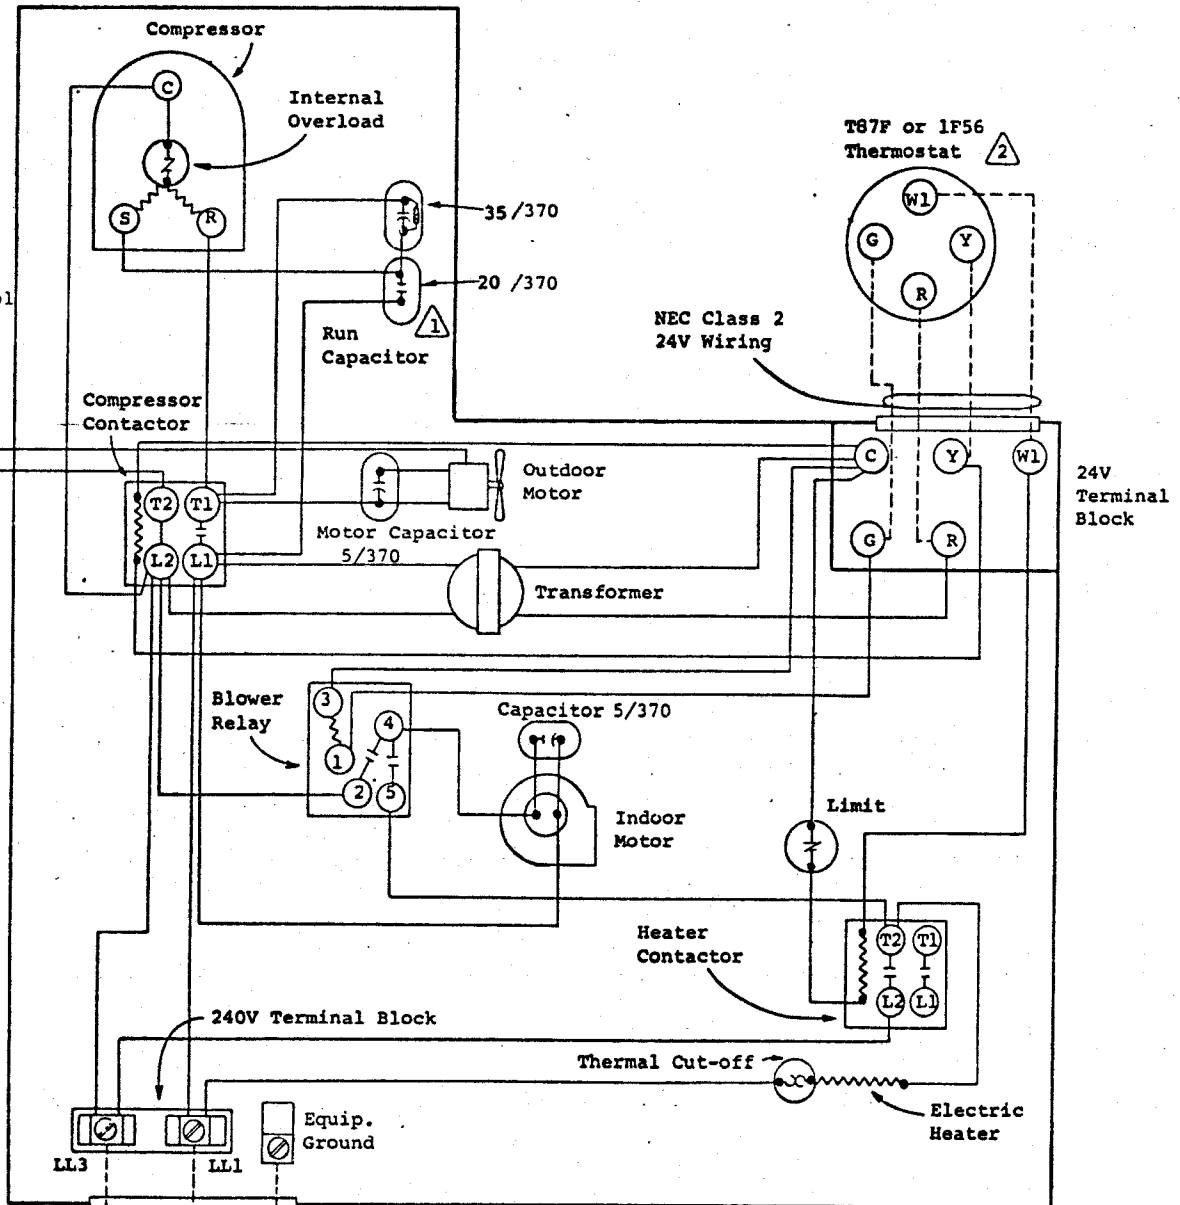

USE COPPER OR ALUMINUM WIRE

- ⚠ Wired for off-cycle crankcase heat.
- ⚠ See alternate thermostat sheet. Set heat anticipator at .40A

230/208-60-1

Fused Disconnect Switch

Factory Wiring ———
Field Wiring - - - - -

Model
36WA3
w/5Kw