


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

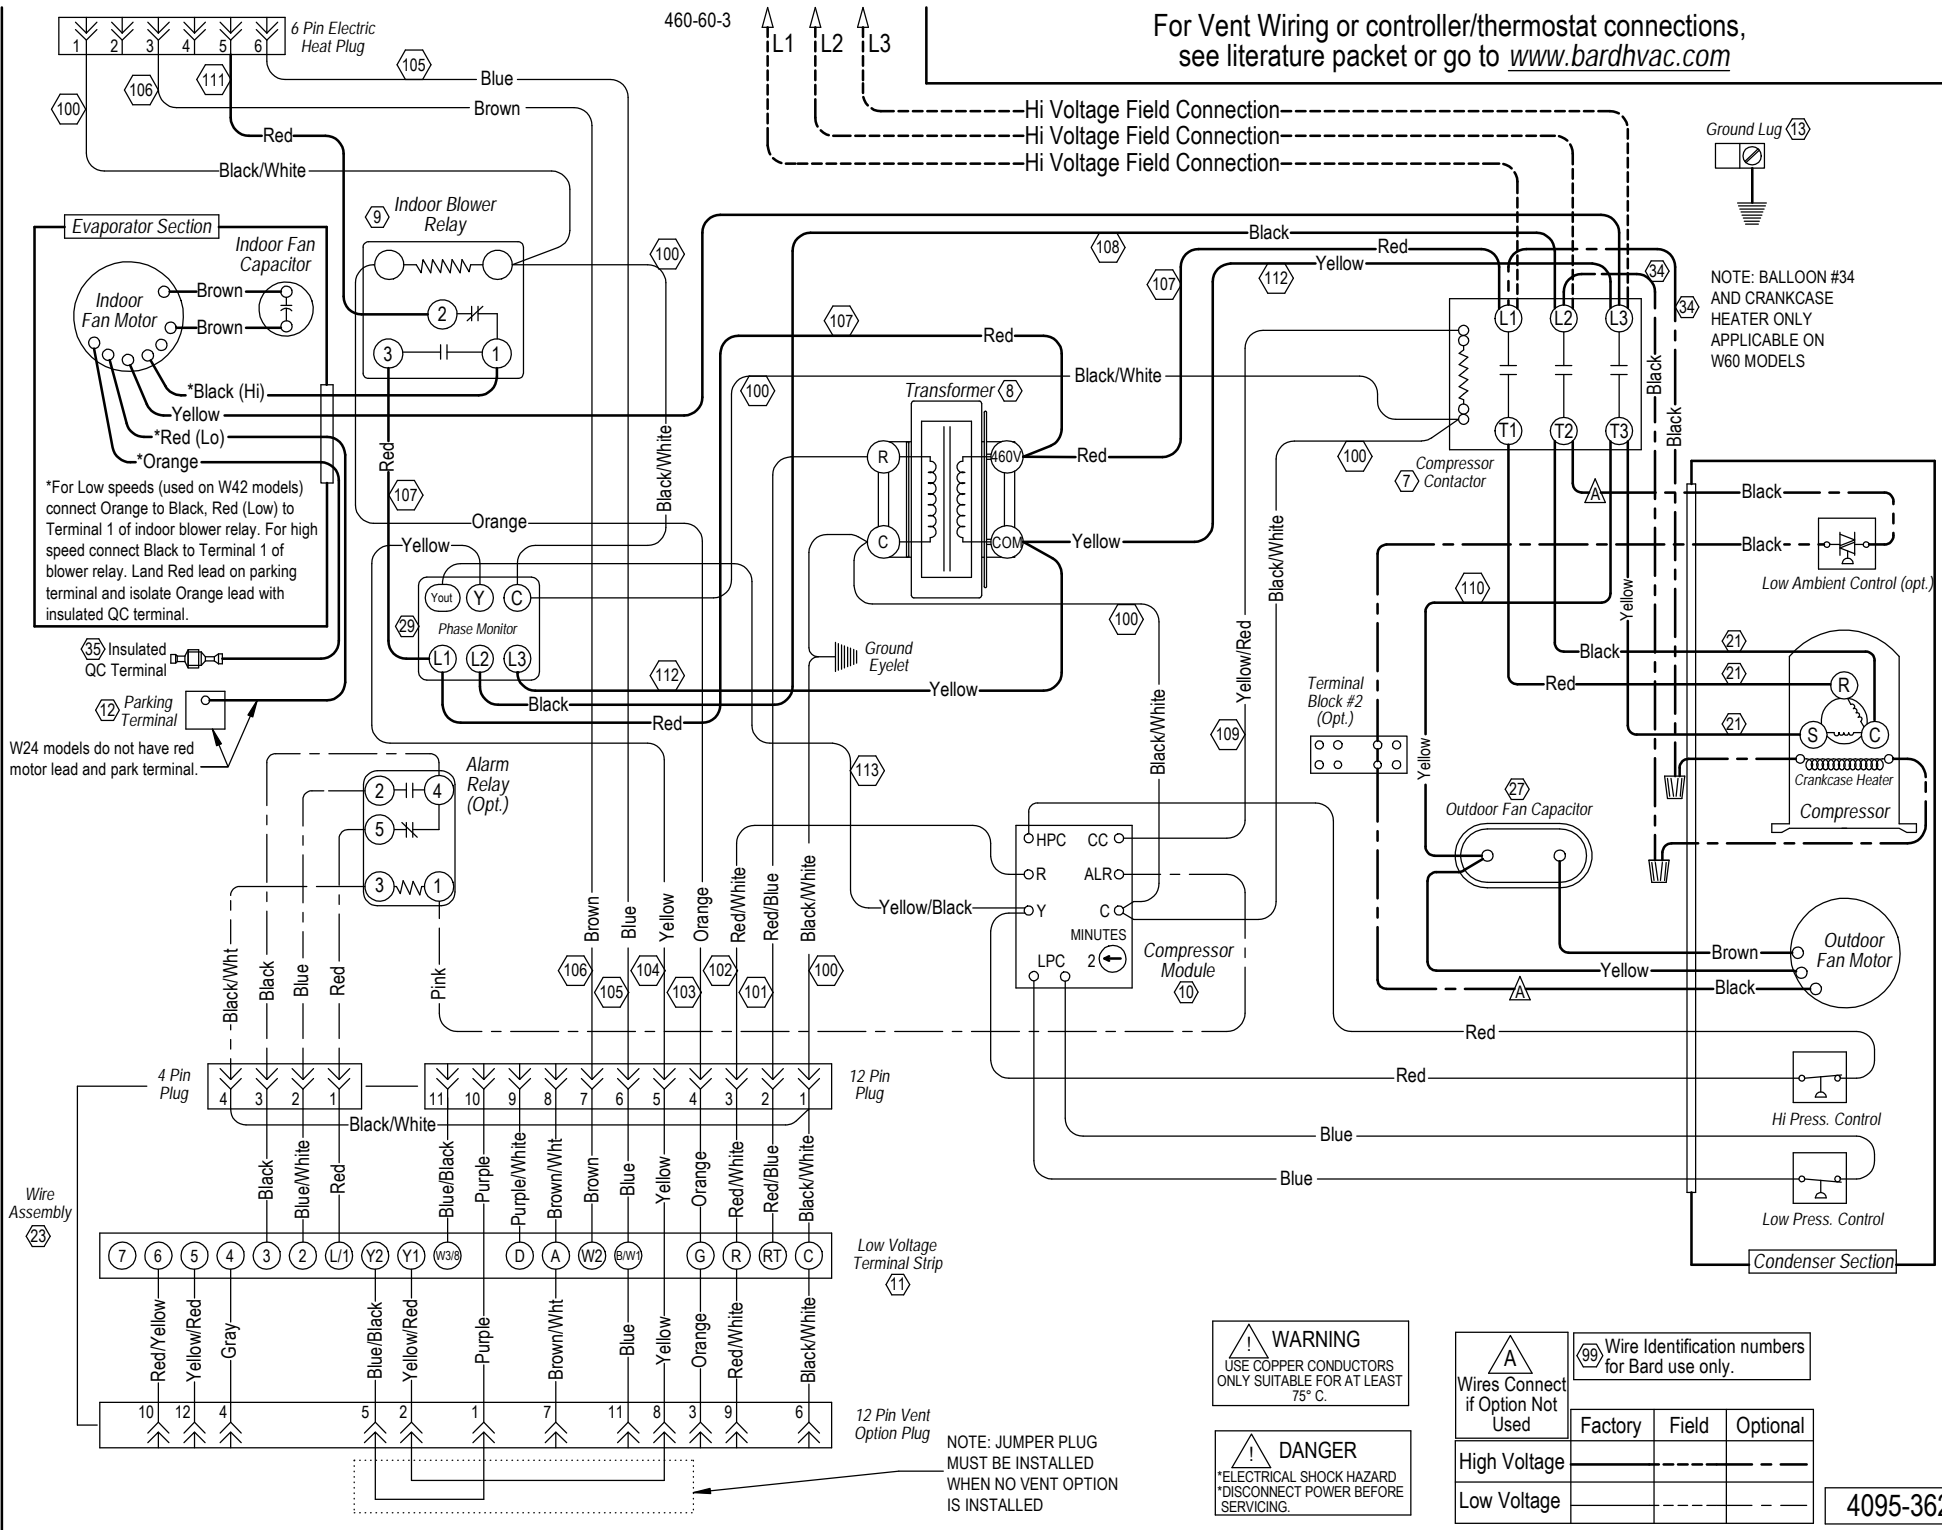

Evaporator Section

Indoor Fan Motor
Indoor Fan Capacitor

Brown
Brown

*Black (Hi)
Yellow
*Red (Lo)
*Orange

*For Low speeds (used on W42 models) connect Orange to Black, Red (Low) to Terminal 1 of indoor blower relay. For high speed connect Black to Terminal 1 of blower relay. Land Red lead on parking terminal and isolate Orange lead with insulated QC terminal.

(35) Insulated QC Terminal
(12) Parking Terminal

W24 models do not have red motor lead and park terminal.

NOTE: BALLOON #34 AND CRANKCASE HEATER ONLY APPLICABLE ON W60 MODELS

WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

DANGER
ELECTRICAL SHOCK HAZARD DISCONNECT POWER BEFORE SERVICING.

A
Wires Connect if Option Not Used

High Voltage	-----	-----	-----
Low Voltage	-----	-----	-----

(99) Wire Identification numbers for Bard use only.

	Factory	Field	Optional
High Voltage	-----	-----	-----
Low Voltage	-----	-----	-----

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED