



230/208-60-1
Per Nameplate

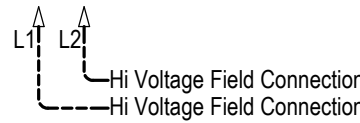

For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

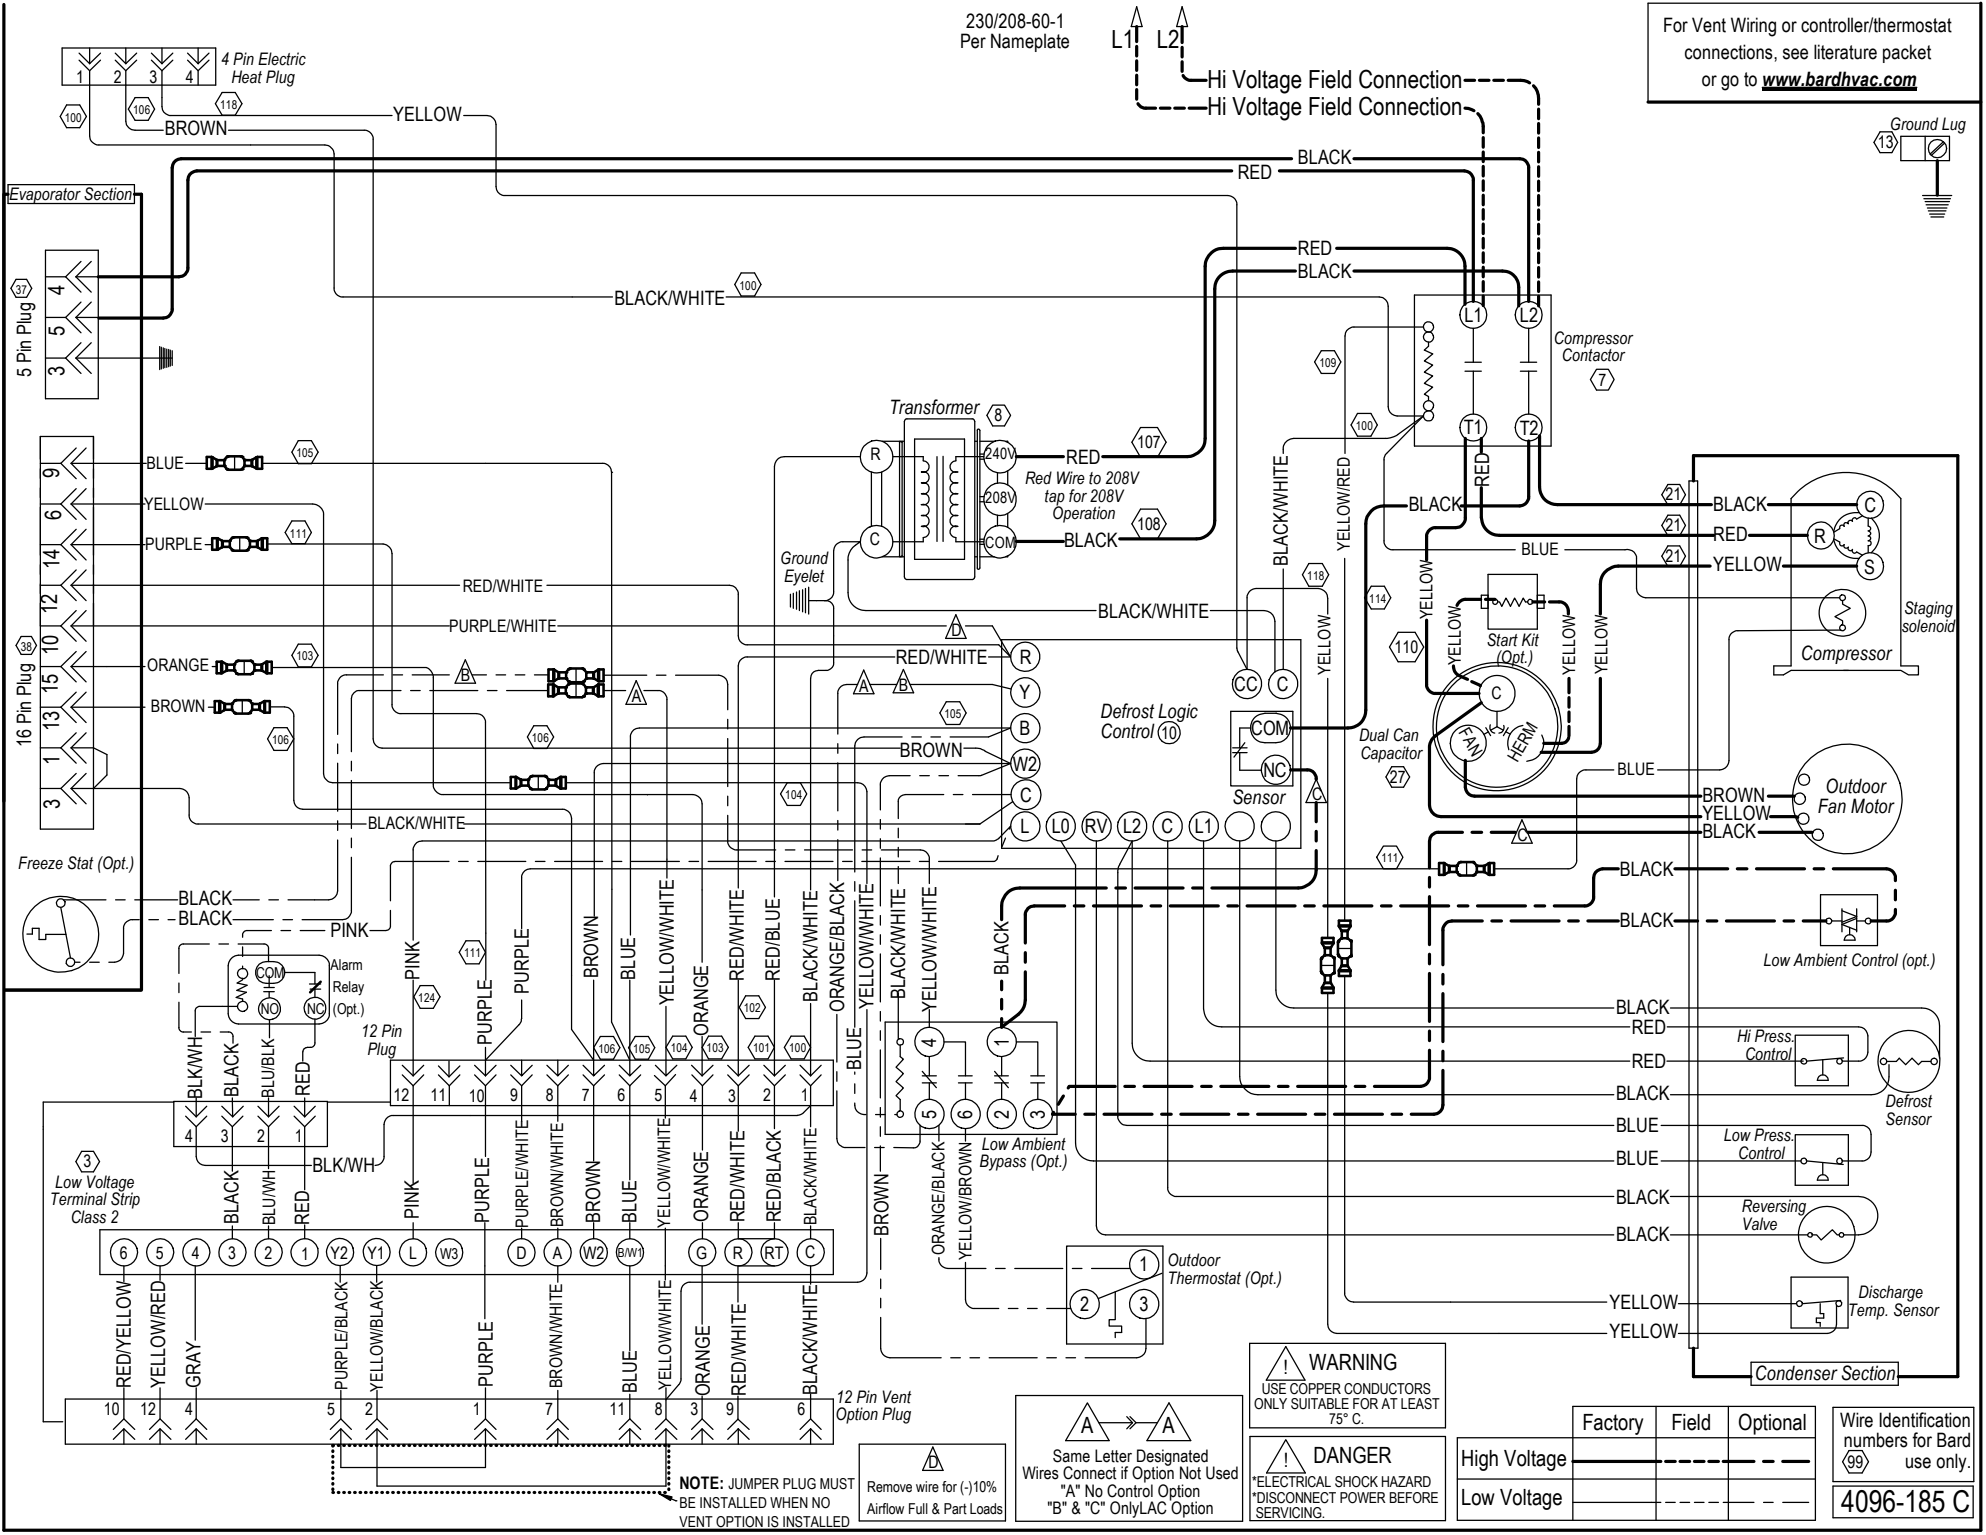

Evaporator Section

Compressor Contactor



Staging solenoid

Compressor

Outdoor Fan Motor

Low Ambient Control (opt.)

Hi Press Control

Low Press Control

Reversing Valve

Discharge Temp. Sensor

Condenser Section

Freeze Stat (Opt.)

Low Voltage Terminal Strip Class 2

12 Pin Plug

Low Ambient Bypass (Opt.)

Outdoor Thermostat (Opt.)

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED

Remove wire for (-)10% Airflow Full & Part Loads

Same Letter Designated Wires Connect if Option Not Used
"A" No Control Option
"B" & "C" Only LAC Option

WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

DANGER
ELECTRICAL SHOCK HAZARD
DISCONNECT POWER BEFORE SERVICING.

High Voltage
Low Voltage

Factory Field Optional

Wire Identification numbers for Bard (99) use only.

4096-185 C