

---

# WALL MOUNT HEATER PACKAGE

## REPLACEMENT PARTS MANUAL

### Models:

EHWA02-A05	EHWA02A-A08
EHWA02A-A10	EHWA24A-A04
EHWA24-B06	EHW24H-A04
EHW24H-A08	EHW24H-B06
EHWH24B-C06	

---

## General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

## Contents


Description	Page
Functional Components	
♦ Exploded View .....	2
♦ Usage List .....	3



Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506  
*Since 1914...Moving ahead, just as planned.*

Manual: 2110-620  
Supersedes: **NEW**  
File: Tab 18  
Date: 10-02-09

# FUNCTIONAL COMPONENTS

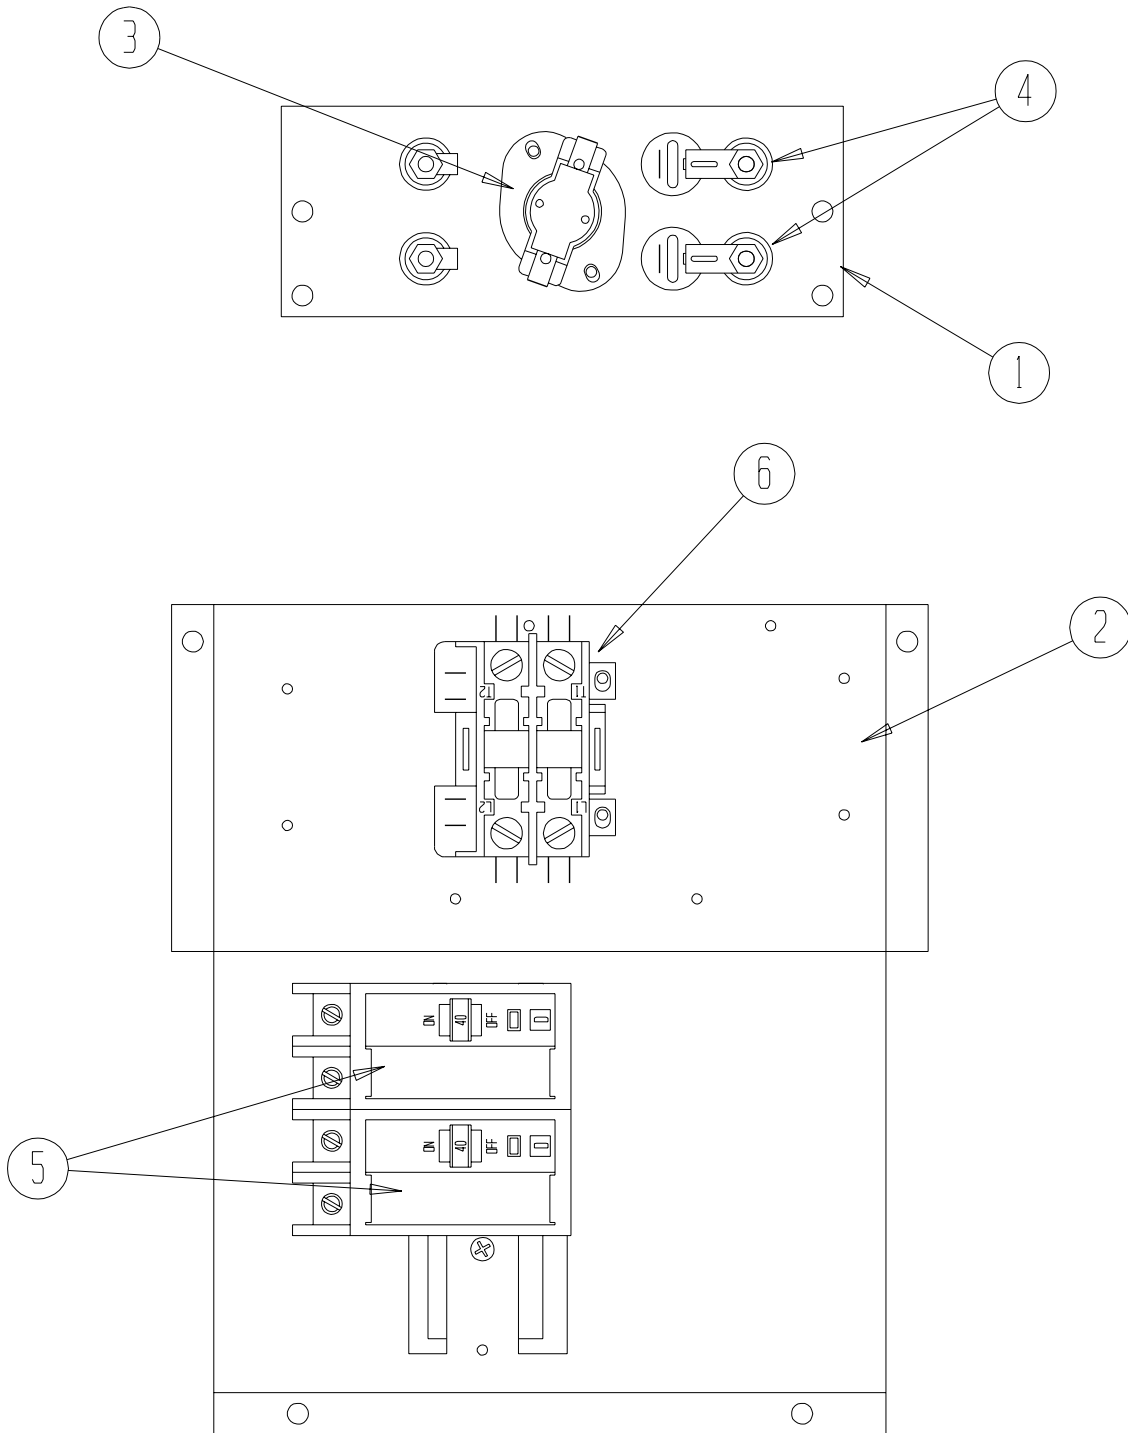

SEXP-173

Reference this Drawing for Page 3

# FUNCTIONAL COMPONENTS

			EHWA02-A05	EHWA02A-A08	EHWA02A-A10	EHWA24-B06	EHW24H-A04	EHW24H-A08	EHW24H-B06	EHW24B-C06	EHWA24A-A04
1	8604-089	Heat Strip 5 KW	X		X						
1	8604-095	Heat Strip 10 KW			X						
1	8604-090	Heat Strip 8 KW		X				X			
1	8604-049	Heat Strip 6 KW				X			X		
1	8604-088	Heat Strip 4 KW					X				X
1	8604-100	Heat Strip 6 KW								X	
2	127X210	Heater Control Base	X	X	X	X	X	X	X		X
2	127-321	Heater Control Base								X	
3	8402-065	Limit Control Device	X		X	X			X	X	
3	8402-049	Limit Control Device		X			X				X
3	8402-074	Limit Control Device						X			
4	8402-091	Thermal Cutoff				2			2		
4	8402-114	Thermal Cutoff	X				X				X
4	8402-094	Thermal Cutoff								2	
4	8402-093	Thermal Cutoff		2	2			2			
5	8615-036	Circuit Breaker 25A						X			X
5	8615-067	Disconnect Switch								X	
5	8615-037	Circuit Breaker 30A	X								
5	8615-042	Circuit Breaker 35A									
5	8615-041	Circuit Breaker 60A			X						
5	8615-055	Circuit Breaker 40A							X		
5	8615-039	Circuit Breaker 45A		X			X	X			
5	8615-051	Circuit Breaker 25A				X					
6	8401-006	Heater Contactor	X	X	X	X	X	X	X		X
6	8401-002	Heater Contactor								X	
NS	4097-121	Wiring Diagram					X				
NS	4097-140	Wiring Diagram		X	X						
NS	4097-220	Wiring Diagram				X					
NS	4097-221	Wiring Diagram							X		
NS	4097-120	Wiring Diagram	X								X
NS	4097-322	Wiring Diagram								X	
NS	4097-141	Wiring Diagram						X			

NS – Not Shown