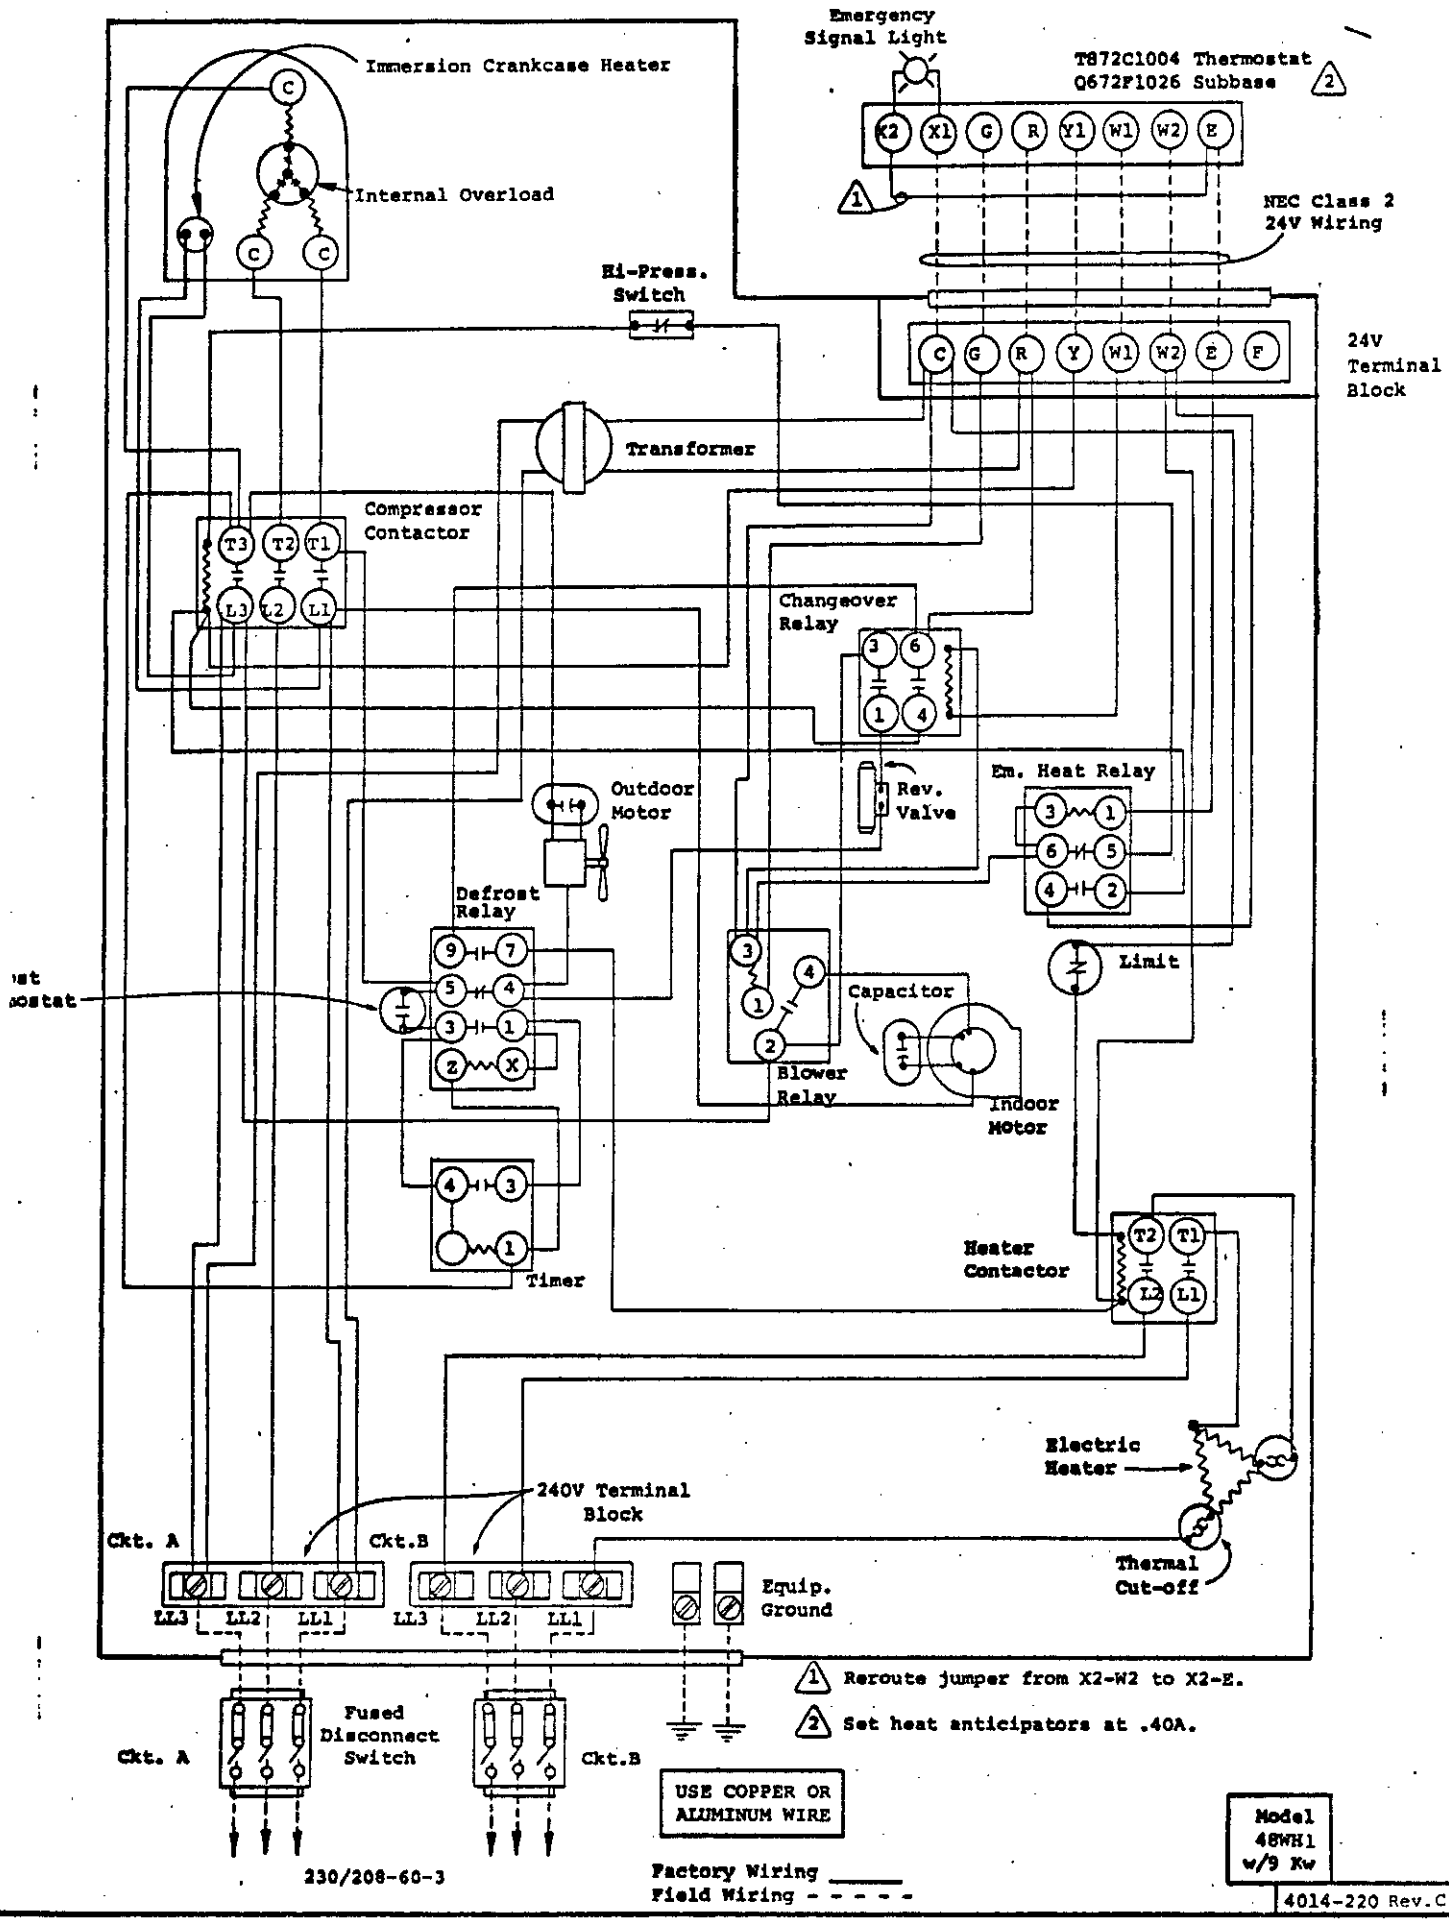
Emergency Signal Light
T872C1004 Thermostat
Q672F1026 Subbase
X2 X1 G R Y1 W1 W2 E
NEC Class 2 24V Wiring
Immersion Crankcase Heater
Internal Overload
C
Hi-Press. Switch
C G R Y W1 W2 E F
24V Terminal Block
Transformer
Compressor Contactor
T3 T2 T1
L3 L2 L1
Changeover Relay
Em. Heat Relay
Rev. Valve
Outdoor Motor
Defrost Relay
Limit
Capacitor
Blower Relay
Indoor Motor
Timer
Heater Contactor
T2 T1
L2 L1
Electric Heater
Thermal Cut-off
240V Terminal Block
Ckt. A
Ckt.B
LL3 LL2 LL1
Equip. Ground
Fused Disconnect Switch
230/208-60-3
USE COPPER OR ALUMINUM WIRE
Factory Wiring
Field Wiring
Reroute jumper from X2-W2 to X2-E.
Set heat anticipators at .40A.
Model 48WH1 w/9 Kw
4014-220 Rev.C