
SUPPLEMENTAL INSTRUCTIONS

Plenum Box

Models:

QPBHW42-F-V, -X, -1, -4

QPBHW42-D-V, -X, -1, -4

QPBHW42-F-V, -X, -1, -4

QPBHW42-D-V, -X, -1, -4

Installation

The plenum box is designed for use with the Q-TEC™ Series units. It is for use in free blow or ducted applications depending on the model specified.

1. Remove the center screw from each top side of the unit (see Figures 1 and 2 on page 3).
2. Cut insulation 6.5" back and 1.5" in. Install grommet in .875" hole in Q-TEC top.
3. Place plenum box on top of Q-TEC unit with the open side down and the grille facing the front of the unit.
4. Make sure the bottom offsets of the plenum box are inside the top of the Q-TEC unit flange. The outside of the plenum box should be flush with the outside of the unit.
5. Re-install the center screws in the top of the Q-TEC unit. These screws will go through the clearance holes on the plenum box and hold it in place.
6. Remove the side access panel and route low voltage valve wires through bushing. Route wires down, then in through back of control panel.



Climate Control Solutions

Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 7960-452L
Supersedes: 7960-452K
Date: 10-18-23

Sequence of Operation

Hot Water Heat as Primary Heat for Heat Pumps

1. Install relay assembly in the Q-TEC HP unit with self-drilling screws provided and connect wires per Figure 3 on page 4.
2. Locate yellow wire from the 12-pin connector that connects to terminal Y of TB2. Disconnect wire from terminal Y and reconnect to terminal 4 of the relay.
3. Connect wires to terminals Y, B, W2 and C of TB2 in the Q-TEC unit (see Figure 3).

When wired as instructed above, the hot water coil will be the first and only stage of heating.

Heat Pump Primary and Hot Water as Second Stage

1. This step is only for heat pump as first stage and hot water as second stage.
Connect wires from hot water coil to terminals W2 and C on TB1. Relay assembly is not used. See Figure 4 on page 5.

When wired as instructed above, the heat pump will operate as first stage heat and the hot water as second stage heat.

To use the heat pump in emergencies (i.e., when the boiler is down), install a switch in the blue wire from relay terminal 3 to TB2 terminal B. When the switch is open, the unit will function as a heat pump without the hot water coil.

Hot Water Heat for Q**A (A/C Units)

1. Connect wires from hot water coil to terminals B and C of TB2 in the A/C unit (see Figure 4 on page 5).

Airflow Adjustment and Piping Connections

1. Adjust louvers to obtain desired air distribution (-F model only).
2. Connect supply and return piping. Supply is on the left (facing the front of the unit). Return is on the right (facing the front of the unit).

Consult Figure 5 on page 6 for heating capacity at the CFM and flow rate supplied to the hot water coil.

All values are at 180° water and 70° indoor conditions.

FIGURE 1
Free Blow Plenum

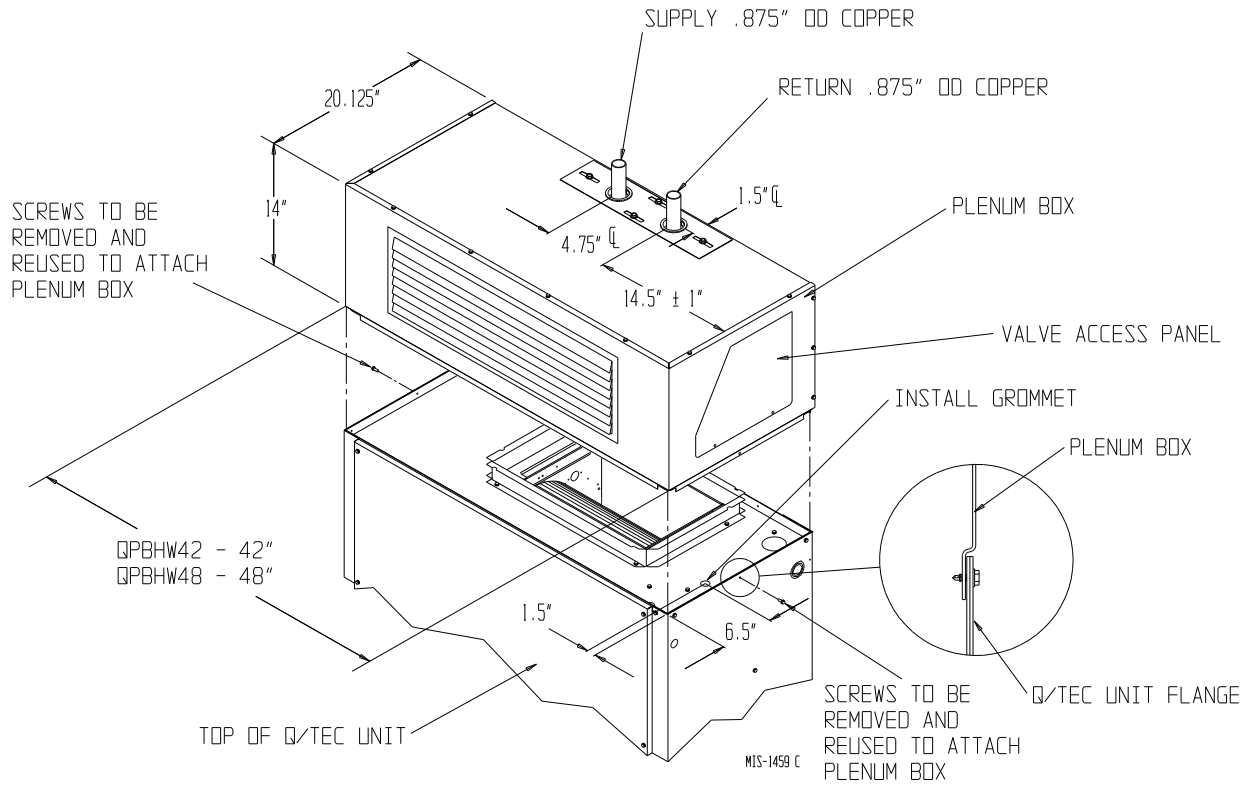


FIGURE
Ducted Plenum


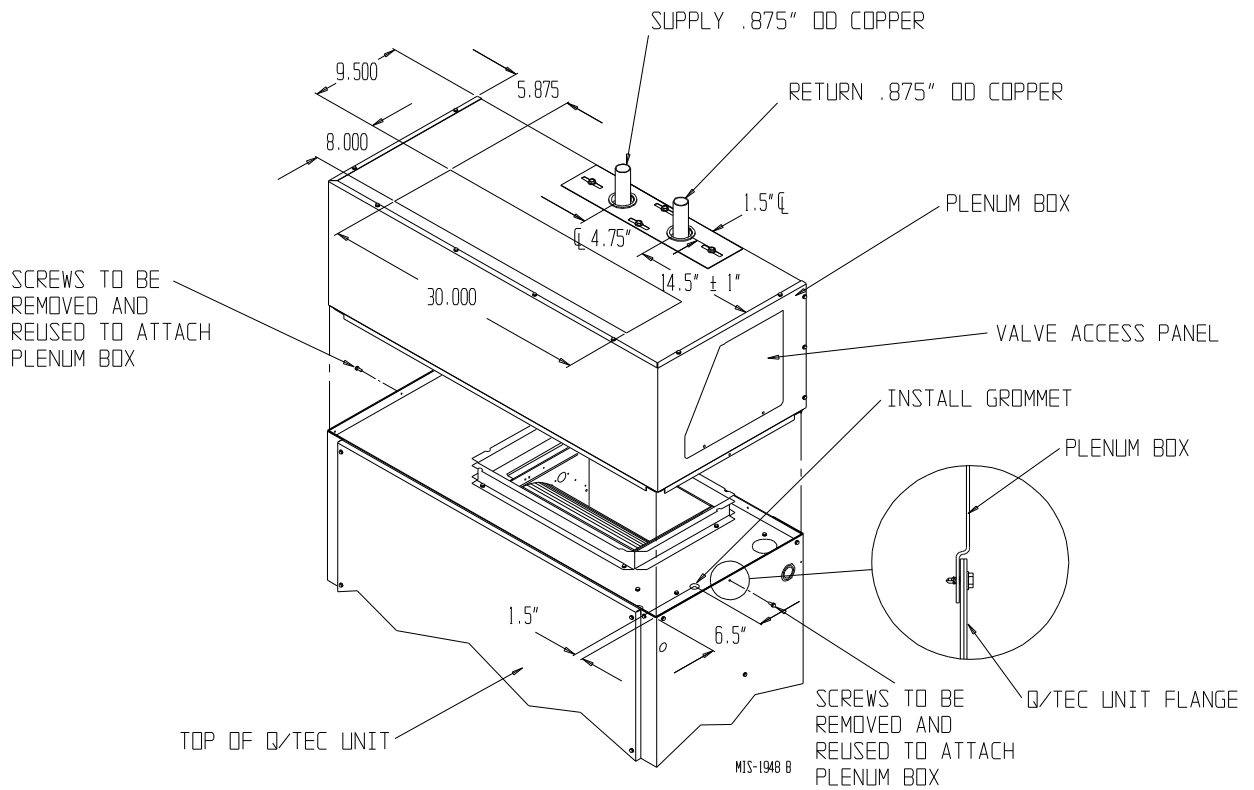


FIGURE 3
Hot Water Coil as 1st Stage Heat in Heat Pump Unit

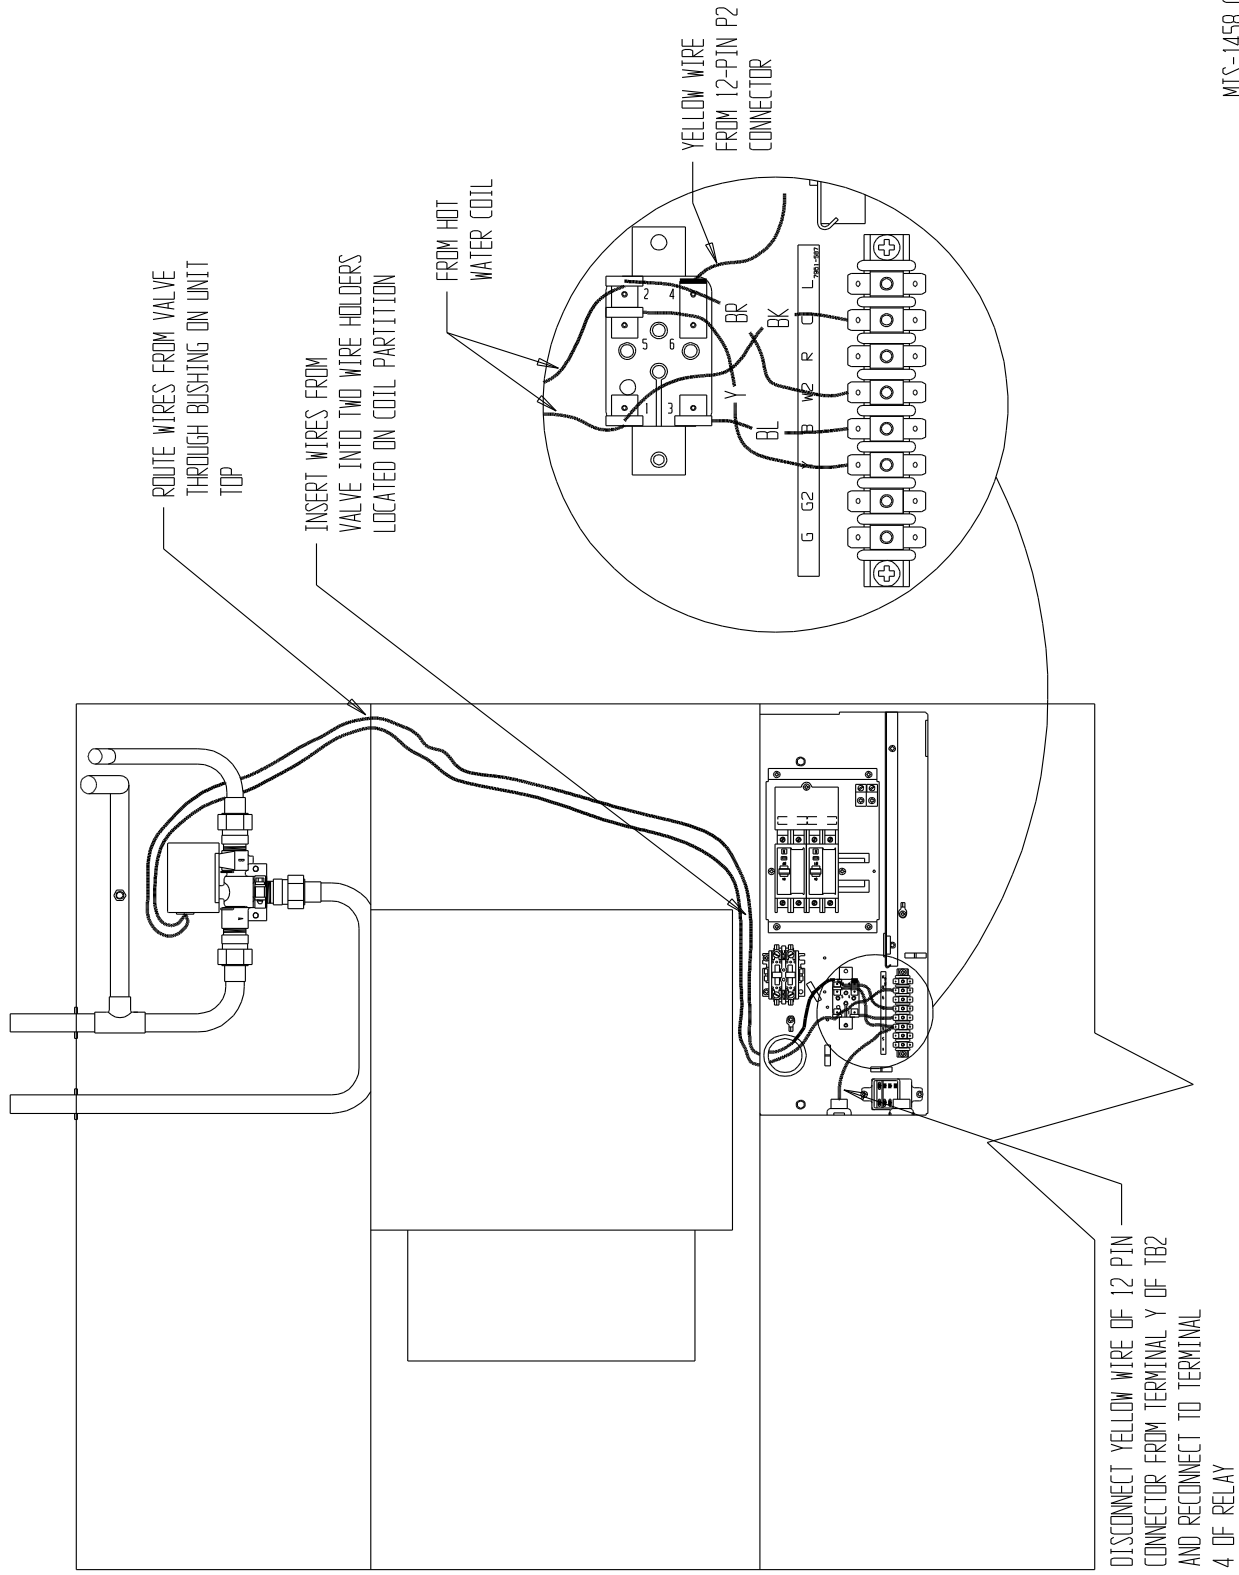

MIS-1458 C

FIGURE 4
Water Coil Wiring as 2nd Stage Heat (in Heat Pump and A/C Units)


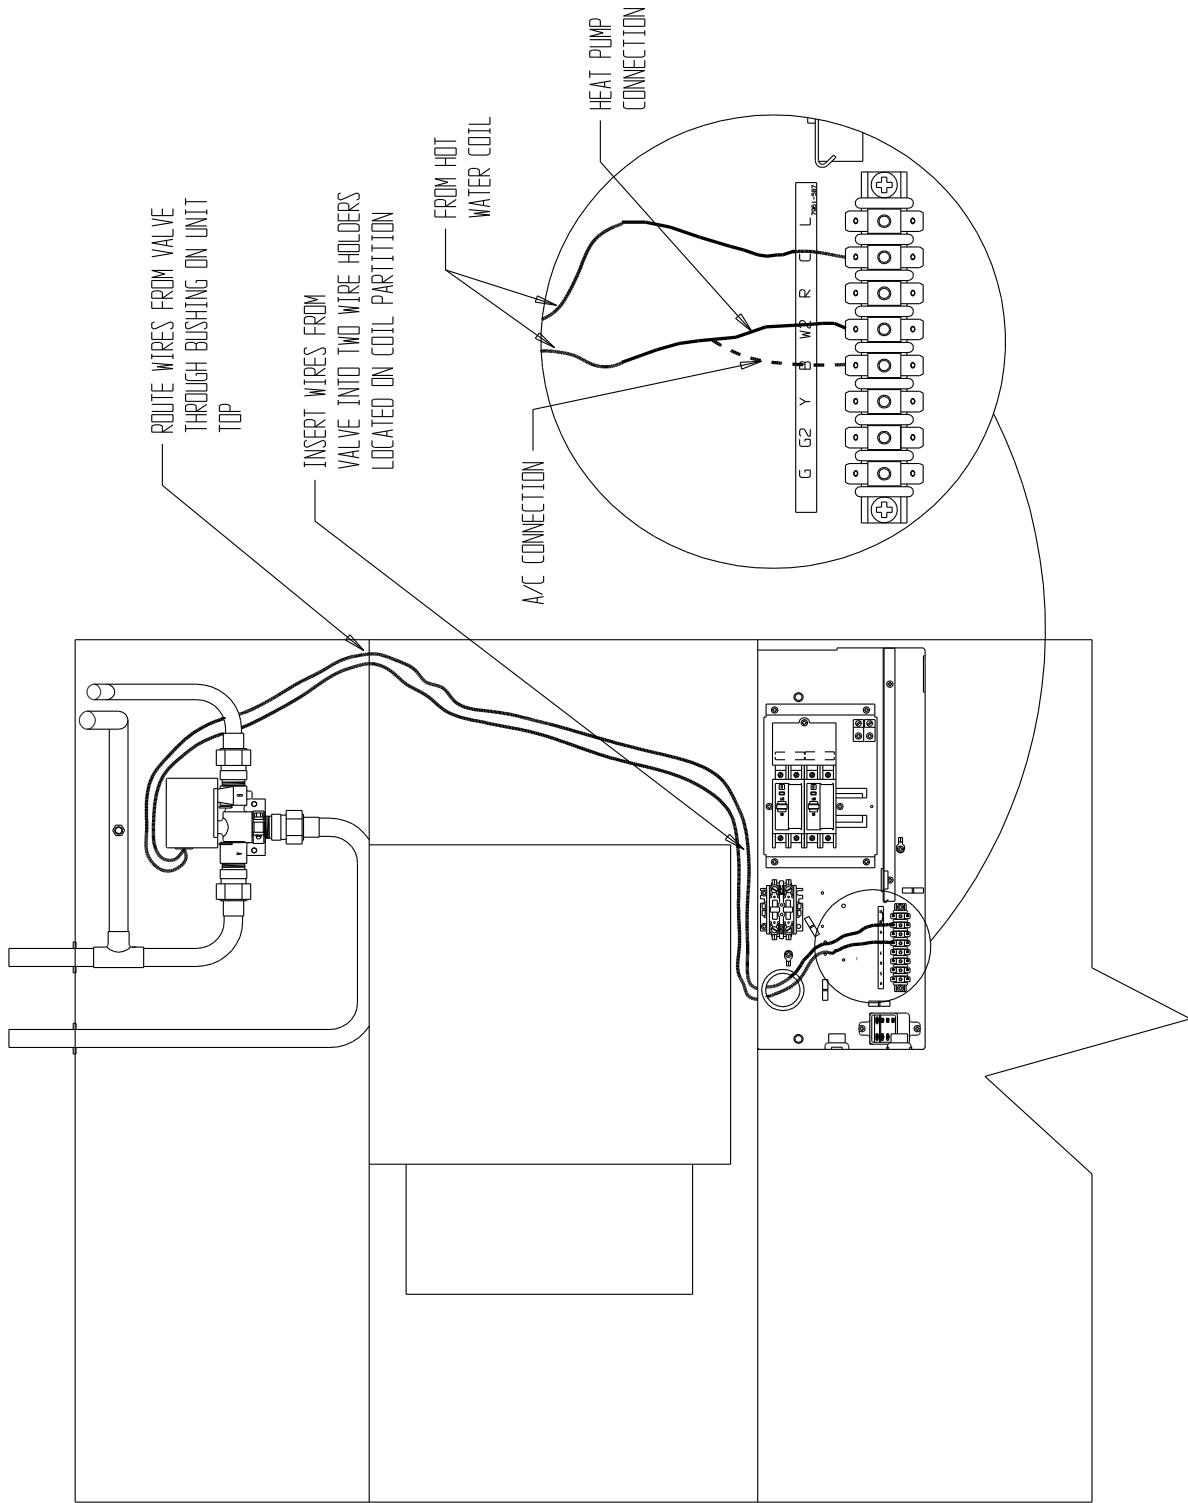


FIGURE 5
QPBHW Heating Capacity

QPBHW Heating Capacity @ 180°F Water and 70°F Return Air

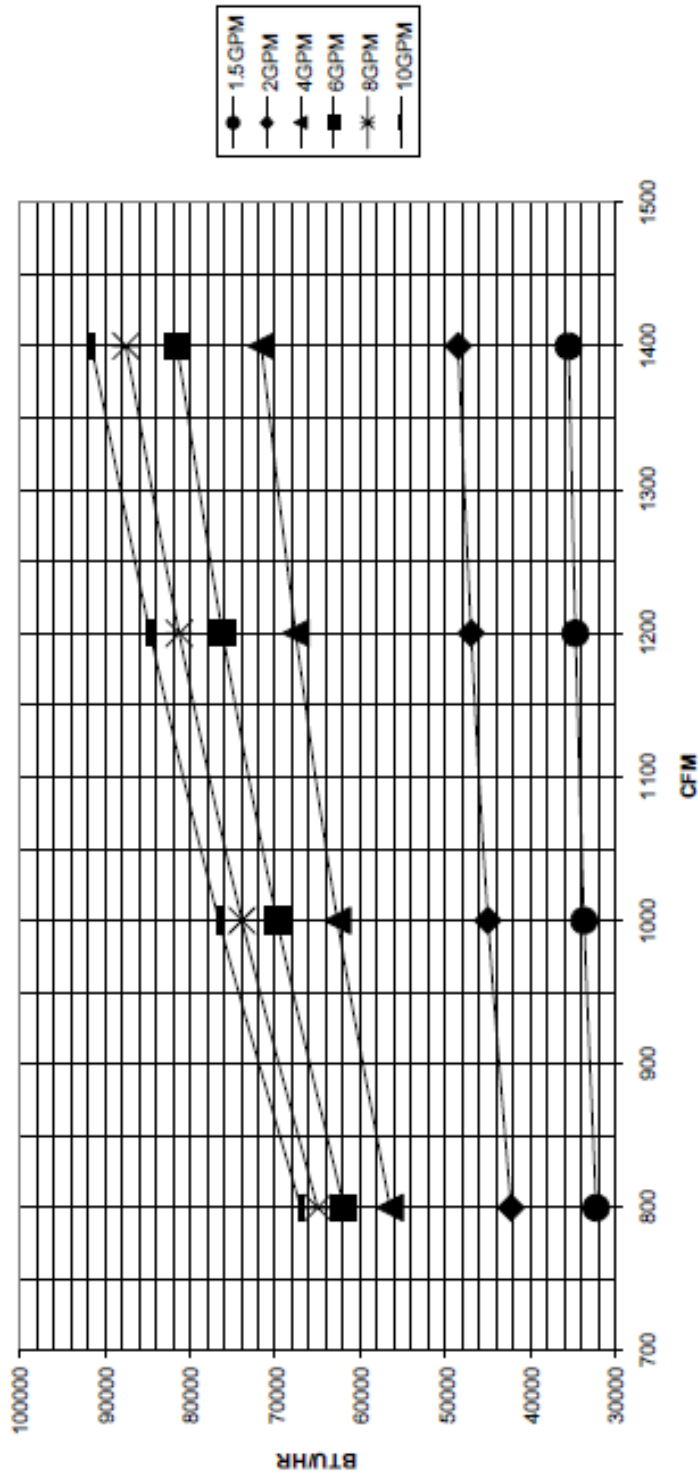

NOTES:

- ① Water connections are 7/8" O.D. copper.
- ② 3-way flow valve is factory installed.
- ③ Control wiring included, and can be operated as either 1st or 2nd stage.

FIGURE 6
Hot Water Coil Pressure Drop
with Hot Water at 180°

QPBHW42 & QPBHW48		
GPM	Water FT Head	PSI
1.5	0.2	0.1
2	0.2	0.1
4	1.4	0.6
6	3.0	1.3
8	5.3	2.3
10	8.3	3.6
12	11.7	5.1