

INSTALLATION INSTRUCTIONS

HIGH EFFICIENCY WATER SOURCE PACKAGED HEAT PUMPS

MODELS

WPV30B

WPV36B

WPV53B

WPV62B

Ground Water Temperatures 45 - 75

**Earth Loop Fluid
Temperatures 30⁰ - 110 F**

COPYRIGHT FEBRUARY, 1989
BARD MANUFACTURING COMPANY
BRYAN, OHIO


INDEX

| | | |
|-------|---|----|
| I. | General | 3 |
| II. | Installation | 3 |
| | 1. BTUH Capacity Selection | 3 |
| | 2. Site Selection | 3 |
| | 3. Ductwork | 3 |
| | 4. Filter | 4 |
| | 5. Electrical Wiring | 4 |
| | A. Main Power | 4 |
| | B. Control Circuit--Low Voltage Wiring | 5 |
| | 6. Condensate Drain | 5 |
| | 7. Piping Access To The Unit | 5 |
| | 8. Water Connections | 5 |
| | 9. Well Pump Sizing | 6 |
| III. | Sequence Of Operation | 7 |
| | 1. Cooling With Or Without Duct Heaters | 7 |
| | 2. Single Stage Heat Without Duct Heaters | 7 |
| | 3. Two Stage Heat With Duct Heaters | 7 |
| | 4. Emergency Heat | 7 |
| IV. | System Start Up Procedure | 8 |
| V. | Water Corrosion | 9 |
| VI. | Remedies Of Water Problems | 10 |
| VII. | Lake and Pond Installations | 10 |
| VIII. | Earth Coupled Ground Loop Applications | 12 |
| IX. | Add-On Heat Recovery Hot Water Heater | 13 |
| | Installation | 13 |
| | Start-Up, Check-Out Maintenance | 15 |
| | Heat Pump Service | 15 |

INDEX OF FIGURES AND TABLES

| | |
|--------------------|----|
| Figure 1 | 1 |
| Figure 2 | 2 |
| Figure 3 | 4 |
| Figure 4 | 6 |
| Figure 5 | 10 |
| Figure 6 | 12 |
| Figure 7 | 13 |
| Figure 8 | 14 |
| Figure 9 | 15 |

| | |
|--------------------|----|
| Table 1 | 16 |
| Table 2 | 16 |
| Table 3 | 16 |
| Table 4 | 16 |
| Table 5 | 16 |
| Table 6 | 16 |
| Table 7 | 17 |
| Table 8 | 17 |
| Table 9 | 18 |
| Table 10 | 18 |
| Table 11 | 19 |
| Table 12 | 20 |

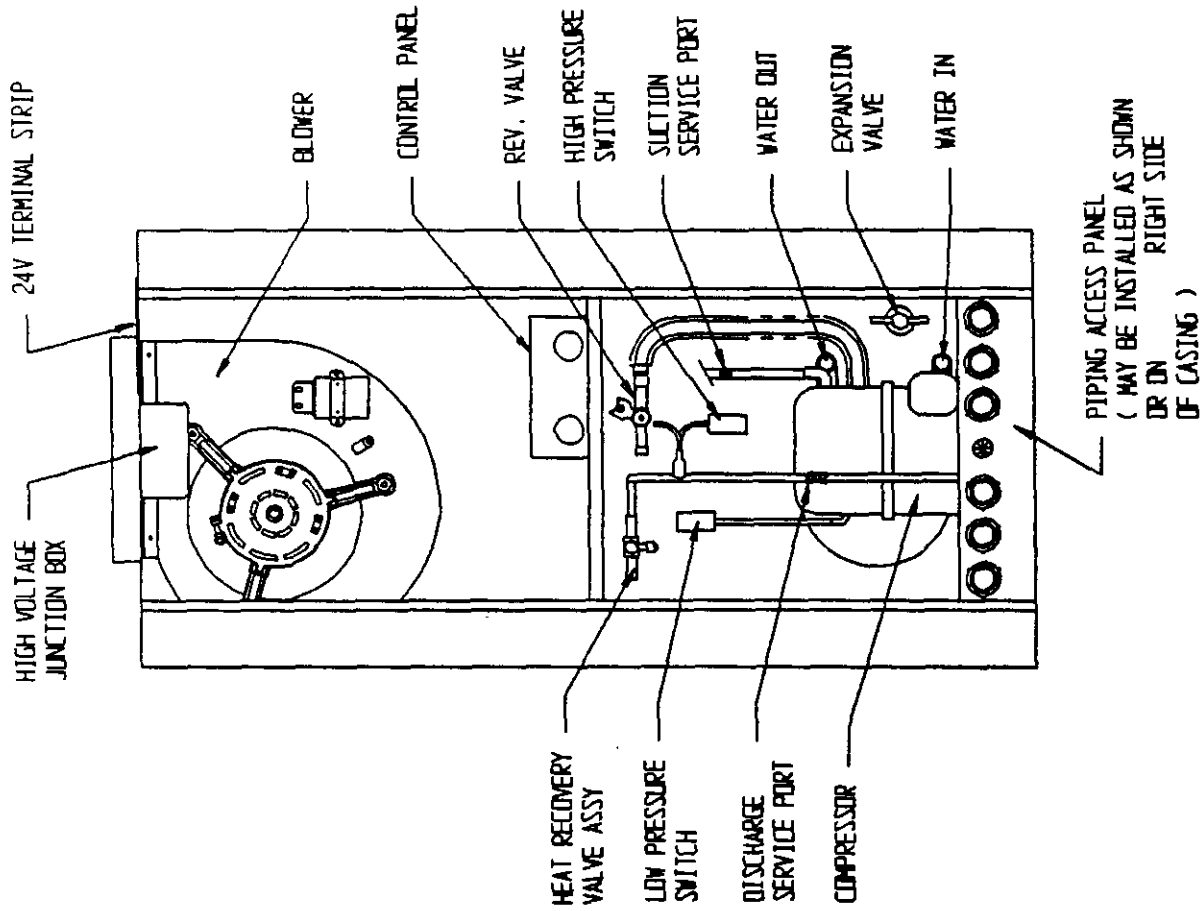

NOTE: IF NO RETURN AIR DUCT IS USED, APPLICABLE INSTALLATION CODES MAY LIMIT THIS CABINET TO INSTALLATION ONLY IN A SINGLE STORY STRUCTURE.



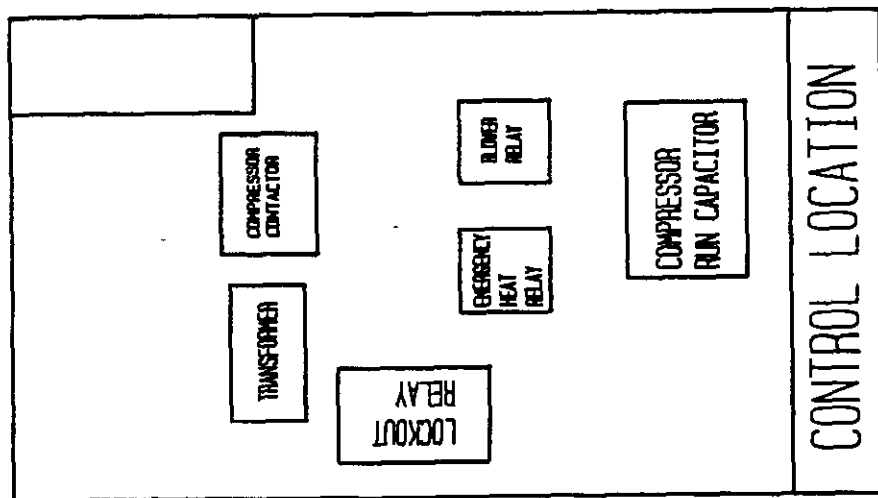


Figure 1

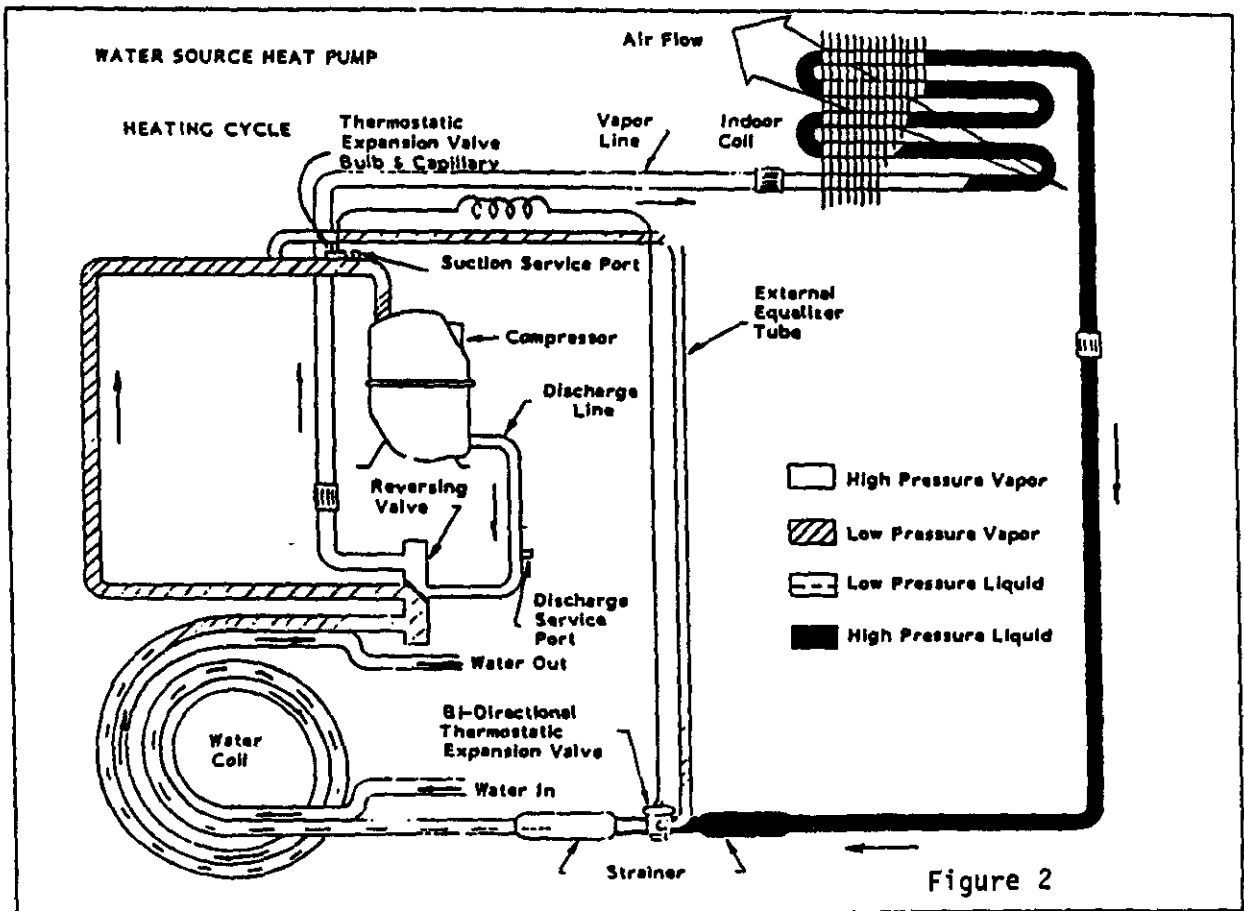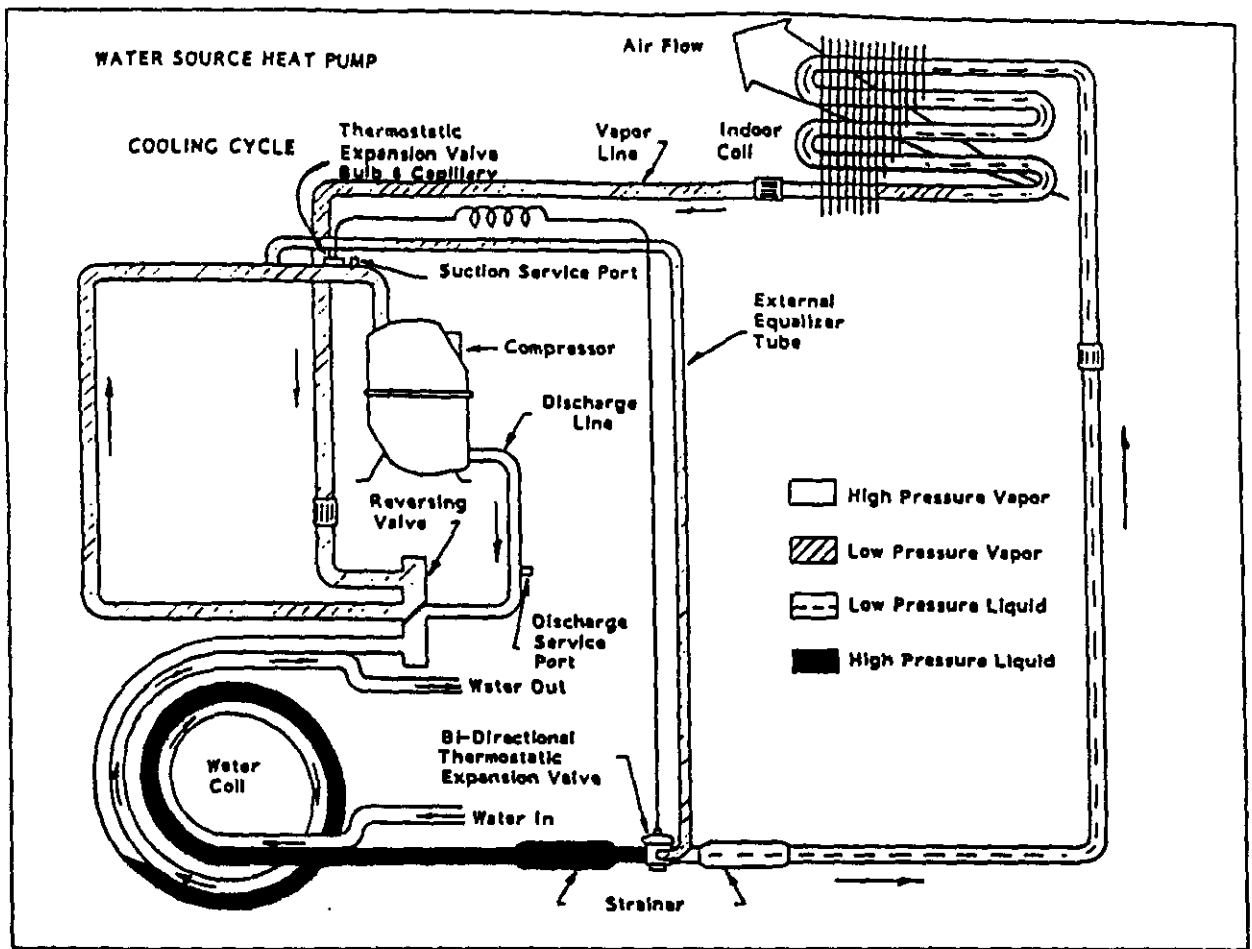

I. GENERAL

Units are shipped completely assembled and internally wired, requiring only duct connections, thermostat wiring, 230-208 volt AC power wiring, and water piping. The equipment covered in this manual is to be installed by trained, experienced service and installation technicians. Any heat pump is more critical of proper refrigerant charge and an adequate duct system than a cooling only air conditioning unit.

These instructions and any instructions packaged with any separate equipment required to make up the entire heat pump system should be carefully read before beginning the installation. Note particularly any tags and/or labels attached to the equipment.

While these instructions are intended as a general recommended guide, they do not in any way supersede any national and/or local codes. Authorities having jurisdiction should be consulted before the installation is made.

Unpacking

Upon receipt of the equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

II. INSTALLATION

1. BTUH Capacity Selection

Capacity of the unit for a proposed installation should be based on heat loss calculations made in accordance with methods of the Air Conditioning Contractors of America, formerly National Warm Air Heating and Air Conditioning Association. The air duct system should be sized and installed in accordance with Standards of the National Fire Protection Association For The Installation of Air Conditioning and Ventilating Systems of Other Than Residence Type NFPA No. 90A, and Residence Type Warm Air Heating and Air Conditioning Systems, NFPA No. 90B.

2. Site Selection

The unit may be installed in a basement, closet or utility room provided adequate service access is insured. Ideally, three sides of the unit should have a minimum access clearance of two feet but the unit can be adequately serviced if two or only one side has the minimum two feet clearance. The unit should be located in the conditioned space to prevent freezing of the water lines.

Clearance to combustible materials is 0 inches for the heat pump. If an optional duct heater is installed, follow the instructions packed with the duct heater for specifications regarding clearance to combustible material.

Before setting the unit, consider ease of piping, drain and electrical connections for the unit. Also, for units which will be used with a field installed heat recovery unit, consider the proximity of the unit to the water heater or storage tank. Place the unit on a solid base, preferably concrete, to minimize undesirable noise and vibration. DO NOT elevate the base pan on rubber or cork vibration eliminator pads as this will permit the unit base to act like a drum, transmitting objectionable noise.

3. Ductwork

If the unit is to be installed in a closet or utility room which does not have a floor drain, a secondary drain pan under the entire unit is highly recommended.

DO NOT install the unit in such a way that a direct path exists between any return grille and the unit.


Rather, insure that the air entering the return grille will make at least one turn before entering the unit air coil. This will reduce possible objectionable compressor and air noise from entering the occupied space.

Design the ductwork according to methods given by the National Warm Air Heating and Air Conditioning Association. When duct runs through unconditioned spaces, it should be insulated with vapor barrier. It is recommended that flexible connections be used to connect the ductwork to the unit in order to keep the noise transmission to a minimum.

4. Filter

This unit must not be operated without a filter. It comes equipped with a disposable filter which should be checked often and replaced if dirty. Insufficient air flow due to undersized duct systems or dirty filters can result in nuisance tripping of the high or low pressure control. Refer to Table 2 & 3 for correct air flow and static pressure requirements. See Figure 3.

FIGURE 3

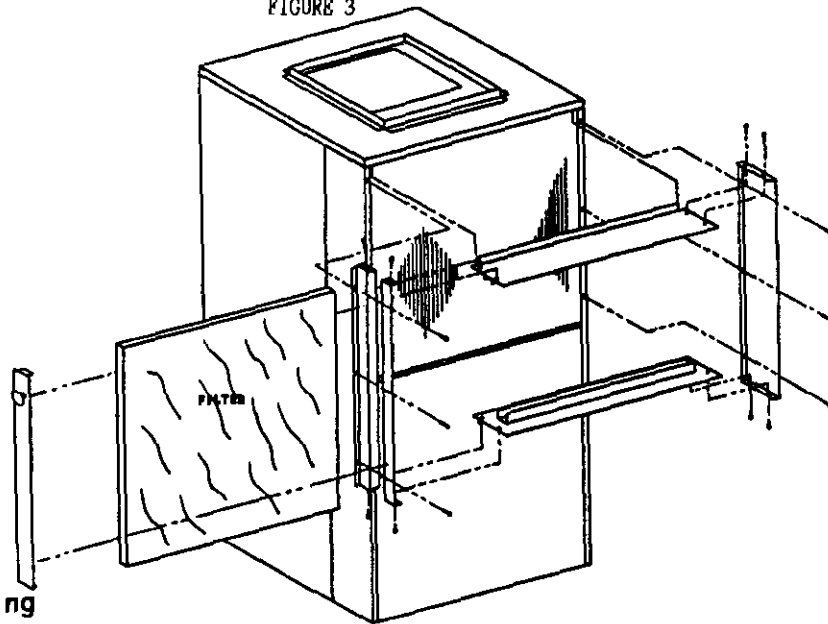

5. Electrical Wiring

All electrical connections are made through the top of the unit. High voltage connections are made with wire nuts to the factory-provided pigtail leads in the junction box. Low voltage connections are made to the terminal strip mounted on the top of the unit. Refer to the wiring diagram for connecting the terminals.

A. Main Power

Refer to the unit serial plate for wire sizing information and correct overcurrent protection size. Each unit is marked with a "Minimum Circuit Ampacity." This means that field wiring connectors must be sized to carry that amount of current. Each unit and/or wiring diagram is also marked "Use Copper Conductors Only," meaning the leads provided are not suitable for aluminum wiring. Refer to the National Electric Code for complete current-carrying capacity data on the various grades of wiring material.

The unit rating plate lists "Maximum Overcurrent Protective Device" that is to be used with the equipment. This device may be a time delay fuse or HACR type circuit breaker. The correct size overcurrent protective device must be used to provide for proper circuit protection and to avoid nuisance trips due to the momentary high starting current of the compressor motor.

B. Control Circuit--Low Voltage Wiring

A 24 volt terminal strip is mounted on top of the unit. Two types of thermostats are available: 1) Single stage heat, single stage cool to operate the heat pump alone--without backup duct style electric heaters. This thermostat is equipped with a signal light to indicate when the unit is "locked out" because of the low or high pressure control. Refer to the wiring diagrams at the end of this manual for correct connection of the terminals. 2) Two stage heat, single stage cool to operate the heat pump or duct heaters on heating or the heat pump on cooling. This thermostat is also equipped with a signal light to indicate when the unit is "locked out" because of operation of the low or high pressure control. In addition, a second signal light tells when the unit has been placed in Emergency Heat. Refer to the wiring diagram at the end of this manual and to the wiring diagram packed with the duct heater for correct connection of the low voltage terminals.

6. Condensate Drain

Determine where the drain line will run. This drain line contains cold water and must be insulated to avoid droplets of water from condensing on the pipe and dropping on finished floors or the ceiling under the unit. A trap MUST BE installed in the drain line and the trap filled with water prior to start up. The use of plugged tees in place of elbows to facilitate cleaning is highly recommended.

Drain lines must be installed according to local plumbing codes. It is not recommended that any condensate drain line be connected to a sewer main. The drain line enters the unit through the water access panel, ((3) Figure 4) and connects to the FPT coupling under the condensate drain pan.

7. Piping Access To The Unit

Water piping to and from the unit enters the unit casing through the water access panel. Piping connections are made directly to the heat exchanger coil and are 3/4" or 1" FPT. The access panel can be installed on the front of the unit (as received) or on the right side of the unit. It is highly recommended that the piping from the water coil to the outside of the casing be installed while the unit is completely accessible and before it is finally set in position.

8. Water Connections

It is very important that an adequate supply of clean, non-corrosive water at the proper pressure be provided before the installation is made. Insufficient water, in the heating mode for example, will cause the low pressure control to trip, shutting down the heat pump. In assessing the capacity of the water system, it is advisable that the complete water system be evaluated to prevent possible lack of water or water pressure at various household fixtures whenever the heat pump turns on. All plumbing to and from the unit is to be installed in accordance with local plumbing codes. The use of plastic pipe, where permissible, is recommended to prevent electrolytic corrosion of the water pipe. Because of the relatively cold temperatures encountered with well water, it is strongly recommended that the water lines connecting the unit be insulated to prevent water droplets from condensing on the pipe surface.

Refer to Piping, Figure 4. Slow closing Solenoid Valve (6) with a 24V coil provides on/off control of the water flow to the unit. Refer to the wiring diagram for correct hookup of the valve solenoid coil.

Constant Flow Valve (7) provides correct flow of water to the unit regardless of variations in water pressure. Observe the water flow direction indicated by the arrow on the side of the valve body. Following is a table showing which valve is to be installed with which heat pump.


| Heat Pump Model | Flow Rate | Constant Flow Valve Part Number |
|-----------------|-----------|---------------------------------|
| WPV30B | 4 GPM | 8603-010 |
| WPV36B | 5 GPM | 8603-011 |
| WPV53B | 6 GPM | 8603-007 |
| WPV62B | 8 GPM | 8603-008 |

Strainer (5) installed upstream of constant flow valve (7) to collect foreign material which would clog the flow valve orifice.

The figure shows the use of shut-off valves (9) and (11), on the in and out water lines to permit isolation of the unit from the plumbing system should future service work require this. Globe valves should not be used as shutoff valves because of the excessive pressure drop inherent in the valve design. Instead use gate or ball valves as shut-offs so as to minimize pressure drop.

Drain cock (8) and (10), and tees have been included to permit acid cleaning the refrigerant-to-water coil should such cleaning be required. See WATER CORROSION.

Drain Cock (12) provides access to the system to check water flow through the constant flow valve to insure adequate water flow through the unit. A water meter 1-10 GPM (8603-013) is used to check the water flow rate.

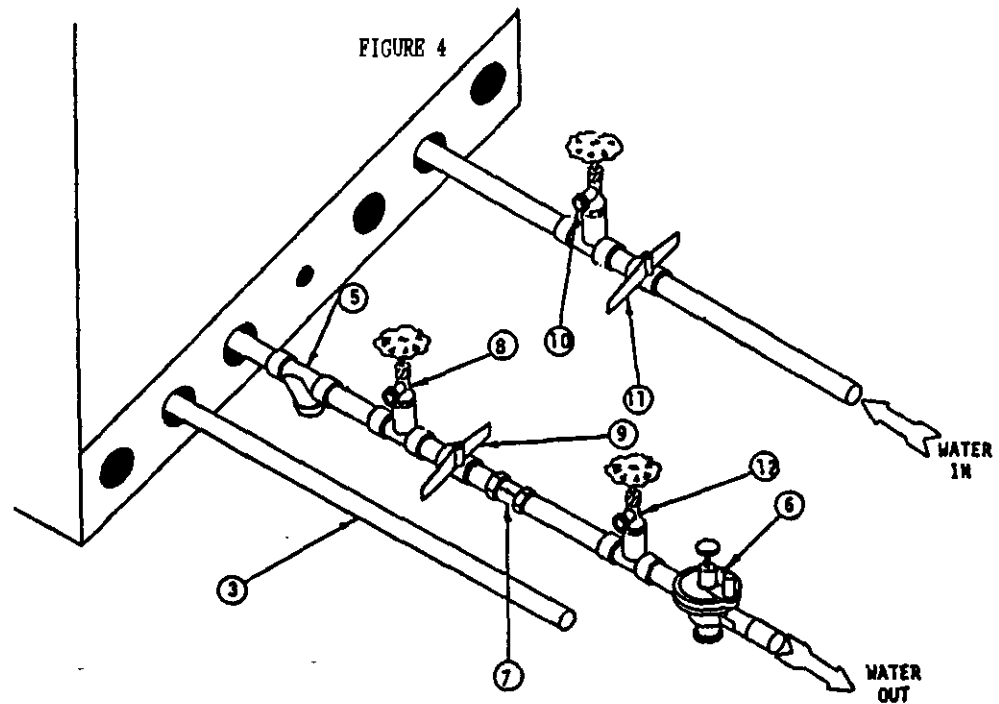

9. Well Pump Sizing

Strictly speaking, sizing the well pump is the responsibility of the well drilling contractor. It is important, however, that the HVAC contractor be familiar with the factors that determine what size pump will be required. Rule of thumb estimates will invariably lead to under or oversized well pumps. Undersizing the pump will result in inadequate water to the whole plumbing system but with especially bad results to the heat pump--NO HEAT/NO COOL calls will result. Oversized pumps will short cycle and could cause premature pump motor or switch failures.

The well pump must be capable of supplying enough water and at an adequate pressure to meet competing demands of water fixtures. The well pump must be sized in such a way that three requirements are met:

1. Adequate flow rate in GPM.
2. Adequate pressure at the fixture.
3. Able to meet the above from the depth of the well-feet of lift.

The pressure requirements put on the pump are directly affected by the diameter of pipe being used as well as by the water flow rate through the pipe. The worksheet included in manual 2100-078 should guarantee that the well pump has enough capacity. It should also ensure that the piping is not undersized which would create too much pressure due to friction loss. High pressure losses due to undersized pipe will reduce efficiency and require larger pumps and could also create water noise problems.

III. SEQUENCE OF OPERATION

1. Cooling With Or Without Duct Heaters

Whenever the system lever is moved to COOL, thermostat system switch completes a circuit R to O, energizing the reversing valve solenoid. On a call for cooling, the cooling bulb completes a circuit from R to G, energizing the blower relay coil. The blower relay contacts complete a 230 volt circuit to the blower motor and the blower operates. R to Y circuit is completed at the same time as the fan circuit and current flows from Y to terminal 4 at the lockout relay. Terminal 4 of the lockout relay provides two paths for current flow.

1. Through the lockout relay coil which offers the resistance of the lockout relay coil.
2. Through the normally closed contacts of the lockout relay to terminal 5 of the lockout relay and then through the high and low pressure switches to the compressor contactor coil.

If the high and low pressure switches remain closed (refrigerant pressure remains normal), the path of least resistance is through these safety controls to the compressor contactor coil. The contacts of the compressor contactor complete a 230 volt circuit to the compressor and the compressor runs. If discharge (suction) pressure reaches the set point of the high (low) pressure control, the normally closed contacts of the high (low) pressure control open and current no longer flows to the compressor contactor coil--the coil drops out. Current now can take the path of least resistance through the lockout relay coil, energizing the lockout relay coil and opening terminals 4 and 5 of the lockout relay. The lockout relay will remain energized as long as a circuit is completed between R and Y at the thermostat. In the meantime, since the compressor is not operating, refrigerant pressure will equalize and the high (low) pressure switch will automatically reset. However, the circuit to the compressor contactor will not be complete until the lockout relay is de-energized by moving the thermostat system switch to OFF, breaking the circuit from R to Y dropping out the lockout relay coil and permitting terminals 4 and 5 to make. When the high (low) pressure switch closes, a circuit is complete to L at the thermostat, energizing the signal light to indicate a malfunction. When the system switch is moved from OFF to COOL, the cycle is repeated.

2. Single Stage Heat Without Duct Heaters

Compressor circuit R to Y including lockout relay and pressure controls is the same as cooling. Blower circuit R to G is the same as cooling. With system switch set to HEAT, no circuit is completed between R and O and reversing valve solenoid is not energized.

3. Two Stage Heat With Duct Heaters

First stage heat is the same as single heating without duct heater. When the second stage thermostat bulb makes, a circuit is completed from C to W2, energizing the duct heater heat contactor, through the heating element and manual reset limit. C to W2 also simultaneously energizes the 24 volt coil on the interlock relay, closing the contacts, which in turn energize the low voltage coil on the blower relay to close the high voltage contacts and power the blower motor. The elements and blower remain energized as long as C to W2 are made.

The following is a verbal description of the proper procedure for connecting the low voltage hookups for the duct heater.

1. Black wire from duct heater to C on the 24 volt terminal block.
2. Green wire from duct heater to green wire from thermostat. These wires must be wire nudded and isolated from the terminal block. Failure to do so will result in improper heater operation.
3. Connect green with tracer from heater to the G terminal on the 24 volt terminal block.
4. Connect the white wire from the heater to W2 on 24 volt terminal block.
 - A. For the 15 and 20kw duct heaters, connect the white and white with black tracer wires to W2.

4. Emergency Heat

When the system switch is moved to EMER, the compressor circuit R to Y is disconnected. Control of the electric heaters is from C to W2 and W3 through the thermostat second stage heating bulb. Blower operation is controlled by the second stage heating bulb. Operation is the same as above, "Two Stage Heat With Duct Heaters."

IV. SYSTEM START UP PROCEDURE

1. Be sure main power to the unit is OFF at disconnect.
2. Set thermostat system switch to OFF, fan switch to AUTO.
3. Move main power disconnect to ON. Power should be on to unit for a minimum of four hours or sixty minutes per pound of refrigerant. This allows the crankcase heater to drive any refrigerant liquid out of the compressor sump. This procedure should be followed whenever the power has been off for twelve hours or longer. Except as required for safety while servicing--DO NOT OPEN THE UNIT DISCONNECT SWITCH.
4. Check system air flow for obstructions.
 - A. Move thermostat fan switch to ON. Blower runs.
 - B. Be sure all registers and grilles are open.
 - C. Move thermostat fan switch to AUTO. Blower should stop.
5. Fully open the manual inlet and outlet valves.
6. Check water flow.
 - A. Connect a water flow meter to the drain cock (12, Figure 4) between the constant flow valve and the solenoid valve. Run a hose from the flow meter to a drain or sink. Open the drain cock.
 - B. Check the water flow rate through constant flow valve to be sure it is the same as the unit is rated for. (Example 4 GPM for a WPV30)
 - C. When water flow is okay, close drain cock and remove the water flow meter. The unit is now ready to start.
7. Start the unit in cooling mode. By moving the thermostat switch to cool, fan should be set for AUTO.
 - A. Check to see the solenoid valve opened.
8. Check the system refrigerant pressures against the cooling refrigerant pressure Table 11, Page 19 in the Installation Manual for rated water flow and entering water temperatures. If the refrigerant pressures do not match, check for air flow problem then refrigeration system problem.
9. Switch the unit to the heating mode. By moving the thermostat switch to heat, fan should be set for AUTO.
 - A. Check to see the solenoid valve opened again.

10. Check the refrigerant system pressures against the heating refrigerant pressure Table 12, Page 20 in Installation Manual. Once again, if they do not match, check for air flow problems and then refrigeration system problems.

NOTE: If a charge problem is determined (high or low):

- A. Check for possible refrigerant leaks.
- B. Discharge all remaining refrigerant from unit.
- C. Evacuate unit down to 29 inches of vacuum.
- D. Recharge the unit with refrigerant by weight. This is the only way to insure a proper charge.

V. WATER CORROSION

Two concerns will immediately come to light when considering a water source heat pump, whether for ground water or for a closed loop application: Will there be enough water? And, how will the water quality affect the system?

Water quantity is an important consideration and one which is easily determined. The well driller must perform a pump down test on the well according to methods described by the National Well Water Association. This test, if performed correctly, will provide information on the rate of flow and on the capacity of the well. It is important to consider the overall capacity of the well when thinking about a water source heat pump because the heat pump may be required to run for extended periods of time.

The second concern, about water quality, is equally important. Generally speaking, if the water is not offensive for drinking purposes, it should pose no problem for the heat pump. The well driller or local water softening company can perform tests which will determine the chemical properties of the well water.

Water quality problems will show up in the heat pump in one or more of the following ways:

1. Decrease in water flow through the unit.
2. Decreased heat transfer of the water coil (entering to leaving water temperature difference is less).

There are four main water quality problems associated with ground water. These are:


1. Biological Growth. This is the growth of microscopic organisms in the water and will show up as a slimy deposit throughout the water system. Shock treatment of the well is usually required and this is best left up to the well driller. The treatment consists of injecting chlorine into the well casing and flushing the system until all growth is removed.
2. Suspended Particles In The Water. Filtering will usually remove most suspended particles (fine sand, small gravel) from the water. The problem with suspended particles in the water is that it will erode metal parts, pumps, heat transfer coils, etc. So long as the filter is cleaned and periodically maintained, suspended particles should pose no serious problem. Consult with your well driller.
3. Corrosion Of Metal. Corrosion of metal parts results from either highly corrosive water (acid water, generally not the case with ground water) or galvanic reaction between dissimilar metals in the presence of water. By using plastic plumbing or dielectric unions galvanic reaction is eliminated. The use of corrosion resistant materials (such as the Cupro Nickel coil) through the water system will reduce corrosion problems significantly.
4. Scale Formation. Of all the water problems, the formation of scale by ground water is by far the most common. Usually this scale is due to the formation of calcium carbonate but magnesium carbonate or calcium sulfate may also be present. Carbon dioxide gas (CO₂), the carbonate of calcium and magnesium carbonate, is very soluble in water. It will remain dissolved in the water until some outside factor upsets the balance. This outside influence may be a large change in water temperature or pressure. When this happens, enough carbon dioxide gas combines with dissolved calcium or magnesium in the water and falls out

of solution until a new balance is reached. The change in temperature that this heat pump produces is usually not high enough to cause the dissolved gas to fall out of solution. Likewise if pressure drops are kept to a reasonable level, no precipitation of carbon dioxide should occur.

VI. REMEDIES OF WATER PROBLEMS

Water Treatment. Water treatment can usually be economically justified for closed loop systems. However, because of the large amounts of water involved with a ground water heat pump, water treatment is generally too expensive.

Acid Cleaning The Water Coil Or Heat Recovery Unit. If scaling of the coil is strongly suspected, the coil can be cleaned up with a solution of Phosphoric Acid (food grade acid). Follow the manufacturer's directions for mixing, use, etc. Refer to the "Cleaning Water Coil", Figure 5. The acid solution can be introduced into the heat pump coil through the hose bib (Part 8 of Figure 5). Be sure the isolation valves (Parts 9 and 11 of Figure 5) are closed to prevent contamination of the rest of the system by the coil. The acid should be pumped from a bucket into the hose bib (Part 8, Figure 5) and returned to the bucket through the other hose bib (Part 10, Figure 5). Follow the manufacturer's directions for the product used as to how long the solution is to be circulated, but it is usually circulated for a period of several hours.

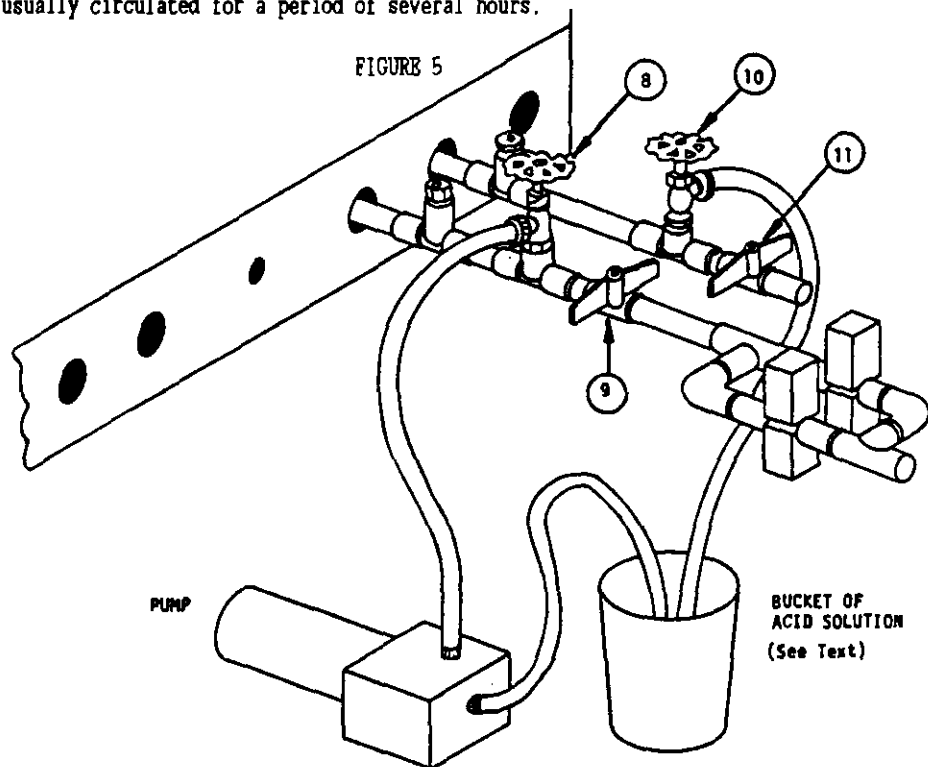

VII. LAKE AND POND INSTALLATIONS

Lakes and ponds can provide a low cost source of water for heating and cooling with a ground water heat pump. Direct usage of the water without some filtration is not recommended as algae and turbid water can foul the water to freon heat exchanger. Instead, there have been very good results using a dry well dug next to the water line or edge. Normal procedure in installing a dry well is to backhoe a 15 to 20 foot hole adjacent to the body of water (set backhoe as close to the water's edge as possible). Once excavated, a perforated plastic casing should be installed with gravel backfill placed around the casing. The gravel bed should provide adequate filtration of the water to allow good performance of the ground water heat pump.

The following is a list of recommendations to follow when installing this type of system:

- A. A lake or pond should be at least 1 acre (40,000 square feet) in surface area for each 50,000 BTUs of ground water heat pump capacity or have 2 times the cubic feet size of the dwelling that you are trying to

heat (includes basement if heated).

- B. The average water depth should be at least 5 feet and there should be an area where the water depth is at least 12 to 15 feet deep.
- C. If possible, use a submersible pump suspended in the dry well casing. Jet pumps and other types of suction pumps normally consume more electrical energy than similarly sized submersible pumps. Pipe the unit the same as a water well system.
- D. Size the pump to provide necessary GPM for the ground water heat pump. A 12 GPM or greater water flow rate is required on all modes when used on this type system.
- E. A pressure tank should be installed in the dwelling to be heated adjacent to the ground water heat pump. A pressure switch should be installed at the tank for pump control.
- F. All plumbing should be carefully sized to compensate for friction losses, etc., particularly if the pond or lake is over 200 feet from the dwelling to be heated or cooled.
- G. Keep all water lines below low water level and below the frost line.
- H. Most installers use 4-inch field tile (rigid plastic or corrugated) for water return to the lake or pond.
- I. The drain line discharge should be located at least 100 feet from the dry well location.
- J. The drain line should be installed with a slope of 2 inches per 10 feet of run to provide complete drainage of the line when the ground water heat pump is not operating. This gradient should also help prevent freezing of the discharge where the pipe terminates above the frost line.
- K. Locate the discharge high enough above high water level so the water will not back up and freeze inside the drain pipe.
- L. Where the local conditions prevent the use of a gravity drainage system to a lake or pond, you can instead run standard plastic piping out into the pond below the frost and low water level.

WARNING

**THIN ICE MAY RESULT IN THE
VICINITY OF THE DISCHARGE LINE.**

For complete information on water well systems and lake and pond applications, refer to Manual 2100-0788 (or later edition), available from your distributor.


VIII. EARTH COUPLED GROUND LOOP APPLICATIONS

This unit is also designed to work on earth coupled ground loop systems, however these systems operate at entering water (without antifreeze) temperature well below the temperature normally experienced in water well system. Therefore, when this unit is connected to an earth coupled ground loop, an optional thermostat kit, 8620-002, is required. The kit consists of a SPST thermostat to sense refrigerant temperature and shut off compressor should extremely low antifreeze temperatures or loss of flow occur. See Installation Instructions for thermostat kit packed with the thermostat.

When used on these systems, Item 5 strainer, Item 6 solenoid valve, and Item 7 constant flow valve (refer to Figure 4) are not needed. An external circulating pump must be used.

For information on earth coupled loop design, piping connections to heat pump and installation refer to Manual 2100-099G, "Earth Coupled Loop System Design Manual," available from your distributor.

FIGURE 6

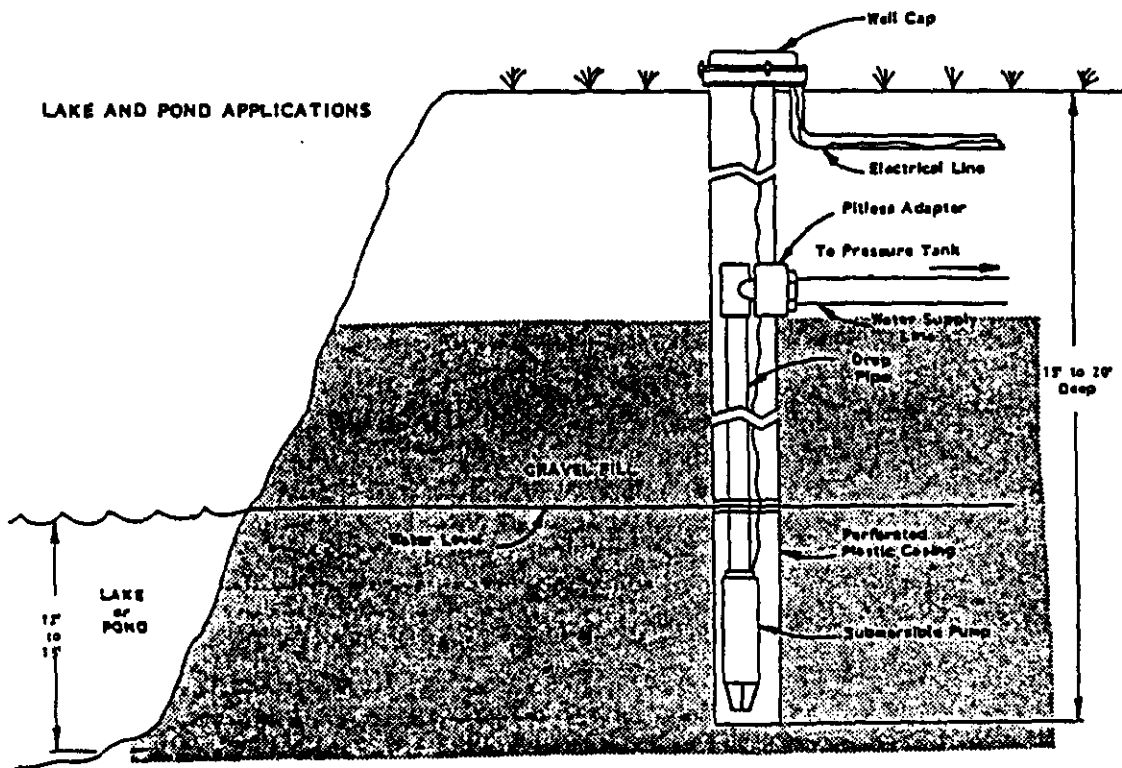

IX. ADD-ON HEAT RECOVERY HOT WATER HEATER

NOTE: This section applies only if a water heating recovery device is added.


GENERAL

This high efficiency water source heat pump series was designed for easy field installation of a heat recovery device for hot water heating commonly known as a desuperheater water heater. The amount of annual hot water supplied and thus additional energy cost savings will depend on the amount of hot water your family uses and the number of hours your heat pump operates. We recommend that a U.L. recognized heat recovery device be used. This device must be suitable for potable water.

Installation


1. Follow all local, state and national codes applicable to the installation of heat recovery devices.
2. Follow the installation procedures you receive with the heat recovery device.
3. Connect the refrigerant lines between the heat recovery device and the heat recovery valves in the heat pump using the inlet and exit panel on the lower left side of the unit as shown in Figure 7. Keep dirt and moisture out of the inter-connecting tubing using good refrigeration service procedures. (See Figure 7). Use refrigeration grade (type L) copper tubing. The tube diameter should be the same as the valve for lengths up to 15 feet each way. For lengths between 15 and 25 feet, increase the diameter 1/8". Avoid placing the heat recovery device over 25 feet from the heat pump.

This tubing should be insulated with Armaflex insulation. Tubing should be protected from abrasion and damage.

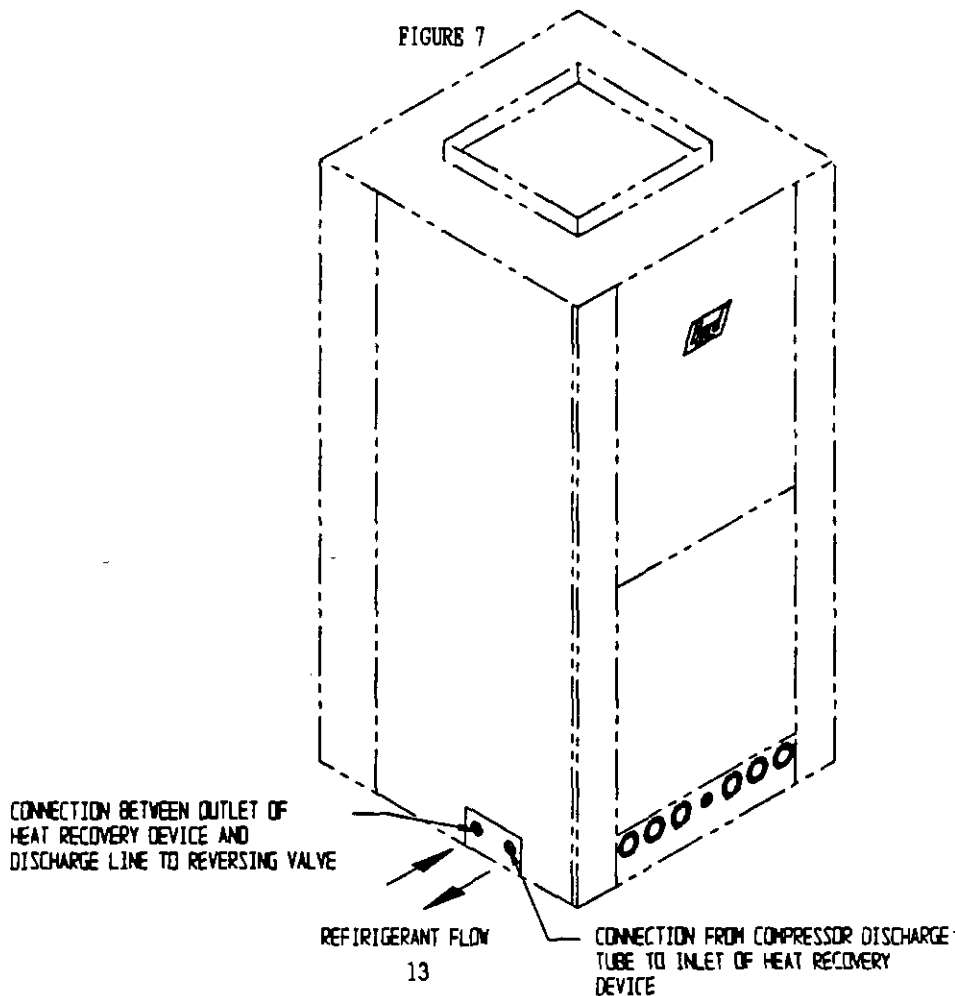


4. Evacuate the heat recovery device inter-connecting tubing and heat exchanger through the process service ports A or B shown in Figure 8 and pressurize with Refrigerant 22 and perform a leak check. Release the charge used for pressurization, leak check and re-evacuate. Add 1 ounce of refrigerant for each 10 feet of additional interconnecting tubing to the total system charge. Replace the caps and tighten.

FIGURE 8

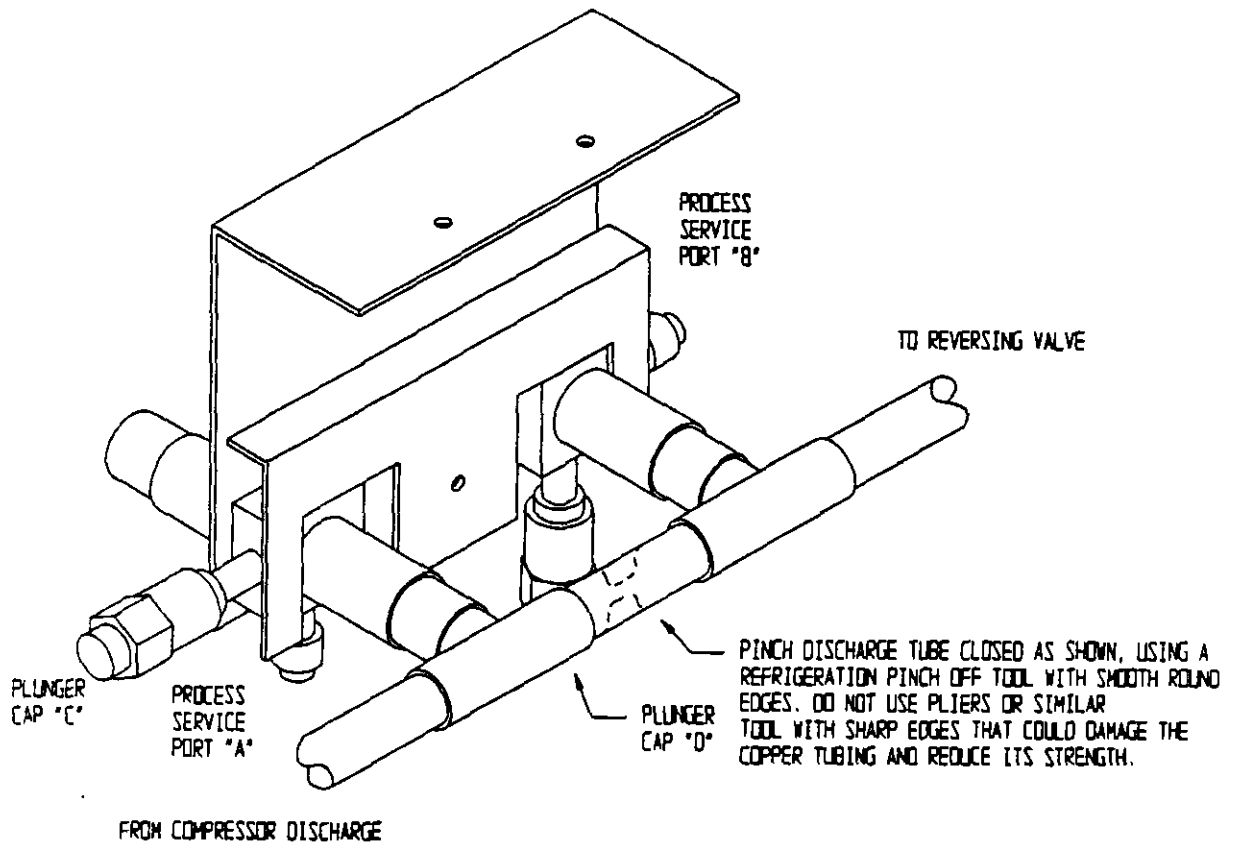


5. Tighten the plunger caps "C" and "D" shown in Figure 8. This forces down a plunger which shears a frangible plug and moves it out of the refrigerant flow path (see Figure 9). This now permits the discharge refrigerant from the compressor to flow through valve at plunger "C" (Figure 8) to the heat recovery coil heat exchanger and back through the valve at plunger "D" and then to the condenser inlet.


FIGURE 9

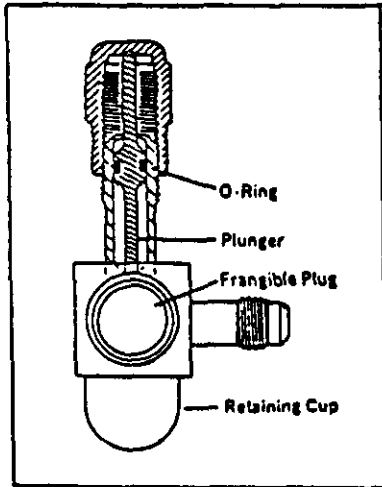

When the plunger cap is tightened, the plunger shears the frangible plug forcing it into the retaining cup. This opens the valve for

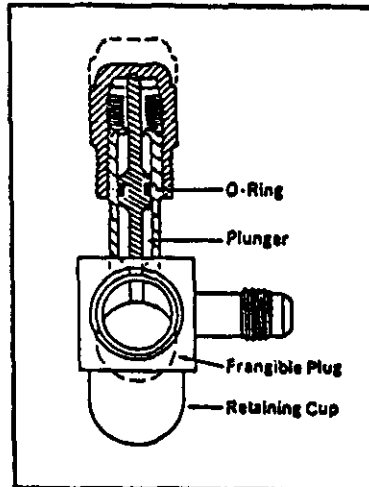

The O-Ring seal on the plunger prevents leakage while the valve is being opened.

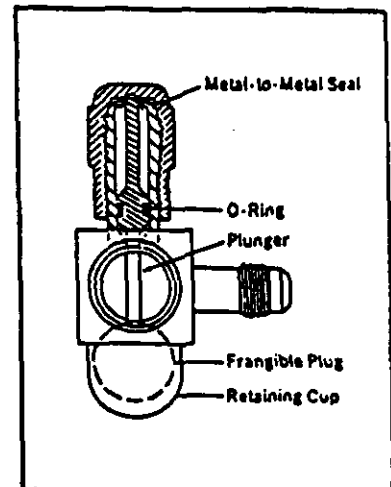

Tightening the plunger cap 1/4 turn after it bottoms results in a metal-to-metal seal.

6. Wire the heat recovery device per the diagram supplied with the heat recovery unit. Turn power to the air conditioner off prior to wiring the heat recovery unit. DO NOT in any way alter any factory or safety circuits on the air conditioner.

Start-Up, Check-Out Maintenance

Follow the procedures supplied with the heat recovery unit.

Heat Pump Service

While performing any heat pump service, disconnect the heat recovery unit for basic heat pump service analysis as it could affect the refrigerant pressures and be misleading.

ACCESSORY ITEMS--DUCT HEATER (See drawing below)

| TABLE 1 | Part No. | PH | Volts | KW | Minimum Ampacity | Wire Size | | Max. Fuse | Dimensions | | | | | |
|---------|----------|----|-------|------|------------------|-----------|----|-----------|------------|----|---|----|---|----|
| | | | | | | CU | AL | | A | B | C | D | E | F |
| | 8604-080 | 1 | 240 | 5 | 27 | #10 | #8 | 30 | 8 | 10 | 4 | 7 | 7 | 12 |
| | 8604-081 | 1 | 240 | 9.8 | 52 | #6 | #4 | 55 | 8 | 10 | 4 | 7 | 7 | 16 |
| | 8604-082 | 2 | 240 | 14.7 | 78 | #4 | #1 | 80 | 15 | 18 | 4 | 1 | 9 | 18 |
| | 8604-083 | 2 | 240 | 19.2 | 100 | #2 | #0 | 100 | 15 | 18 | 4 | 11 | 9 | 18 |

① Use wire suitable for a least 75 degree C.
② Fused units (over 48 amperes).

**INDOOR BLOWER PERFORMANCE
CFM--DRY COIL WITH FILTER ①**

| TABLE 2 | Model | WPV30B | | | WPV53B, WPV62B With Optional CW45 Installed | | | WPV53B, WPV62B Without Optional CW45 Installed | | |
|---------|-------|------------|------|--------|--|------|--------|---|------|--------|
| | | E.S.P. In. | High | Medium | Low | High | Medium | Low | High | Medium |
| | | | | | | | | | | |
| | | E.S.P. In. | | | | | | | | |
| | | W.C. | | | | | | | | |
| | | 0 | 1400 | 1270 | 1210 | 1920 | 1780 | 1600 | 1920 | 1750 |
| | | .10 | 1345 | 1230 | 1170 | 1880 | 1750 | 1580 | 1880 | 1710 |
| | | .20 | 1280 | 1180 | 1130 | 1830 | 1720 | 1550 | 1830 | 1670 |
| | | .30 | 1210 | 1110 | 1090 | 1810 | 1680 | 1540 | 1750 | 1630 |
| | | .40 | 1130 | 1070 | 1040 | 1750 | 1630 | 1500 | 1700 | 1570 |
| | | .50 | 1050 | 1000 | 980 | 1650 | 1570 | 1440 | 1610 | 1520 |
| | | .60 | 970 | 890 | 900 | 1580 | 1500 | 1400 | 1550 | 1450 |

① For wet coil CFM multiply by .96

TABLE 3

| Model | Rated CFM | Recommended Air Flow Range--CFM |
|--------|-----------|---------------------------------|
| WPV30B | 1000 | 900 - 1090 |
| WPV36B | 1200 | 1070 - 1345 |
| WPV53B | 1550 | 1400 - 1700 |
| WPV62B | 1700 | 1530 - 1830 |

**TABLE 4
CONSTANT FLOW VALVES**

| Part No. | Min. Available Pressure PSIG | Flow Rate GPM |
|----------|------------------------------|---------------|
| 8603-007 | 15 ① | 6 |
| 8603-008 | 15 ① | 8 |
| 8603-010 | 15 ① | 4 |
| 8603-011 | 15 ① | 5 |


① The pressure drop through the constant flow valve will vary depending on the available pressure ahead of the valve. Unless a minimum of 15 psig is available immediately ahead of the valve no water will flow

**TABLE 5
WATER COIL PRESSURE DROP**

| Model | WPV30B | WPV36B | WPV53B | WPV62B |
|-------|--------|--------|--------|--------|
| GPM | PSIG | PSIG | PSIG | PSIG |
| 4 | 2.0 | 1.9 | -- | -- |
| 5 | 3.0 | 2.0 | -- | -- |
| 6 | 4.2 | 2.4 | 2.5 | 2.5 |
| 7 | 5.7 | 3.0 | 3.2 | 3.5 |
| 8 | 7.5 | 3.9 | 4.0 | 4.5 |
| 9 | 9.5 | 5.5 | 5.2 | 5.6 |
| 10 | 12.0 | 7.6 | 6.5 | 6.7 |
| 11 | 14.8 | 10.4 | 7.7 | 8.0 |
| 12 | 17.6 | 15.3 | 9.0 | 9.3 |
| 13 | 20.3 | 20.6 | 10.5 | 10.7 |
| 14 | -- | -- | 12.0 | 12.3 |
| 15 | -- | -- | 13.9 | 15.5 |
| 16 | -- | -- | 15.8 | 18.3 |

**TABLE 6
FLOW RATES REQUIRED TO MAINTAIN RATED CAPACITY**

| | WPV30B | WPV36B | WPV53B | WPV62B |
|---|--------|--------|--------|--------|
| Flow rate required GPM water | 4 | 5 | 6 | 8 |
| Flow rate required GPM 15% propylene glycol | 5.2 | 6.5 | 7.8 | 10.4 |
| Flow rate required GPM 30% propylene glycol | 6.4 | 8.0 | 9.6 | 12.8 |

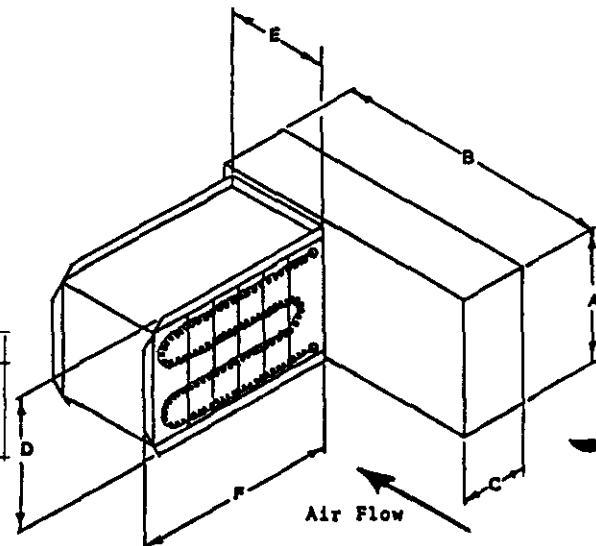

LEGEND

0
 EWT - Entering water temperature F. (or fluid temperature if applicable)
 GPM - Water flow rate--gallons per minute
 WPD - Water pressure drop--pounds/square inch
 EAT - Entering air temperature F (dry bulb/wet bulb)
 TC - Total cooling capacity Btu/Hr
 SC - Sensible cooling capacity Btu/Hr

THR - Total heat of rejection Btu/Hr
 EER - Energy efficiency ratio--total cooling ; total unit watts
 TE - Total heating capacity Btu/Hr
 THA - Total heat of absorption Btu/Hr
 COP - Coefficient of performance--total heating ; (total unit watts x 3.413)
 ESP - External static pressure (inches of water)

TABLE 7 CAPACITY AND EFFICIENCY APPLICATION RATINGS

| MPV30B @ 1000 CFM | | COOLING | | | | | | HEATING | | | |
|----------------------|-----|---------|-------|-------|-------|-------|------------------|---------|-------|-------|------------------|
| EWT | GPM | WPD | EAT | TC | SC | THR | EER ^① | EAT | TH | THA | COP ^① |
| 30 ^② | 4.0 | 3.0 | 75/62 | 33300 | 23800 | 38800 | 20.1 | 70 | 15800 | 9800 | 2.82 |
| | | | 80/67 | 35400 | 24600 | 41200 | 20.7 | | | | |
| | | | 85/72 | 38900 | 25900 | 45300 | 22.1 | | | | |
| 40 ^② | 4.0 | 3.0 | 75/62 | 31100 | 22900 | 36900 | 17.7 | 70 | 19600 | 13400 | 3.12 |
| | | | 80/67 | 33100 | 23700 | 39300 | 18.8 | | | | |
| | | | 85/72 | 36400 | 24900 | 43200 | 19.5 | | | | |
| 50 | 4.0 | 3.0 | 75/62 | 29100 | 22000 | 35300 | 15.6 | 70 | 23400 | 17000 | 3.43 |
| | | | 80/67 | 31000 | 22700 | 37600 | 16.1 | | | | |
| | | | 85/72 | 34100 | 23800 | 41400 | 17.2 | | | | |
| 60 | 4.0 | 3.0 | 75/62 | 27400 | 21100 | 33900 | 13.9 | 70 | 26800 | 19400 | 3.61 |
| | | | 80/67 | 29100 | 21800 | 36100 | 14.3 | | | | |
| | | | 85/72 | 32000 | 22800 | 39700 | 15.2 | | | | |
| 70 | 4.0 | 3.0 | 75/62 | 25800 | 20300 | 32800 | 12.3 | 70 | 30000 | 22300 | 3.91 |
| | | | 80/67 | 27400 | 20900 | 34900 | 12.7 | | | | |
| | | | 85/72 | 30100 | 21900 | 38700 | 13.5 | | | | |
| 80 | 4.0 | 3.0 | 75/62 | 24300 | 19500 | 31700 | 10.9 | 70 | 32900 | 25100 | 4.24 |
| | | | 80/67 | 25900 | 20100 | 33700 | 11.3 | | | | |
| | | | 85/72 | 28500 | 21000 | 37100 | 12.0 | | | | |
| 90 | 4.0 | 3.0 | 75/62 | 23100 | 18700 | 30900 | 9.7 | | | | |
| | | | 80/67 | 24000 | 19200 | 32900 | 10.1 | | | | |
| | | | 85/72 | 27100 | 20200 | 36200 | 10.8 | | | | |
| 100 | 4.0 | 3.0 | 75/62 | 22100 | 18000 | 30500 | 8.8 | | | | |
| | | | 80/67 | 23500 | 19200 | 32400 | 9.0 | | | | |
| | | | 85/72 | 25900 | 19400 | 35600 | 9.5 | | | | |
| 110 | 4.0 | 3.0 | 75/62 | 21200 | 17200 | 30100 | 7.9 | | | | |
| | | | 80/67 | 22600 | 17700 | 32000 | 8.2 | | | | |
| | | | 85/72 | 24900 | 18600 | 35200 | 8.8 | | | | |

① Unit only
 ② Requires anti-freeze solution

TABLE 8 CAPACITY AND EFFICIENCY APPLICATION RATINGS

| MPV36B @ 1200 CFM | | COOLING | | | | | | HEATING | | | |
|----------------------|-----|---------|-------|-------|-------|-------|------------------|---------|-------|-------|------------------|
| EWT | GPM | WPD | EAT | TC | SC | THR | EER ^① | EAT | TH | THA | COP ^① |
| 30 ^② | 5.0 | 2.0 | 75/62 | 43700 | 30600 | 49200 | 19.3 | 70 | 27300 | 14900 | 3.05 |
| | | | 80/67 | 47600 | 31600 | 55400 | 19.9 | | | | |
| | | | 85/72 | 51100 | 33100 | 72200 | 21.2 | | | | |
| 40 ^② | 5.0 | 2.0 | 75/62 | 41000 | 29300 | 48300 | 17.1 | 70 | 30500 | 20000 | 3.2 |
| | | | 80/67 | 44100 | 30200 | 52600 | 17.6 | | | | |
| | | | 85/72 | 48000 | 31700 | 63100 | 18.7 | | | | |
| 50 | 5.0 | 2.0 | 75/62 | 38500 | 28000 | 47100 | 15.1 | 70 | 33600 | 23600 | 3.37 |
| | | | 80/67 | 41000 | 28900 | 50100 | 15.6 | | | | |
| | | | 85/72 | 45100 | 30300 | 55600 | 16.6 | | | | |
| 60 | 5.0 | 2.0 | 75/62 | 36100 | 26800 | 45200 | 13.3 | 70 | 37800 | 28300 | 3.6 |
| | | | 80/67 | 38300 | 27600 | 47800 | 13.7 | | | | |
| | | | 85/72 | 42300 | 29000 | 49800 | 14.6 | | | | |
| 70 | 5.0 | 2.0 | 75/62 | 33800 | 25600 | 44300 | 11.7 | 70 | 42000 | 31439 | 3.79 |
| | | | 80/67 | 36000 | 26400 | 45700 | 12.1 | | | | |
| | | | 85/72 | 39600 | 27700 | 50700 | 12.9 | | | | |
| 80 | 5.0 | 2.0 | 75/62 | 31600 | 24500 | 42700 | 10.3 | 70 | 46500 | 33900 | 4.00 |
| | | | 80/67 | 34100 | 25200 | 43800 | 10.6 | | | | |
| | | | 85/72 | 37000 | 26500 | 43300 | 11.3 | | | | |
| 90 | 5.0 | 2.0 | 75/62 | 29600 | 23400 | 40800 | 9.2 | | | | |
| | | | 80/67 | 32600 | 24100 | 42200 | 9.4 | | | | |
| | | | 85/72 | 34600 | 25300 | 42500 | 10.1 | | | | |
| 100 | 5.0 | 2.0 | 75/62 | 27600 | 22400 | 38900 | 8.2 | | | | |
| | | | 80/67 | 31600 | 23100 | 40800 | 8.4 | | | | |
| | | | 85/72 | 32300 | 24200 | 43500 | 9.0 | | | | |
| 110 | 5.0 | 2.0 | 75/62 | 25800 | 21400 | 36700 | 7.5 | | | | |
| | | | 80/67 | 30900 | 22100 | 39600 | 7.6 | | | | |
| | | | 85/72 | 30100 | 23200 | 46100 | 8.2 | | | | |

① Unit only
 ② Requires anti-freeze solution

TABLE 9 CAPACITY AND EFFICIENCY APPLICATION RATINGS

| BWT | GPM | MPD | COOLING | | | | HEATING | | | | |
|-----|-----|-----|---------|-------|-------|-------|---------|-----|-------|-------|------|
| | | | EAT | TC | SC | THR | EER① | EAT | TH | THA | COP① |
| 30 | 6.0 | 2.0 | 75/62 | 57400 | 36300 | 67200 | 17.9 | 70 | 32000 | 20300 | 2.86 |
| | | | 80/67 | 61000 | 37800 | 71500 | 18.7 | | | | |
| | | | 85/72 | 67200 | 40000 | 78600 | 20.0 | | | | |
| 40 | 6.0 | 2.0 | 75/62 | 55000 | 35600 | 65800 | 16.1 | 70 | 38300 | 26000 | 3.06 |
| | | | 80/67 | 58500 | 36800 | 70000 | 16.7 | | | | |
| | | | 85/72 | 64400 | 38600 | 77000 | 17.9 | | | | |
| 50 | 6.0 | 2.0 | 75/62 | 52600 | 34700 | 64400 | 14.5 | 70 | 44500 | 31600 | 3.26 |
| | | | 80/67 | 56000 | 35800 | 68500 | 15.0 | | | | |
| | | | 85/72 | 61600 | 37600 | 75400 | 16.0 | | | | |
| 60 | 6.0 | 2.0 | 75/62 | 50200 | 33800 | 63000 | 12.9 | 70 | 50800 | 37300 | 3.45 |
| | | | 80/67 | 53500 | 34900 | 67000 | 13.3 | | | | |
| | | | 85/72 | 58800 | 36600 | 73800 | 14.2 | | | | |
| 70 | 6.0 | 2.0 | 75/62 | 47900 | 33300 | 61700 | 11.6 | 70 | 57000 | 42900 | 3.65 |
| | | | 80/67 | 51000 | 34000 | 65600 | 11.9 | | | | |
| | | | 85/72 | 56100 | 35700 | 72200 | 12.7 | | | | |
| 80 | 6.0 | 2.0 | 75/62 | 45585 | 32000 | 60400 | 10.3 | 70 | 63300 | 48600 | 3.84 |
| | | | 80/67 | 48500 | 33200 | 64200 | 10.5 | | | | |
| | | | 85/72 | 53400 | 34800 | 70700 | 11.3 | | | | |
| 90 | 6.0 | 2.0 | 75/62 | 43300 | 31500 | 59100 | 9.2 | | | | |
| | | | 80/67 | 46100 | 32400 | 62800 | 9.4 | | | | |
| | | | 85/72 | 50700 | 34100 | 69100 | 10.1 | | | | |
| 100 | 6.0 | 2.0 | 75/62 | 41000 | 30800 | 57800 | 8.2 | | | | |
| | | | 80/67 | 43600 | 31700 | 61500 | 8.4 | | | | |
| | | | 85/72 | 48000 | 33300 | 67600 | 9.2 | | | | |
| 110 | 6.0 | 2.0 | 75/62 | 38800 | 30200 | 56600 | 7.4 | | | | |
| | | | 80/67 | 41200 | 31100 | 60100 | 7.6 | | | | |
| | | | 85/72 | 45300 | 32700 | 66200 | 8.4 | | | | |

① Unit only

② Requires anti-freeze solution

CAPACITY MULTIPLIER FACTORS

| | | |
|---------------------|-------|-----------|
| % of Rated Air Flow | -10 | Rated +10 |
| Total Btuh | 0.975 | 1.0 |
| Sensible Btuh | .95 | 1.0 |

CORRECTION FACTORS FOR PERFORMANCE AT OTHER WATER FLOWS

| Rated Flow BTUH WATTS | COOLING | |
|-----------------------|---------|------------|
| | HEATING | BTUH WATTS |
| P plus--GPM | | |
| 2 | 1.00 | 98 |
| 4 | 1.01 | 97 |
| 6 | 1.02 | 96 |
| 8 | 1.02 | 95 |

TABLE 10 CAPACITY AND EFFICIENCY APPLICATION RATINGS

| BWT | GPM | MPD | COOLING | | | | HEATING | | | | |
|-----|-----|-----|---------|-------|-------|-------|---------|-----|-------|-------|------|
| | | | EAT | TC | SC | THR | EER① | EAT | TH | THA | COP① |
| 30 | 8.0 | 4.0 | 75/62 | 64900 | 44000 | 79600 | 15.9 | 70 | 37000 | 23600 | 2.70 |
| | | | 80/67 | 69000 | 45400 | 84600 | 16.5 | | | | |
| | | | 85/72 | 75900 | 47800 | 93100 | 17.7 | | | | |
| 40 | 8.0 | 4.0 | 75/62 | 62550 | 42900 | 77000 | 14.7 | 70 | 44500 | 30000 | 2.85 |
| | | | 80/67 | 66500 | 44200 | 82600 | 15.3 | | | | |
| | | | 85/72 | 73200 | 46500 | 90900 | 16.4 | | | | |
| 50 | 8.0 | 4.0 | 75/62 | 60200 | 41700 | 75800 | 13.7 | 70 | 52000 | 36300 | 3.03 |
| | | | 80/67 | 64000 | 43000 | 80600 | 14.1 | | | | |
| | | | 85/72 | 70400 | 45200 | 88700 | 15.1 | | | | |
| 60 | 8.0 | 4.0 | 75/62 | 57850 | 40600 | 73900 | 12.3 | 70 | 59500 | 42600 | 3.15 |
| | | | 80/67 | 61500 | 41800 | 78600 | 12.7 | | | | |
| | | | 85/72 | 67700 | 43900 | 86500 | 13.6 | | | | |
| 70 | 8.0 | 4.0 | 75/62 | 55500 | 39400 | 72000 | 10.9 | 70 | 67000 | 49000 | 3.29 |
| | | | 80/67 | 59000 | 40600 | 76600 | 11.2 | | | | |
| | | | 85/72 | 64900 | 42600 | 84300 | 12.0 | | | | |
| 80 | 8.0 | 4.0 | 75/62 | 53200 | 38300 | 70100 | 9.8 | 70 | 74500 | 55400 | 3.43 |
| | | | 80/67 | 56500 | 39400 | 74600 | 9.9 | | | | |
| | | | 85/72 | 62200 | 41300 | 82100 | 10.7 | | | | |
| 90 | 8.0 | 4.0 | 75/62 | 50800 | 37100 | 68200 | 8.6 | | | | |
| | | | 80/67 | 54000 | 38200 | 72600 | 8.8 | | | | |
| | | | 85/72 | 60000 | 40000 | 79700 | 9.4 | | | | |
| 100 | 8.0 | 4.0 | 75/62 | 48450 | 36000 | 66300 | 7.5 | | | | |
| | | | 80/67 | 51500 | 37000 | 70600 | 7.6 | | | | |
| | | | 85/72 | 56700 | 38700 | 77700 | 8.1 | | | | |
| 110 | 8.0 | 4.0 | 75/62 | 46100 | 34800 | 64400 | 6.3 | | | | |
| | | | 80/67 | 49000 | 35800 | 68600 | 6.4 | | | | |
| | | | 85/72 | 53900 | 37400 | 75500 | 6.8 | | | | |

ARI CERTIFIED PERFORMANCE RATINGS

| Model | CFM/ESP | GPM | COOLING* | | | | HEATING* | | | |
|--------|-----------|-----|----------|------|--------|------|----------|-----|--------|-----|
| | | | BTU/HR | REER | BTU/HR | REER | BTU/HR | COP | BTU/HR | COP |
| MPV30B | 1000/ .50 | 4 | 27400 | 11.0 | 31000 | 13.8 | 30000 | 3.4 | 23400 | 3.0 |
| MPV36B | 1200/ .26 | 5 | 36000 | 10.8 | 41000 | 13.7 | 42000 | 3.4 | 33600 | 3.0 |
| MPV53B | 1550/ .40 | 6 | 51000 | 10.8 | 56000 | 13.4 | 57000 | 3.3 | 44500 | 3.0 |
| MPV62B | 1700/ .28 | 8 | 59000 | 10.0 | 64000 | 12.5 | 67000 | 3.0 | 52000 | 2.7 |

① For 208V operation, deduct 600 Btu. ② For 208V operation, deduct 1,000 Btu.

*Rated in accordance with ARI standard 325, "Standard for Ground

Water Source Heat Pumps", which includes Watt allowance for water pumping.

Cooling capacity based on 80 degree F. DB 67 degree WB entering air temperature.

Heating capacity based on 70 degree DB entering air temperature.

COOLING

TABLE 11
Water Temperature Entering Water Coil ° F

| Model | Return Air Temperature | Pressure | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 | 105 | 110 |
|---|-------------------------|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| MPV30B Rated Flow Rate GPM 4.0 Rated CFM 1000 | 75 deg. DB Low Side | Low Side | 70 | 70 | 71 | 71 | 71 | 71 | 72 | 72 | 72 | 72 | 73 | 73 | 73 | 73 | 74 | 74 | 74 |
| | 62 deg. WB High Side | High Side | 100 | 111 | 123 | 134 | 145 | 156 | 168 | 179 | 190 | 201 | 213 | 225 | 235 | 246 | 258 | 269 | 280 |
| | 80 deg. DB Low Side | Low Side | 75 | 75 | 76 | 76 | 76 | 76 | 77 | 77 | 77 | 77 | 78 | 78 | 78 | 78 | 79 | 79 | 79 |
| | 67 deg. WB High Side | High Side | 103 | 115 | 126 | 138 | 149 | 161 | 172 | 184 | 195 | 207 | 218 | 230 | 241 | 253 | 264 | 276 | 287 |
| MPV36B Rated Flow Rate GPM 5.0 Rated CFM 1200 | 85 deg. DB Low Side | Low Side | 81 | 81 | 82 | 82 | 82 | 82 | 83 | 83 | 83 | 83 | 84 | 84 | 84 | 84 | 85 | 85 | 85 |
| | 72 deg. WB High Side | High Side | 106 | 118 | 130 | 142 | 154 | 166 | 178 | 190 | 202 | 214 | 226 | 238 | 250 | 262 | 274 | 286 | 298 |
| | 75 deg. DB Low Side | Low Side | 59 | 60 | 61 | 61 | 62 | 63 | 64 | 64 | 65 | 66 | 67 | 67 | 68 | 69 | 70 | 70 | 71 |
| | 62 deg. WB High Side | High Side | 103 | 113 | 124 | 140 | 146 | 157 | 168 | 179 | 190 | 201 | 212 | 223 | 234 | 245 | 256 | 267 | 278 |
| MPV53B Rated Flow Rate GPM 6.0 Rated CFM 1550 | 80 deg. DB Low Side | Low Side | 63 | 64 | 65 | 65 | 66 | 67 | 68 | 68 | 69 | 70 | 71 | 71 | 72 | 73 | 74 | 74 | 75 |
| | 67 deg. WB High Side | High Side | 105 | 116 | 120 | 139 | 150 | 161 | 173 | 184 | 195 | 206 | 218 | 229 | 240 | 251 | 263 | 263 | 285 |
| | 85 deg. DB Low Side | Low Side | 68 | 69 | 70 | 70 | 71 | 72 | 73 | 73 | 74 | 75 | 76 | 76 | 77 | 78 | 79 | 79 | 80 |
| | 72 deg. WB High Side | High Side | 108 | 122 | 132 | 141 | 155 | 167 | 179 | 190 | 202 | 214 | 226 | 237 | 249 | 261 | 273 | 284 | 296 |
| MPV53B Rated Flow Rate GPM 6.0 Rated CFM 1550 | 75 deg. DB Low Side | Low Side | 61 | 62 | 63 | 65 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 72 | 74 | 75 | 76 | 77 |
| | 62 deg. WB High Side | High Side | 107 | 119 | 132 | 141 | 156 | 168 | 193 | 205 | 205 | 217 | 230 | 242 | 254 | 266 | 279 | 291 | 303 |
| | 80 deg. DB Low Side | Low Side | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 |
| | 67 deg. WB High Side | High Side | 110 | 123 | 135 | 148 | 160 | 173 | 185 | 198 | 210 | 223 | 235 | 248 | 260 | 273 | 285 | 298 | 310 |
| MPV62B Rated Flow Rate GPM 8.0 Rated CFM 1700 | 85 deg. DB Low Side | Low Side | 70 | 71 | 73 | 74 | 75 | 76 | 78 | 79 | 80 | 81 | 83 | 84 | 85 | 86 | 88 | 89 | 90 |
| | 72 deg. WB High Side | High Side | 115 | 128 | 141 | 166 | 166 | 179 | 192 | 204 | 217 | 230 | 243 | 255 | 268 | 281 | 294 | 306 | 319 |
| | 75 deg. DB Low Side | Low Side | 61 | 62 | 62 | 63 | 63 | 64 | 64 | 65 | 65 | 66 | 66 | 67 | 67 | 68 | 68 | 69 | 69 |
| | 62 deg. WB High Side | High Side | 109 | 120 | 131 | 141 | 152 | 163 | 174 | 184 | 195 | 206 | 217 | 227 | 238 | 249 | 260 | 270 | 281 |
| MPV62B Rated Flow Rate GPM 8.0 Rated CFM 1700 | 80 deg. DB Low Side | Low Side | 65 | 66 | 66 | 67 | 67 | 68 | 68 | 69 | 69 | 70 | 70 | 71 | 71 | 72 | 72 | 73 | 73 |
| | 67 deg. WB High Side | High Side | 112 | 123 | 134 | 145 | 156 | 167 | 178 | 189 | 200 | 211 | 222 | 233 | 244 | 255 | 266 | 277 | 288 |
| | 85 deg. DB Low Side | Low Side | 70 | 71 | 71 | 71 | 72 | 73 | 73 | 74 | 74 | 75 | 75 | 76 | 76 | 77 | 77 | 78 | 78 |
| | 72 deg. WB High Side | High Side | 115 | 127 | 138 | 150 | 161 | 173 | 184 | 196 | 207 | 219 | 230 | 242 | 253 | 265 | 276 | 288 | 299 |

HEATING

TABLE 12
Water Temperature Entering Water Coil F

| Model | Return Air Temperature | Pressure | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 |
|---|------------------------|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | | | ° | ° | ° | ° | ° | ° | ° | ° | ° | ° | ° |
| MPV30B Rated Flow Rated GPM 4.0 Rated CFM 1000 | 70 degree | Low Side | 30 | 35 | 41 | 46 | 51 | 56 | 62 | 67 | 72 | 77 | 83 |
| | | High Side | 166 | 173 | 180 | 186 | 193 | 200 | 207 | 213 | 220 | 227 | 234 |
| | | | | | | | | | | | | | |
| MPV36B Rated Flow Rate GPM 5.0 Rated CFM 1200 | 70 degree | Low Side | 33 | 38 | 43 | 47 | 52 | 57 | 62 | 66 | 71 | 76 | 81 |
| | | High Side | 191 | 198 | 206 | 213 | 220 | 227 | 235 | 242 | 249 | 256 | 264 |
| | | | | | | | | | | | | | |
| MPV53B Rated Flow Rate GPM 6.0 Rated CFM 1550 | 70 degree | Low Side | 30 | 35 | 40 | 44 | 49 | 54 | 59 | 63 | 68 | 73 | 78 |
| | | High Side | 181 | 190 | 199 | 207 | 216 | 225 | 234 | 242 | 251 | 260 | 269 |
| | | | | | | | | | | | | | |
| MPV62B Rated Flow Rate GPM 8.0 Rated CFM 1700 | 70 degree | Low Side | 27 | 32 | 37 | 42 | 47 | 52 | 57 | 62 | 67 | 72 | 77 |
| | | High Side | 158 | 173 | 188 | 203 | 218 | 233 | 248 | 263 | 278 | 293 | 308 |
| | | | | | | | | | | | | | |

Low side pressure \pm 2 PSIG
High side pressure \pm 5 PSIG


Tables are based upon rated CFM (airflow) across the evaporator coil and rated water flow rate through the water coil. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate specifications.

| | MPV30B | MPV36B | MPV53B | MPV62B |
|---|--------|--------|--------|--------|
| Flow rate required GPM water | 4 | 5 | 6 | 8 |
| Flow rate required GPM 15% propylene glycol | 5.2 | 6.5 | 7.8 | 10.4 |
| Flow rate required GPM 30% propylene glycol | 6.4 | 8.0 | 9.6 | 12.8 |

REFER TO CONTROL CIRCUIT WIRING ON CONTROL PANEL COVER AND INSTALLATION INSTRUCTIONS FOR HOOK-UP OF OPTIONAL DUCT HEATER

SOLENOID VALVE
PART # 8603-006
(MAX. 5VA.)

SET HEAT ANTICIPATOR AT
.45A FOR EITHER TYPE OF
WALL THERMOSTAT

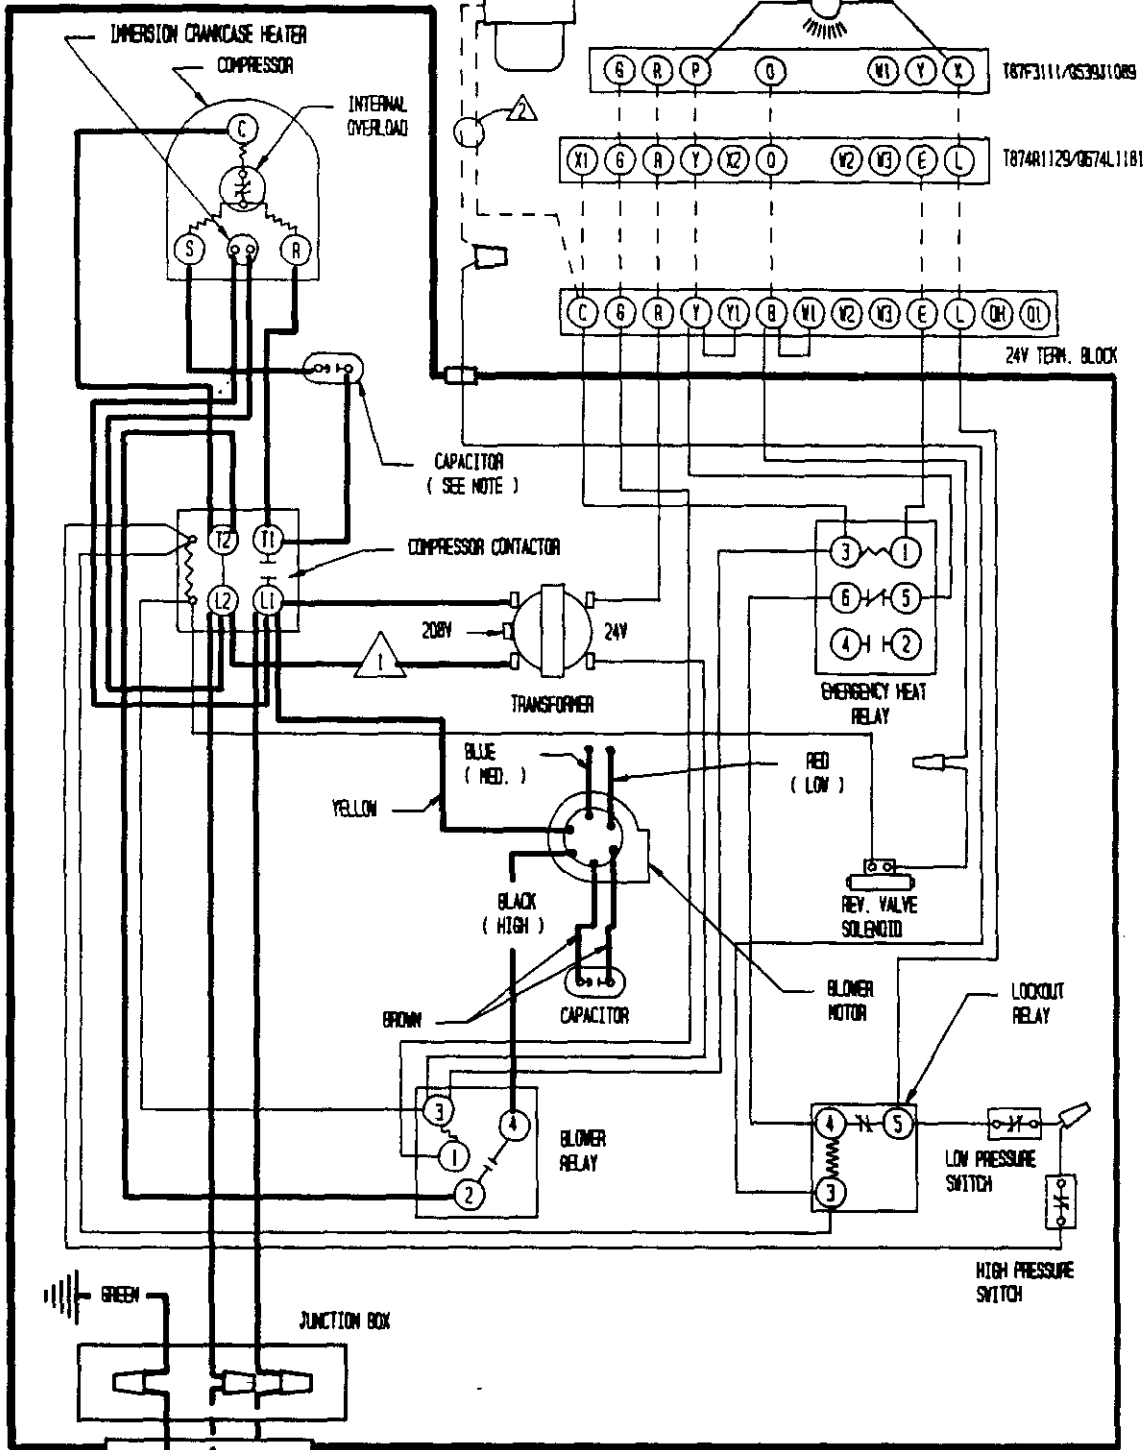

- ⚠ FOR 208V OPERATION MOVE THIS WIRE TO 208V TRANSFORMER TAP
- ⚠ USE WIRING RATED FOR USE IN NEC CLASS 1 SYSTEM

| CAPACITOR RATINGS | | |
|-------------------|------------|--------|
| MODEL | COMPRESSOR | BLOWER |
| WPV30B | 30/370 | 5/370 |
| WPV36B | 40/370 | |

230/208 - 60 - 1

USE COPPER
CONDUCTORS ONLY




REFER TO CONTROL CIRCUIT WIRING ON CONTROL PANEL COVER AND INSTALLATION INSTRUCTIONS FOR WIRING OF OPTIONAL DUCT HEATER

SOLENOID VALVE
PART # 8613-005
(MAX. 6VA.)

CHECK LIGHT

SET HEAT ANTICIPATOR AT
.45A FOR EITHER TYPE OF
VALVE THERMOSTAT

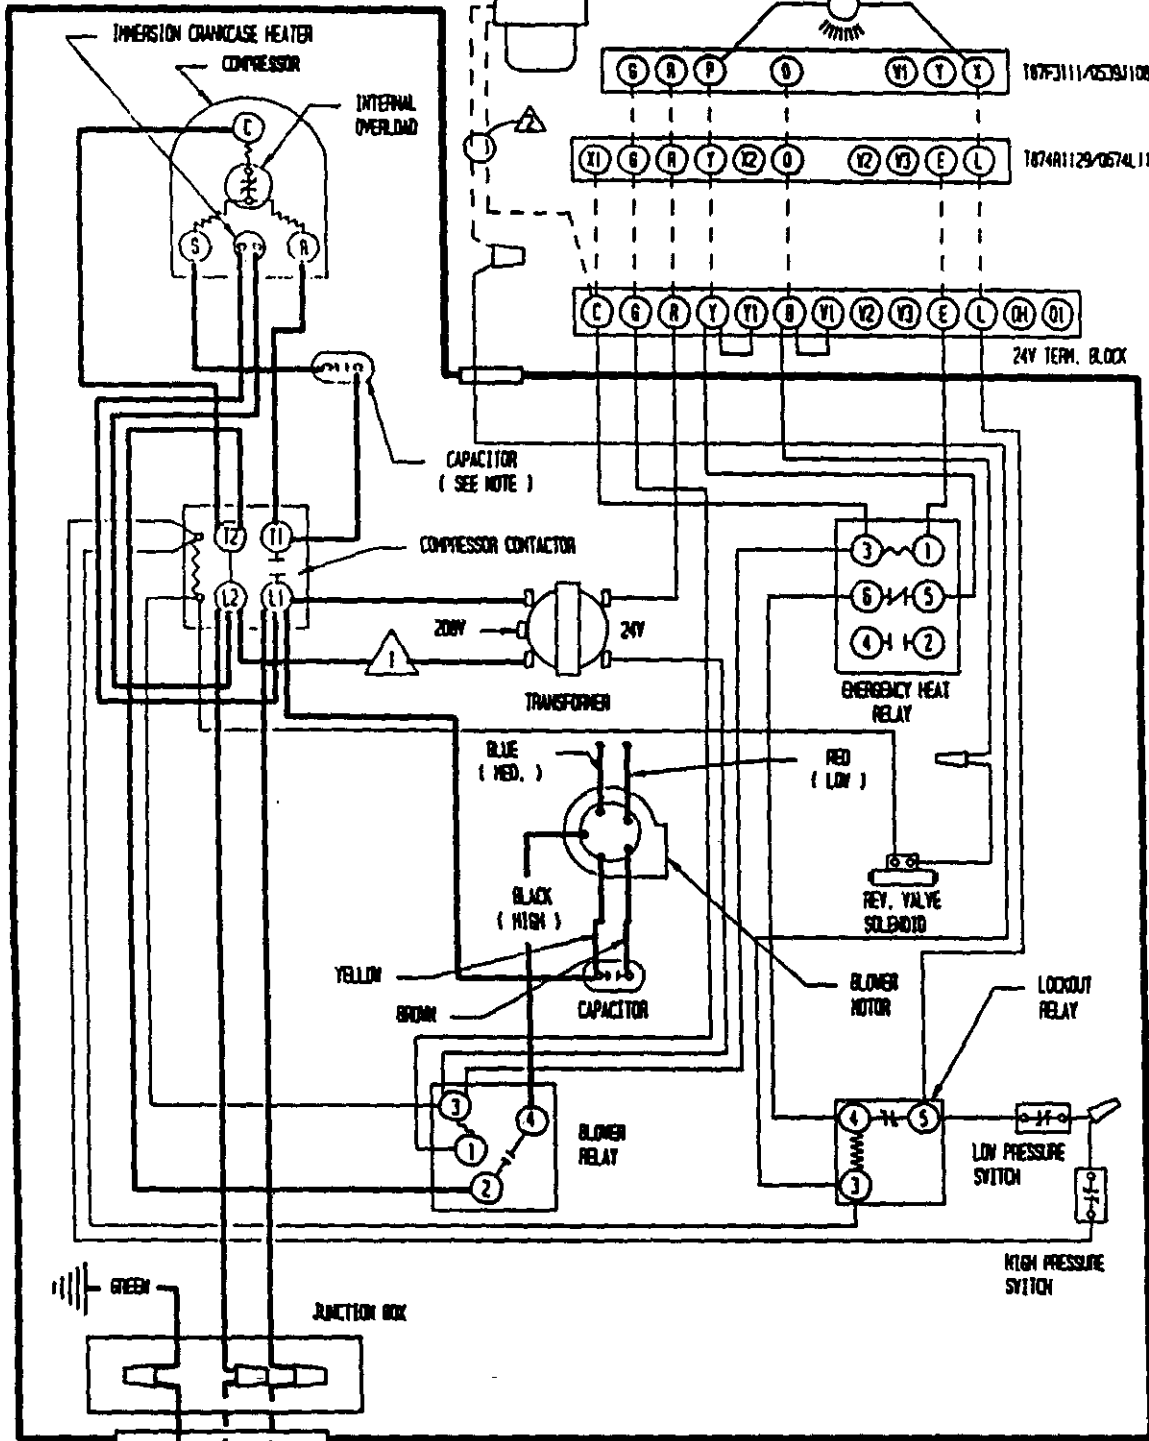



- ⚠ FOR 200V OPERATION MOVE THIS WIRE TO 200V TRANSFORMER TAP
- ⚠ USE WIRING RATED FOR USE IN NEC CLASS I SYSTEM

230/200 - 60 - 1


| CAPACITOR RATINGS | | |
|-------------------|------------|---------|
| MODEL | COMPRESSOR | BLOWER |
| WPV53B | 40/440 | 7.5/370 |
| WPV62B | 45/440 | 7.5/370 |

USE COPPER
CONDUCTORS ONLY




| | FACTORY WIRING | FIELD WIRING |
|--------------|-------------------|-----------------|
| Low Voltage | --- | --- |
| High Voltage | --- | --- |

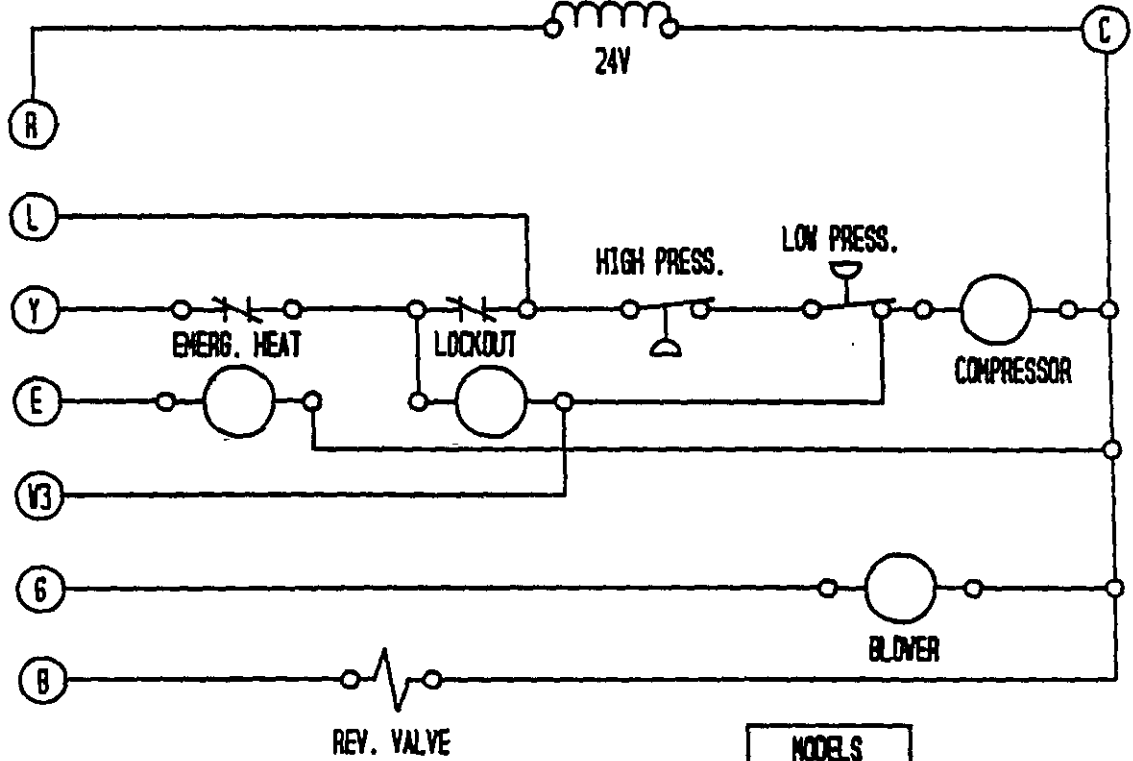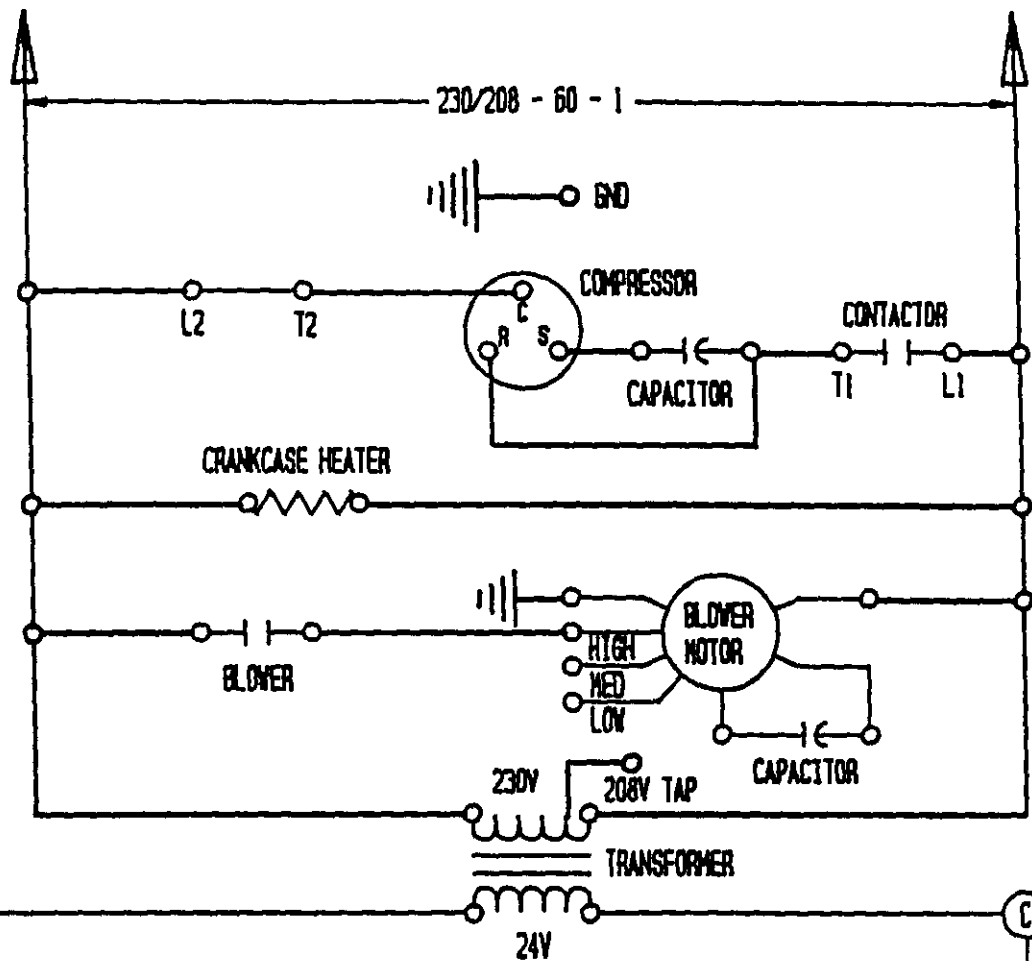

| |
|---------|
| MODEL S |
| VPV308 |
| VPV368 |

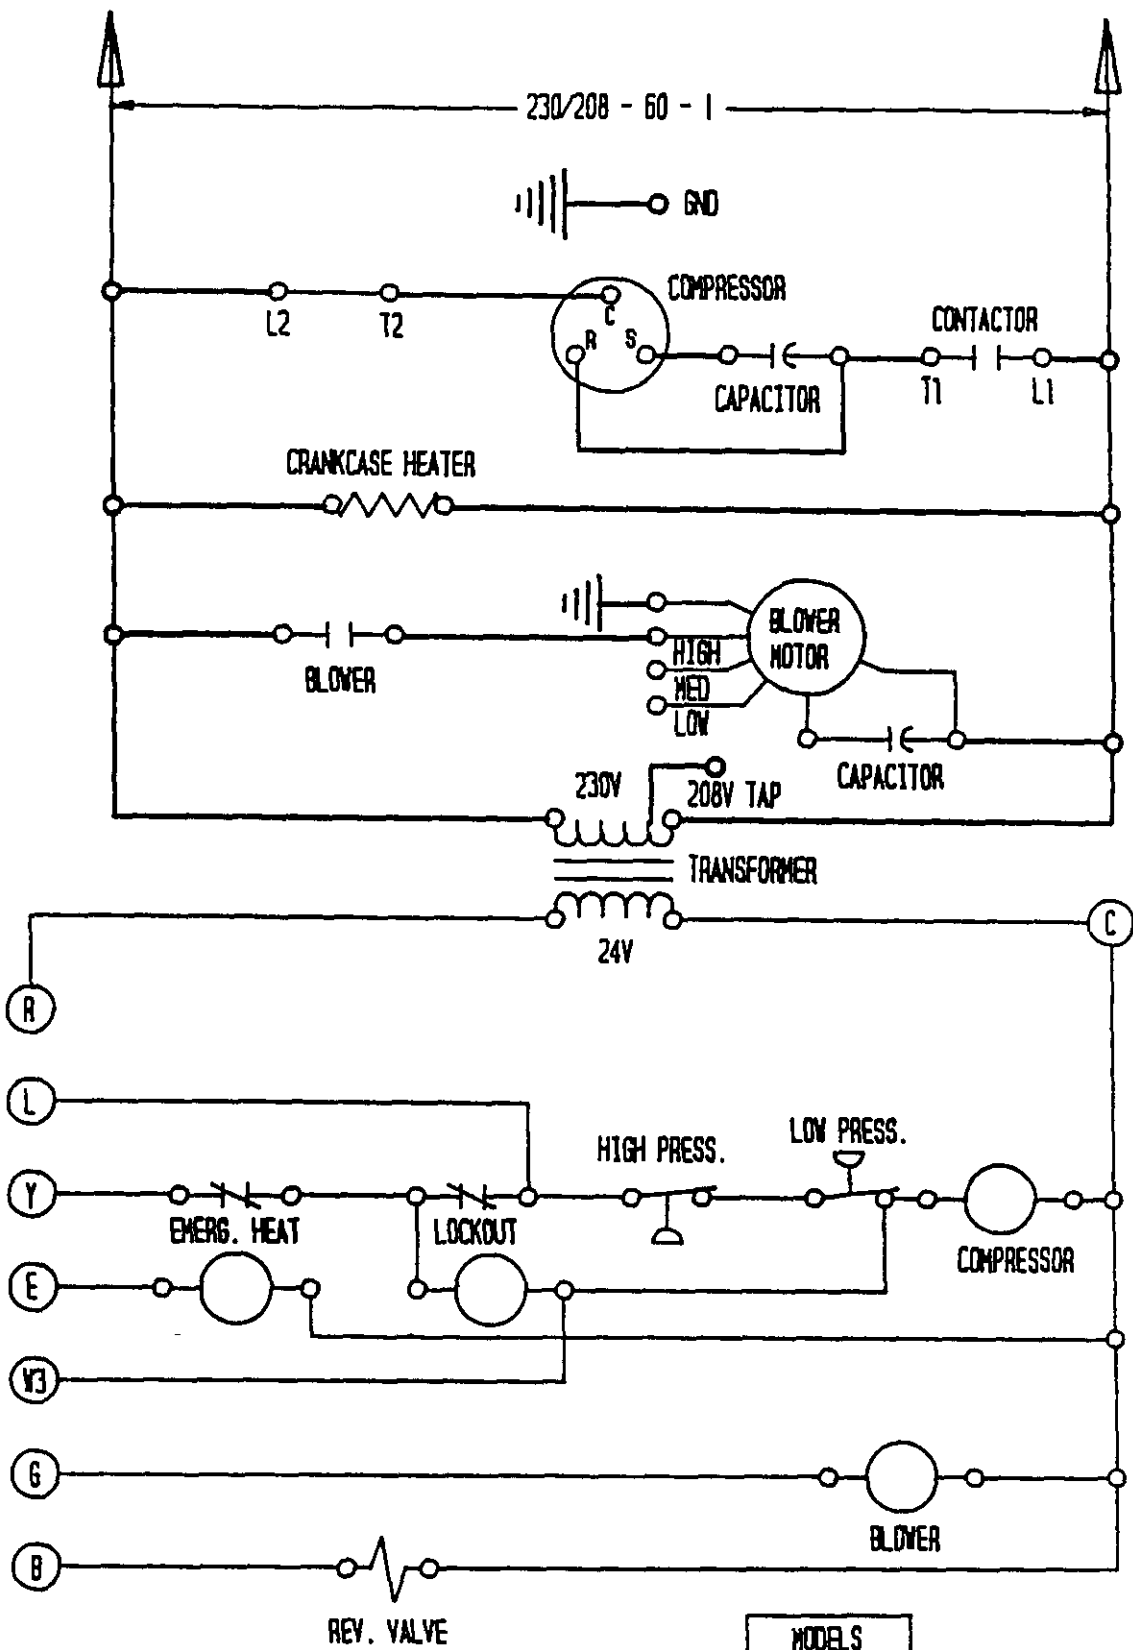

| |
|--------|
| MODELS |
| WPV53B |
| WPV62B |

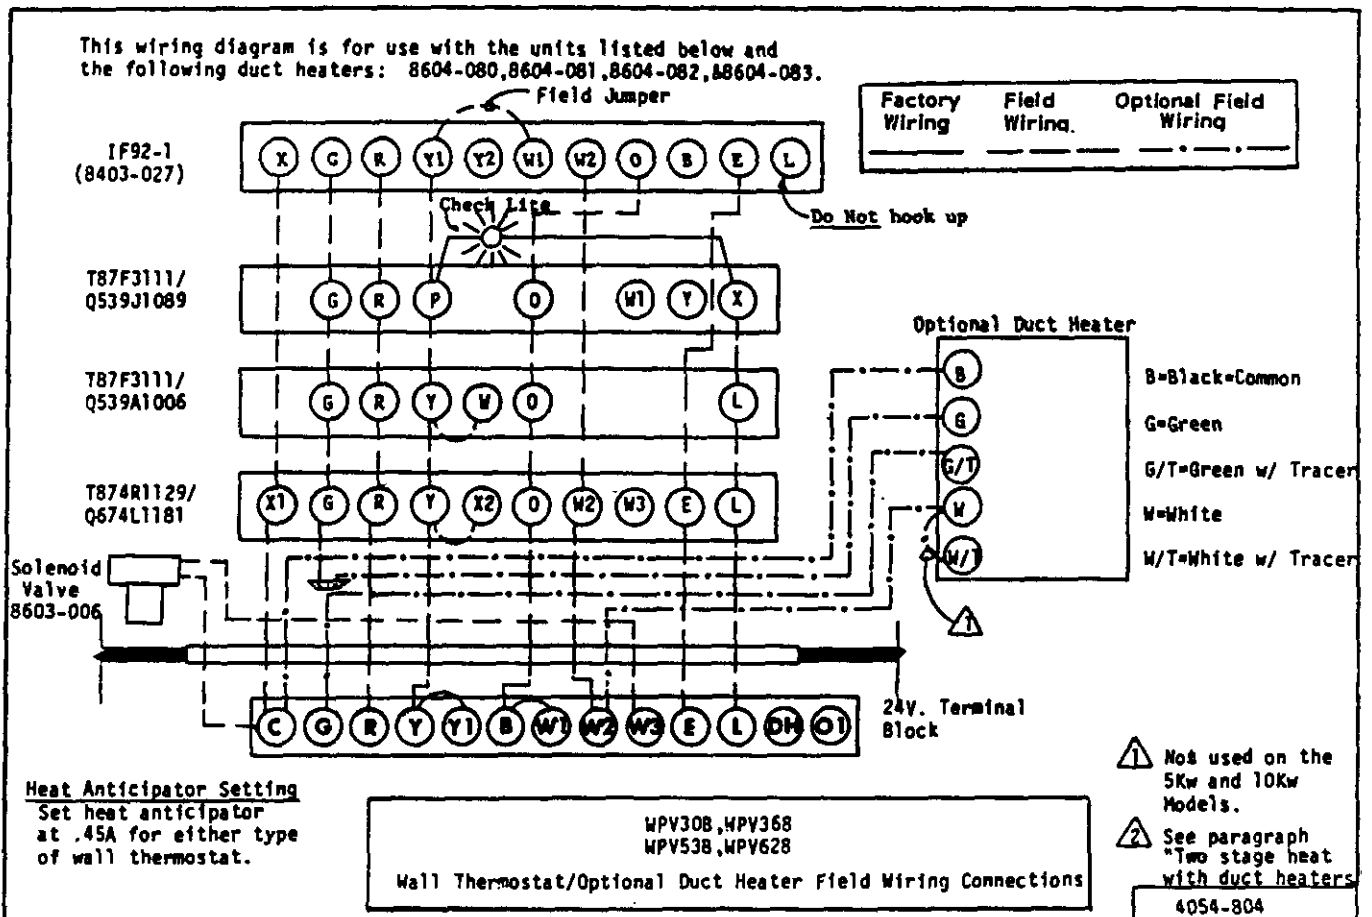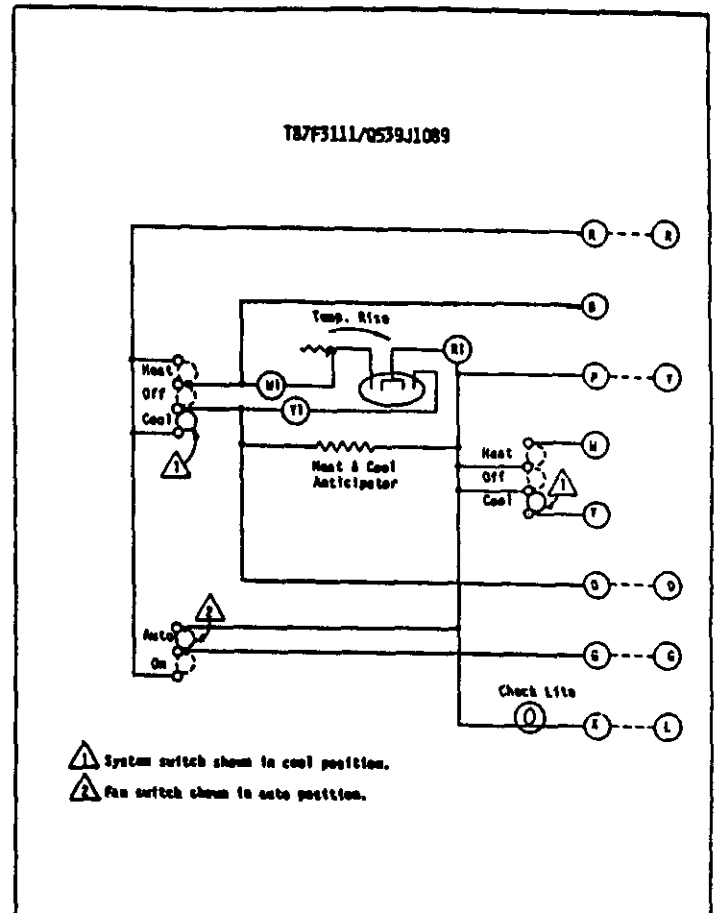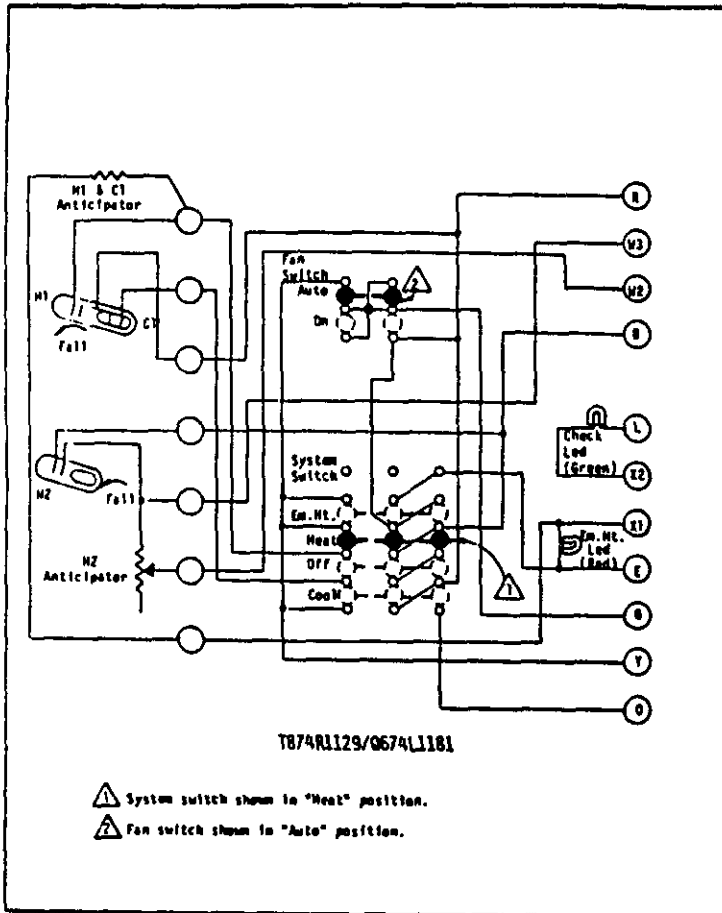

**PERFORMANCE CHECK
WATER SOURCE HEAT PUMPS**

| |
|---|
| Installer Please Fill Out and Retain With Unit |
|---|

DATE OF INSTALLATION _____ MODEL NO(S). _____ SERIAL NO(S). _____

| ITEM | COOLING | HEATING | JOB NUMBER |
|--|---------|---------|-------------------|
| 1. HEAD PRESSURE | | | NAME OF INSTALLER |
| 2. SUCTION PRESSURE | | | NAME OF OWNER |
| 3. WATER TEMP. (IN) | | | ADDRESS |
| 4. WATER TEMP. (OUT) | | | CITY STATE |
| 5. WATER PRESSURE (IN) | | | FIELD COMMENTS: |
| 6. WATER PRESSURE (OUT) | | | |
| 7. WATER FLOW (GPM) | | | |
| 8. AMPERES (BLOWER) | | | |
| 9. AMPERES (COMPRESSOR) | | | |
| 10. LINE VOLTAGE (COMPRESSOR RUNNING) | | | |
| 11. AIR TEMP. (IN) D.B. W.B. | | | |
| 12. AIR TEMP. (OUT) D.B. W.B. | | | |

This PERFORMANCE CHECK SHEET should be filled out by
installer and retained with unit.